



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	3
2.1 Safety regulations for working on fuel supply	3
2.2 Safety precautions when using testers and measuring instruments during a road test	3
2.3 Safety measures when working on vehicles with a start/stop system	4
2.4 Safety precautions when working on the cooling system	4
2.5 Safety precautions when working on the SCR system	4
2.6 Safety precautions when working on exhaust system	5
3 Repair instructions	7
3.1 Rules for cleanliness	7
3.2 Foreign objects in engine	8
3.3 Checking vacuum system	8
10 - Removing and installing engine	9
1 Removing and installing motor	9
1.1 Removing motor	9
1.2 Separating engine and gearbox	33
1.3 Securing engine on engine and gearbox support	38
1.4 Installing engine	40
2 Assembly mountings	44
2.1 Assembly overview - assembly mountings	44
2.2 Supporting engine in installation position	46
2.3 Adjusting assembly mountings	62
3 Engine cover panel	72
3.1 Removing and installing engine cover	72
13 - Crankshaft group	74
1 Cylinder block (pulley end)	74
1.1 Assembly overview - poly V-belt drive	74
1.2 Removing and installing poly-V belt	78
1.3 Removing and installing tensioner for poly V-belt	83
1.4 Removing and installing bracket for ancillaries	84
1.5 Removing and installing engine bracket	86
1.6 Assembly overview - cylinder block (pulley end)	102
1.7 Renewing crankshaft oil seal - belt pulley end	105
1.8 Removing and installing sealing flange on pulley end	108
2 Cylinder block, gearbox end	113
2.1 Assembly overview - cylinder block, gearbox end	113
2.2 Removing and installing flywheel	114
2.3 Removing and installing sealing flange on gearbox side	116
3 Crankshaft	127
3.1 Assembly overview - crankshaft	127
3.2 Renewing needle bearing in crankshaft	128
3.3 Crankshaft dimensions	130
4 Pistons and conrods	131
4.1 Assembly overview - pistons and conrods	131
4.2 Separating new conrod	136
4.3 Measuring piston projection at TDC	137
4.4 Checking radial clearance of conrods	139



15 - Cylinder head, valve gear	140
1 Cylinder head	140
1.1 Assembly overview - cylinder head	140
1.2 Removing and installing cylinder head	144
1.3 Removing and installing cylinder head cover	155
1.4 Assembly overview - cylinder head cover	159
1.5 Removing and installing vacuum pump	161
1.6 Checking compression	162
2 Toothed belt drive	164
2.1 Assembly overview - toothed belt	164
2.2 Removing and installing toothed belt	166
3 Valve gear	188
3.1 Assembly overview - valve gear	188
3.2 Measuring axial play of camshaft	190
3.3 Measuring radial play of camshaft	191
3.4 Removing and installing camshaft	192
3.5 Removing and installing camshaft oil seal	201
3.6 Checking hydraulic compensation elements	206
3.7 Removing and installing valve stem seals	207
4 Inlet and exhaust valves	216
4.1 Valve dimensions	216
4.2 Reworking valve seats	216
4.3 Checking valve guides	216
4.4 Checking valves	218
17 - Lubrication	219
1 Sump, oil pump	219
1.1 Assembly overview - sump/oil pump	219
1.2 Removing and installing sump	225
1.3 Removing and installing oil pump	230
1.4 Removing and installing oil level and oil temperature sender	233
1.5 Engine oil:	234
2 Engine oil cooler	235
2.1 Assembly overview - engine oil cooler	235
2.2 Removing and installing engine oil cooler	236
3 Oil filter, oil pressure switch	240
3.1 Assembly overview - oil filter housing, oil pressure switch	240
3.2 Removing and installing oil pressure switch	241
3.3 Checking oil pressure	242
3.4 Checking oil pressure and oil pressure switch	243
3.5 Removing and installing oil filter housing	244
4 Balancer shaft module	249
4.1 Assembly overview - balancer shaft module	249
4.2 Removing and installing balance shaft module	252
19 - Cooling	262
1 Cooling system/coolant	262
1.1 Coolant hose connection diagram	262
1.2 Draining and adding coolant	263
1.3 Checking cooling system for leaks	269
2 Coolant pump, regulation of cooling system	274
2.1 Assembly overview - coolant pump, thermostat	274
2.2 Removing and installing coolant pump	274
2.3 Removing and installing 4/2-way valve with thermostat	276



2.4	Removing and installing coolant temperature sender	282
3	Coolant pipes	286
3.1	Assembly overview - coolant pipes	286
3.2	Removing and installing coolant pipes	288
4	Radiator, radiator fan	300
4.1	Assembly overview - radiator/radiator fan	300
4.2	Removing and installing radiator	300
4.3	Removing and installing radiator cowl with radiator fan	302
21	Turbocharging/supercharging	304
1	Turbocharger	304
1.1	Assembly overview - turbocharger	304
1.2	Removing and installing turbocharger	306
1.3	Renewing vacuum unit for turbocharger	311
2	Charge air system	318
2.1	Assembly overview - charge air system	318
2.2	Assembly overview - charge-air hose connections	319
2.3	Removing and installing charge air cooler	320
2.4	Removing and installing charge pressure sender	322
2.5	Checking charge air system for leaks	322
23	Mixture preparation - injection	326
1	Injection system	326
1.1	Schematic overview - fuel system	326
1.2	Filling/bleeding fuel system	328
1.3	Checking fuel system for leaks	329
2	Vacuum system	330
2.1	Assembly overview - vacuum system	330
2.2	Checking vacuum system	330
3	Injectors/high-pressure accumulator (rail)	335
3.1	Assembly overview - injectors	335
3.2	Adapting correction values for injectors	338
3.3	Testing jammed-open injectors	339
3.4	Checking return flow rate of injectors with engine running	341
3.5	Checking return flow rate of injectors at starter speed	344
3.6	Removing and installing injectors	346
3.7	Removing and installing high-pressure lines	350
3.8	Removing and installing fuel rail	352
4	Intake manifold	356
4.1	Assembly overview - intake manifold	356
4.2	Removing and installing intake manifold	357
4.3	Removing and installing throttle valve module	361
5	Air filter	364
5.1	Assembly overview - air filter housing	364
5.2	Removing and installing air filter housing	366
6	Senders and sensors	368
6.1	Checking fuel pressure regulating valve	368
6.2	Removing and installing fuel pressure regulating valve	369
6.3	Removing and installing fuel pressure sender	371
6.4	Removing and installing fuel temperature sender G81	374
6.5	Removing and installing differential pressure sensor	375
6.6	Removing and installing air mass meter	377
7	High-pressure pump	378
7.1	Assembly overview - high-pressure pump	378



7.2	Removing and installing high-pressure pump	380
8	Lambda probe	385
8.1	Removing and installing Lambda probe	385
9	Engine control unit	387
9.1	Removing and installing engine control unit	387
9.2	Removing and installing engine control unit with protective housing	397
26	- Exhaust system	414
1	Exhaust pipes and silencers	414
1.1	Assembly overview - silencers	414
1.2	Aligning exhaust system free of stress	423
1.3	Installation position of clamp	424
2	Emission control	426
2.1	Assembly overview - emission control	426
2.2	Removing and installing particulate filter	430
2.3	Removing and installing catalytic converter	439
3	SCR system (selective catalytic reduction)	445
3.1	Assembly overview - tank for reducing agent	445
3.2	Draining reducing agent tank	446
3.3	Removing and installing reducing agent tank	450
3.4	Assembly overview - reducing agent supply line	453
3.5	Removing and installing reducing agent supply line	454
3.6	Removing and installing injector for reducing agent	457
3.7	Assembly overview - delivery module for reducing agent	458
3.8	Removing and installing heater element (heater cup)	460
4	Exhaust gas temperature regulation	465
4.1	Assembly overview - exhaust gas temperature regulation	465
4.2	Removing and installing exhaust gas temperature sender	467
5	Exhaust gas recirculation	473
5.1	Assembly overview - exhaust gas recirculation	473
5.2	Removing and installing exhaust gas recirculation cooler	475
5.3	Checking changeover for exhaust gas recirculation cooler	478
5.4	Checking exhaust gas recirculation cooler for leaks	479
5.5	Cleaning exhaust gas recirculation system	484
28	- Glow plug system	492
1	Glow plug system	492
1.1	Removing and installing glow plug	492
1.2	Removing and installing automatic glow period control unit	494
1.3	Removing and installing Hall sender	495
1.4	Removing and installing engine speed sender	497