



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	1
2 Engine data	3
3 General information	4
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system ..	4
20 - Fuel supply system	5
1 Fuel	5
1.1 Assembly overview - fuel tank	5
1.2 Removing and installing fuel tank	9
1.3 Emptying fuel tank	16
2 Fuel delivery unit, fuel gauge sender	27
2.1 Assembly overview - fuel delivery unit/fuel gauge sender	27
2.2 Removing and installing fuel delivery unit, fuel gauge sender	29
2.3 Removing and installing fuel gauge sender G	34
3 Plug-in connectors	36
3.1 Separating plug-in connectors	36
4 Fuel filter	40
4.1 Assembly overview - fuel filter	40
4.2 Removing and installing fuel filter	40
5 Activated charcoal filter system	42
5.1 Assembly overview – activated charcoal filter system	42
5.2 Removing and installing activated charcoal filter, engine codes CBTA, CBUA	45
5.3 Checking fuel tank breather, engine codes CDLG, CAVB, CAVC, CAVD, CBZA, CBZB, CTHD, CTKA	46
5.4 Checking fuel system for leaks, engine codes CBTA, CBUA	48
5.5 Schematic diagram of activated charcoal filter system, engine codes CBTA, CBUA	55
5.6 Removing and installing fuel system diagnostic pump (CBTA, CBUA)	57
6 Accelerator pedal	58
6.1 Assembly overview - accelerator mechanism	58
6.2 Removing and installing accelerator pedal module	58
7 Fuel pump	61
7.1 Checking fuel pump	61