



Contents

| | |
|--|----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety regulations for working on fuel supply | 1 |
| 1.2 Safety measures when working on vehicles with start/stop system | 2 |
| 1.3 Safety precautions when using testers and measuring instruments during a road test | 2 |
| 1.4 Safety precautions when working on the SCR system | 2 |
| 2 Identification | 4 |
| 2.1 Engine number/engine data | 4 |
| 3 General information | 5 |
| 3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system .. | 5 |
| 20 - Fuel supply system | 6 |
| 1 Procedure should vehicle be misfueled | 6 |
| 1.1 Step 1: engine was started with incorrect fuel | 6 |
| 1.2 Step 2: engine was not started with incorrect fuel | 7 |
| 1.3 Step 3: swarf in fuel delivery unit and fuel tank | 8 |
| 1.4 Step 4: no swarf in fuel delivery unit or fuel tank | 9 |
| 1.5 Step 5 (There are filings in high-pressure pump) | 9 |
| 1.6 Step 6 (There are no filings in high-pressure pump) | 10 |
| 2 Fuel | 11 |
| 2.1 Assembly overview - fuel tank | 11 |
| 2.2 Removing and installing fuel tank | 14 |
| 2.3 Emptying fuel tank | 20 |
| 3 Fuel delivery unit, fuel gauge sender | 26 |
| 3.1 Removing and installing fuel delivery unit, fuel gauge sender | 26 |
| 3.2 Removing and installing fuel gauge sender | 29 |
| 4 Plug-in connectors | 33 |
| 4.1 Separating plug-in connectors | 33 |
| 5 Fuel filter | 37 |
| 5.1 Assembly overview - fuel filter | 37 |
| 5.2 Removing and installing fuel filter | 39 |
| 6 Accelerator pedal | 44 |
| 6.1 Assembly overview - accelerator module | 44 |
| 6.2 Removing and installing accelerator pedal module | 44 |
| 7 Fuel pump | 48 |
| 7.1 Checking fuel pump | 48 |
| 7.2 Removing and installing fuel pump | 61 |
| 7.3 Removing and installing suction-jet pump | 63 |