



## Contents

<b>00 - Technical data</b>	<b>1</b>
1     General information	1
1.1   Power transmission - overview	1
1.2   Rear final drive	2
1.3   Guided fault-finding, vehicle self-diagnosis and test instruments	3
1.4   Oil	3
1.5   Ratios	3
1.6   Tools	3
1.7   Components	4
2     Identifying rear final drive	6
3     Identification codes, assembly allocation, capacities - Golf 2004 ► and Passat 2006 ►	7
4     Identification codes, assembly allocation, capacities, Golf 2009 ►	8
<b>39 - Final drive - rear differential</b>	<b>9</b>
1     Propshaft	9
1.1   Assembly overview - propshaft, Golf 2004 ►	9
1.2   Assembly overview - propshaft, Passat 2006 ►	11
1.3   Assembly overview - propshaft, Passat CC and Passat 2006 ►	12
1.4   Assembly overview - propshaft, Golf 2009 ►	14
1.5   Clamping propshaft in a vice using stop plate T10108/1	15
1.6   Installation position of flexible coupling with vibration damper	15
2     Removing and installing propshaft	16
2.1   Removing and installing propshaft, Golf 2004 ►	16
2.2   Removing and installing propshaft, Passat 2006 ►	26
2.3   Removing and installing propshaft, Golf 2009 ►	36
3     Removing and installing rear final drive	41
3.1   Removing and installing rear final drive, Golf 2004 ►	41
3.2   Removing and installing rear final drive, Passat 2006 ►	44
3.3   Removing and installing rear final drive, Golf 2009 ►	54
4     Renewing bonded rubber bush on rear final drive	61
4.1   Renewing bonded rubber bush on rear final drive - Golf	61
4.2   Renewing bonded rubber bush on rear final drive - Passat	66
5     Renewing oil seals for flange shafts (rear final drive installed)	71
5.1   Renewing oil seals for flange shafts (rear final drive 0AV)	72
5.2   Renewing oil seals for flange shafts (rear final drive 01Z)	73
5.3   Renewing oil seals for flange shafts (rear final drive 0BR)	75
6     Renewing propshaft flange oil seal on rear final drive (final drive installed)	77
6.1   Removing	78
6.2   Installing	80
7     Connecting vehicle diagnosis, testing and information system VAS 5051B or vehicle diagnosis and service information system VAS 5052 and selecting functions	81
8     Checking function of Haldex coupling "Haldex generation II"	83
8.1   Checking function of closed Haldex coupling	83
8.2   Checking function of open Haldex coupling	83
9     Checking function of Haldex coupling "generation Haldex IV"	85
9.1   Checking function	85
10    Electrical/electronic components and their locations	86
10.1   Electrical and electronic components and their locations, Golf 2004 ►	86
10.2   Electrical and electronic components and their locations, Passat 2006 ►	87
10.3   Electrical and electronic components and their locations, Golf 2009 ►	89
11    Assembly overview - all-wheel drive control unit J492 , Golf 2004 ► and Passat 2006 ►	91



11.1	Removing and installing four-wheel drive control unit J492	92
11.2	Removing and installing Haldex coupling pump V181	95
<b>12</b>	<b>Assembly overview - all-wheel drive control unit J492 , Golf 2009 ►</b>	<b>100</b>
12.1	Removing and installing four-wheel drive control unit J492	101
12.2	Removing and installing Haldex coupling pump V181	104
<b>13</b>	<b>Assembly overview - Haldex coupling</b>	<b>107</b>
<b>14</b>	<b>Removing and installing Haldex coupling, Golf 2004 ► and Passat 2006 ►</b>	<b>108</b>
14.1	Removing Haldex coupling	109
14.2	Installing Haldex coupling	110
<b>15</b>	<b>Removing and installing Haldex coupling, Golf 2009 ►</b>	<b>111</b>
15.1	Removing Haldex coupling	111
15.2	Installing Haldex coupling	112
<b>16</b>	<b>Assembly overview - dismantling and assembling Haldex coupling (generation II), Golf 2004 ► and Passat 2006 ►</b>	<b>114</b>
16.1	Renewing deep groove ball bearing for Haldex coupling	116
16.2	Removing and installing oil filter for Haldex coupling	121
<b>17</b>	<b>Assembly overview - dismantling and assembling Haldex coupling (generation IV), Golf 2009 ►</b>	<b>123</b>
<b>18</b>	<b>Checking oil level or topping up oil in rear final drive, Golf 2004 ► and Passat 2006 ►</b>	<b>125</b>
<b>19</b>	<b>Checking oil level or topping up oil in rear final drive, Golf 2009 ►</b>	<b>126</b>
<b>20</b>	<b>Haldex coupling: Change oil</b>	<b>128</b>
<b>21</b>	<b>Checking oil level or topping up oil in Haldex coupling (generation II) - Golf 2004 ► and Passat 2006 ►</b>	<b>129</b>
21.1	Checking oil level in Haldex coupling	130
21.2	Topping up oil in Haldex coupling	131
<b>22</b>	<b>Checking oil level or topping up oil in Haldex coupling (generation IV), Golf 2009 ►</b>	<b>134</b>
22.1	Checking oil level in Haldex coupling	134
22.2	Topping up oil in Haldex coupling	135