



Contents

93 - Electric drive systems	1
1 General safety instructions for work on the high-voltage system	1
2 Rules for cleanliness for work on the high-voltage system	7
3 De-energising the high-voltage system	8
4 Re-energising high-voltage system	10
5 Installation location overview - high-voltage components	11
6 Description of high-voltage system	13
6.1 Operating modes for high-voltage vehicle	13
7 High-voltage battery unit	15
7.1 General description	15
7.2 Assembly overview - high-voltage battery	15
7.3 Removing and installing high-voltage battery	16
7.4 Testing high-voltage battery 1 AX2 and high-voltage battery 2 AX3	24
8 Power and control electronics for electric drive	25
8.1 General description	25
8.2 Testing power and control electronics for electric drive	25
8.3 Removing and installing power and control electronics for electric drive	26
9 Electric drive motor	30
9.1 General description	30
9.2 Removing and installing electric drive motor	30
9.3 Renewing electric drive motor	38
9.4 Calibrating electric drive motor	39
9.5 Removing and installing gearbox	39
10 High-voltage wires	40
10.1 General description	40
10.2 Installation location overview - high-voltage wires	41
10.3 Removing and installing high-voltage wiring harness for drive motor	43
11 Cooling system for high-voltage system	44
11.1 Installation location overview - high-voltage system cooling components	44
12 Chargers	46
12.1 Removing and installing charger 3 for high-voltage battery	46
13 Heat exchanger for high-voltage battery	48
14 High-voltage heater (PTC)	49
15 Immediate charge button	50
16 Driving program button	51
17 Electrical air conditioner compressor	52
18 Equipotential bonding conductors	53
18.1 Removing and installing equipotential bonding conductor for high-voltage battery 1 AX2	53
18.2 Removing and installing equipotential bonding conductor for power and control electronics for electric drive JX1	54
18.3 Removing and installing equipotential bonding conductor for electric drive motor V141 ..	54
18.4 Removing and installing equipotential bonding conductor for high-voltage battery 2 AX3 (underfloor battery)	54
18.5 Removing and installing equipotential bonding conductor for electrical air conditioner compressor V470	55
18.6 Removing and installing equipotential bonding conductor for charger 2 for high-voltage battery AX5	55
18.7 Removing and installing equipotential bonding conductor for charger 1 for high-voltage battery AX4	55
18.8 Removing and installing equipotential bonding conductor for engine bracket	56



18.9	Removing and installing equipotential bonding conductor for bracket for connection and distribution box 1 SX1 (high-voltage power distributor)	56
18.10	Removing and installing equipotential bonding conductor for connection and distribution box 1 SX1 (high-voltage power distributor)	56
18.11	Equipotential bonding conductor for high-voltage heater (PTC) Z115	57
18.12	Removing and installing equipotential bonding conductor for charger 3 for high-voltage battery AX6	57
18.13	Removing and installing equipotential bonding conductor for high-voltage charger power distributor SX4	57
18.14	Removing and installing equipotential bonding conductor for bracket for power and control electronics for electric drive JX1 to engine bracket	57
18.15	Overviews of equipotential bonding conductors	58