



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety measures when working on vehicles with a start/stop system | 1 |
| 1.2 Safety precautions when using testers and measuring instruments during a road test | 1 |
| 1.3 Operation and safety notes for gas discharge lamps | 2 |
| 2 Repair notes | 4 |
| 2.1 Contact corrosion | 4 |
| 2.2 Routing and attachment of lines | 4 |
| 3 Battery | 5 |
| 3.1 Battery - general notes | 5 |
| 3.2 Types of battery | 5 |
| 27 - Starter, current supply, CCS | 6 |
| 1 Battery | 6 |
| 1.1 Assembly overview - battery | 6 |
| 1.2 Removing and installing battery | 7 |
| 1.3 Disconnecting and connecting battery | 10 |
| 1.4 Removing and installing battery tray | 12 |
| 1.5 Checking battery | 13 |
| 1.6 Charging battery | 13 |
| 1.7 Removing and installing earth wire with battery monitor control unit J367 | 13 |
| 1.8 Adapting battery monitor control unit J367 | 14 |
| 2 Alternator | 15 |
| 2.1 Assembly overview - alternator | 15 |
| 2.2 Removing and installing alternator | 16 |
| 2.3 Checking alternator | 19 |
| 2.4 Removing and installing poly V-belt pulley | 20 |
| 2.5 Removing and installing voltage regulator | 25 |
| 3 Starter motor | 28 |
| 3.1 Assembly overview - starter | 28 |
| 3.2 Removing and installing starter | 30 |
| 4 Cruise control system (CCS) | 36 |
| 5 Start/stop system | 37 |
| 5.1 General description - start/stop system | 37 |
| 5.2 Overview of fitting locations - start/stop system | 37 |
| 6 Adaptive cruise control | 39 |
| 6.1 Overview of fitting locations - adaptive cruise control | 39 |
| 6.2 Removing and installing adaptive cruise control unit J428 | 40 |
| 6.3 Calibrating adaptive cruise control | 42 |
| 90 - Gauges, instruments | 44 |
| 1 Dash panel insert | 44 |
| 1.1 Assembly overview - dash panel insert | 44 |
| 1.2 Removing and installing dash panel insert KX2 | 44 |
| 2 Horn | 47 |
| 2.1 Assembly overview - horn | 47 |
| 2.2 Removing and installing treble horn H2 and bass horn H7 | 47 |
| 2.3 Removing and installing bracket for treble horn H2 / bass horn H7 | 48 |
| 92 - Windscreen wash/wipe system | 49 |
| 1 Windscreen wiper system | 49 |
| 1.1 Assembly overview - windscreen wiper system | 49 |



| | | |
|-----------|--|-----------|
| 1.2 | Moving wipers to service position | 52 |
| 1.3 | Removing and installing wiper blade | 52 |
| 1.4 | Removing and installing wiper arms | 53 |
| 1.5 | Adjusting wiper arms | 54 |
| 1.6 | Removing and installing wiper motor V | 56 |
| 1.7 | Renewing wiper motor | 57 |
| 1.8 | Deactivating APP function of wiper motor | 59 |
| 1.9 | Removing and installing rain and light sensor | 60 |
| 2 | Windscreen washer system | 67 |
| 2.1 | Assembly overview - windscreen washer system | 67 |
| 2.2 | Removing and installing washer fluid reservoir | 70 |
| 2.3 | Removing and installing windscreen washer fluid level sender | 72 |
| 2.4 | Removing and installing windscreen washer pump | 73 |
| 2.5 | Removing and installing washer jets | 74 |
| 2.6 | Adjusting spray jets | 74 |
| 3 | Rear window wiper system | 76 |
| 3.1 | Assembly overview - rear window wiper system | 76 |
| 3.2 | Removing and installing wiper blade | 77 |
| 3.3 | Removing and installing wiper arm | 77 |
| 3.4 | Adjusting wiper arm | 78 |
| 3.5 | Removing and installing rear window wiper motor V12 | 79 |
| 4 | Rear window washer system | 81 |
| 4.1 | Assembly overview - rear window washer system | 81 |
| 4.2 | Removing and installing washer fluid reservoir | 82 |
| 4.3 | Removing and installing rear window washer pump | 82 |
| 4.4 | Removing and installing spray jet | 82 |
| 4.5 | Adjusting spray jet | 82 |
| 5 | Headlight washer system | 83 |
| 5.1 | Assembly overview - headlight washer system | 83 |
| 5.2 | Removing and installing washer fluid reservoir | 84 |
| 5.3 | Removing and installing headlight washer system pump V11 | 84 |
| 5.4 | Removing and installing washer jets | 85 |
| 5.5 | Adjusting spray jets | 85 |
| 5.6 | Removing and installing pop-up cylinder | 85 |
| 6 | Washer fluid lines | 87 |
| 6.1 | Repairing washer fluid lines | 87 |
| 94 | Lights, bulbs, switches - exterior | 88 |
| 1 | Headlights | 89 |
| 1.1 | Assembly overview - headlight | 89 |
| 1.2 | Removing and installing headlight | 96 |
| 1.3 | Adjusting headlights | 98 |
| 1.4 | Adjusting headlight installation position | 98 |
| 1.5 | Removing and installing front turn signal bulb M5 / M7 | 100 |
| 1.6 | Installing repair kit for headlight housing | 102 |
| 1.7 | Converting headlights from driving on right to driving on left | 104 |
| 1.8 | Converting headlights from driving on left to driving on right | 106 |
| 1.9 | Removing and installing headlight range control motor V48 / V49 | 108 |
| 1.10 | Removing and installing headlight dipped beam bulb M29 / M31 | 111 |
| 1.11 | Removing and installing headlight main beam bulb M30 / M32 | 112 |
| 1.12 | Removing and installing gas discharge bulb L13 / L14 | 113 |
| 1.13 | Removing and installing side light bulb M1 / M3 | 115 |
| 1.14 | Removing and installing daytime running light bulb L174 / L175 | 115 |
| 1.15 | Removing and installing LED modules for daytime running light and side light L176 / L177 | 117 |



| | | |
|----------|---|------------|
| 1.16 | Removing and installing dip beam screen motor V294 / V295 | 117 |
| 1.17 | Removing and installing bulbs for cornering light L148 / L149 | 117 |
| 1.18 | Removing and installing gas discharge bulb control unit J343 / J344 | 118 |
| 1.19 | Removing and installing output module for headlight J667 / J668 | 119 |
| 1.20 | Removing and installing control unit for daytime running light and side light J860 / J861 | 120 |
| 1.21 | Removing and installing control motor sender for VARILIS headlight G695 / G696 | 121 |
| 1.22 | Removing and installing control motor for VARILIS headlight V446 / V447 | 121 |
| 1.23 | Removing and installing swivel module position sensor G474 / G475 | 122 |
| 1.24 | Removing and installing dynamic cornering light control motor V318 / V319 | 122 |
| 2 | Fog lights | 123 |
| 2.1 | Assembly overview - fog lights | 123 |
| 2.2 | Removing and installing fog light | 123 |
| 2.3 | Removing and installing fog light bulb L22 / L23 | 124 |
| 3 | Lights in exterior mirror | 126 |
| 3.1 | Assembly overview - lights in exterior mirror | 126 |
| 3.2 | Removing and installing turn signal | 127 |
| 3.3 | Removing and installing entry light in exterior mirror | 128 |
| 4 | Tail lights | 130 |
| 4.1 | Assembly overview - tail lights in body | 130 |
| 4.2 | Assembly overview - tail lights in rear lid | 131 |
| 4.3 | Removing and installing tail light in rear lid | 131 |
| 4.4 | Adjusting installation position of tail light | 132 |
| 4.5 | Removing and installing tail light cluster | 133 |
| 4.6 | Removing and installing tail light bulb M2 / M4 | 134 |
| 4.7 | Removing and installing rear fog light bulb L46 / L47 | 135 |
| 4.8 | Removing and installing brake and tail light bulb M21 / M22 | 137 |
| 4.9 | Removing and installing reversing light bulb M16 / M17 | 138 |
| 4.10 | Removing and installing rear turn signal bulb M6 / M8 | 139 |
| 5 | High-level brake light | 141 |
| 5.1 | Assembly overview - high-level brake light | 141 |
| 5.2 | Removing and installing high-level brake light | 141 |
| 6 | Number plate light | 144 |
| 6.1 | Assembly overview – number plate lights | 144 |
| 6.2 | Removing and installing number plate light X4 / X5 | 144 |
| 7 | Entry and start authorisation system | 146 |
| 7.1 | Overview of fitting locations - entry and start authorisation system | 146 |
| 7.2 | Overview of fitting locations - keyless entry system | 149 |
| 7.3 | Removing and installing interface for entry and start system J965 | 152 |
| 7.4 | Removing and installing door exterior handle contact sensor G415 / G416 | 153 |
| 7.5 | Removing and installing interior aerial 1 for entry and start authorisation R138 | 154 |
| 7.6 | Removing and installing driver side aerial for entry and start system R134 | 154 |
| 7.7 | Removing and installing front passenger side aerial for entry and start system R135 | 155 |
| 7.8 | Removing and installing luggage compartment aerial for entry and start system R137 | 155 |
| 7.9 | Removing and installing rear bumper aerial for entry and start system R136 | 156 |
| 8 | Steering column switch module | 157 |
| 8.1 | Assembly overview - steering column switch module | 157 |
| 8.2 | Removing and installing steering column switch module | 160 |
| 8.3 | Removing and installing steering column electronics control unit J527 | 161 |
| 8.4 | Removing and installing steering column combination switch | 163 |
| 8.5 | Removing and installing turn signal switch E2 | 164 |
| 8.6 | Removing and installing cruise control system switch E45 | 164 |
| 8.7 | Removing and installing intermittent wiper switch E22 | 165 |
| 8.8 | Removing and installing immobiliser reader coil D2 | 165 |
| 8.9 | Removing and installing ignition/starter switch | 166 |



| | | |
|-----------|---|------------|
| 8.10 | Removing and installing lock cylinder | 167 |
| 8.11 | Removing and installing steering lock housing | 169 |
| 8.12 | Removing and installing ignition key withdrawal lock solenoid N376 | 170 |
| 9 | Parking aid | 171 |
| 9.1 | Assembly overview – parking aid | 171 |
| 9.2 | Removing and installing parking aid control unit J446 | 175 |
| 9.3 | Removing and installing front parking aid warning buzzer H22 | 177 |
| 9.4 | Removing and installing rear parking aid warning buzzer H15 | 178 |
| 9.5 | Removing and installing front parking aid senders | 178 |
| 9.6 | Removing and installing rear parking aid senders | 179 |
| 10 | Park assist steering | 180 |
| 10.1 | Assembly overview - park assist steering | 180 |
| 10.2 | Removing and installing park assist steering control unit J791 | 181 |
| 10.3 | Removing and installing front senders | 181 |
| 10.4 | Removing and installing rear senders | 182 |
| 11 | Automatic headlight range control | 183 |
| 11.1 | Assembly overview - automatic headlight range control | 183 |
| 11.2 | Removing and installing control unit for headlight range control J431 / cornering light and headlight range control unit J745 | 185 |
| 12 | Towing bracket | 188 |
| 12.1 | Assembly overview - towing bracket socket | 188 |
| 12.2 | Trailer socket U10 | 188 |
| 12.3 | Removing and installing trailer detector control unit J345 | 189 |
| 13 | Blind Spot Monitor | 190 |
| 13.1 | Assembly overview - blind spot monitor | 190 |
| 13.2 | Removing and installing warning lamp for Blind Spot Monitor K303 / K304 | 191 |
| 13.3 | Removing and installing blind spot monitor control unit J1086 / J1087 | 191 |
| 13.4 | Calibrating Blind Spot Monitor | 192 |
| 96 | Lights, bulbs, switches - interior | 198 |
| 1 | Lights | 199 |
| 1.1 | Overview of fitting locations - lights in dash panel | 199 |
| 1.2 | Overview of fitting locations - lights in front doors | 201 |
| 1.3 | Overview of fitting locations - lights in rear doors | 202 |
| 1.4 | Overview of fitting locations - lights in centre console | 203 |
| 1.5 | Overview of fitting locations - lights in luggage compartment | 204 |
| 1.6 | Overview of fitting locations - lights in roof trim | 205 |
| 1.7 | Removing and installing glove compartment light W6 | 206 |
| 1.8 | Replacing bulb for glove compartment light W6 | 207 |
| 1.9 | Removing and installing front footwell light K268 / K269 | 208 |
| 1.10 | Removing and installing front footwell illumination bulb L151 / L152 | 208 |
| 1.11 | Removing and installing Central locking SAFELock function warning lamp K133 | 209 |
| 1.12 | Removing and installing front entry light W31 / W32 | 210 |
| 1.13 | Removing and installing door warning lamp W30 / W36 | 211 |
| 1.14 | Removing and installing door opener illumination bulb L108 / L109 | 211 |
| 1.15 | Removing and installing light 2 for front door background lighting L203 / L204 | 212 |
| 1.16 | Removing and installing rear entry light W33 / W34 | 212 |
| 1.17 | Removing and installing rear door warning lamp W37 / W38 | 213 |
| 1.18 | Removing and installing selector lever position display Y26 | 213 |
| 1.19 | Removing and installing luggage compartment light W3 | 213 |
| 1.20 | Removing and installing illuminated vanity mirror W20 / W14 | 214 |
| 1.21 | Removing and installing bulb for front interior light W1 | 215 |
| 1.22 | Removing and installing bulb for rear interior light WX2 | 217 |
| 1.23 | Renewing bulb of rear interior light W47 / W48 | 218 |
| 2 | Controls | 222 |



| | | |
|-----------|---|------------|
| 2.1 | Overview of fitting locations - controls in dash panel | 223 |
| 2.2 | Overview of fitting locations - controls in front doors | 225 |
| 2.3 | Overview of fitting locations - controls in rear doors | 226 |
| 2.4 | Overview of fitting locations - controls in centre console | 227 |
| 2.5 | Overview of fitting locations - controls in luggage compartment | 228 |
| 2.6 | Overview of fitting locations - controls in roof trim | 229 |
| 2.7 | Removing and installing rotary light switch EX1 | 231 |
| 2.8 | Removing and installing headlight range control regulator E102 | 232 |
| 2.9 | Removing and installing driving mode selection button E735 | 232 |
| 2.10 | Removing and installing Start/Stop operation button E693 | 232 |
| 2.11 | Removing and installing TCS and ESP button E256 | 232 |
| 2.12 | Removing and installing parking aid button E266 | 232 |
| 2.13 | Removing and installing park assist steering button E581 | 233 |
| 2.14 | Removing and installing switch module in centre console EX23 / EX30 | 233 |
| 2.15 | Removing and installing hazard warning light switch EX3 | 234 |
| 2.16 | Removing and installing buttons for seat heating E653 / E654 | 235 |
| 2.17 | Removing and installing glove compartment light switch E26 | 235 |
| 2.18 | Removing and installing exterior mirror adjuster EX11 | 236 |
| 2.19 | Removing and installing operating unit for window regulator in driver door E512 | 236 |
| 2.20 | Removing and installing front passenger side window regulator button E716 | 237 |
| 2.21 | Removing and installing driver side interior locking button for central locking system E308 | 238 |
| 2.22 | Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616 | 238 |
| 2.23 | Removing and installing door contact switch F2 / F3 | 239 |
| 2.24 | Removing and installing rear window regulator switch in door E52 / E54 | 239 |
| 2.25 | Removing and installing rear door contact switches F10 / F11 | 240 |
| 2.26 | Removing and installing electromechanical parking brake button E538 / auto-hold button E540 | 240 |
| 2.27 | Removing and installing the starter button E378 | 241 |
| 2.28 | Removing and installing rear lid contact switch for anti-theft alarm F123 | 241 |
| 2.29 | Removing and installing vanity mirror contact switch F147 / F148 | 242 |
| 2.30 | Removing and installing sunroof button E325 | 242 |
| 2.31 | Removing and installing front interior light WX1 | 242 |
| 2.32 | Removing and installing rear interior light WX2 | 243 |
| 2.33 | Removing and installing front right reading light button E634 | 245 |
| 3 | Anti-theft alarm | 246 |
| 3.1 | Assembly overview - interior monitor | 246 |
| 3.2 | Removing and installing alarm horn H12 | 247 |
| 3.3 | Removing and installing anti-theft alarm sensor G578 | 247 |
| 4 | Front camera for assist systems | 249 |
| 4.1 | Removing and installing front camera for driver assist systems | 249 |
| 5 | Cigarette lighter, socket | 250 |
| 5.1 | Removing and installing cigarette lighter U1 | 250 |
| 5.2 | Removing and installing socket illumination bulb L42 | 250 |
| 5.3 | Removing and installing rear cigarette lighter illumination bulb L32 | 250 |
| 5.4 | Removing and installing electric socket U | 250 |
| 97 | - Wiring | 251 |
| 1 | Relay carriers, fuse holders, electronics boxes | 251 |
| 1.1 | Overview of fitting locations - relay carriers, fuse holders, E-boxes | 251 |
| 1.2 | Removing and installing electronics box (E-box) | 254 |
| 1.3 | Removing and installing relay and fuse holder in electronics box | 256 |
| 1.4 | Removing and installing relay and fuse carrier behind dash panel | 258 |
| 2 | Control units | 260 |
| 2.1 | Overview of fitting locations - control units | 260 |



| | | |
|----------|---|------------|
| 2.2 | Assembly overview - control units | 264 |
| 2.3 | Assembly overview - data bus diagnostic interface | 266 |
| 2.4 | Removing and installing onboard supply control unit J519 | 266 |
| 2.5 | Removing and installing data bus diagnostic interface J533 | 270 |
| 2.6 | Removing and installing bracket for onboard supply control unit J519 | 271 |
| 2.7 | Renewing bracket for onboard supply control unit J519 | 272 |
| 2.8 | Removing and installing bracket for parking aid control unit J446 / park assist steering control unit J791 , LHD vehicles | 273 |
| 3 | Connectors | 274 |
| 3.1 | Repairing electrical wiring harnesses and plug-in connections | 274 |
| 4 | Releasing and dismantling connector housings | 275 |
| 5 | Repairing aerial wires | 276 |
| 6 | Fibre optic cables | 277 |
| 7 | Vehicle diagnosis, testing and information systems | 278 |