



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety measures when working on vehicles with a start/stop system</b> .....	<b>1</b>
<b>50 - Body - front</b> .....	<b>2</b>
<b>1 Lock carrier</b> .....	<b>2</b>
1.1 Assembly overview - lock carrier .....	2
1.2 Removing and installing lock carrier .....	3
1.3 Moving to and back from service position .....	6
1.4 Repairing lock carrier .....	10
<b>2 Wings</b> .....	<b>13</b>
2.1 Assembly overview - wing .....	13
2.2 Removing and installing wing .....	14
<b>3 Bulkhead</b> .....	<b>18</b>
3.1 Assembly overview - plenum chamber bulkhead .....	18
3.2 Assembly overview - plenum chamber cover .....	19
3.3 Removing and installing plenum chamber bulkhead .....	19
3.4 Removing and installing plenum chamber cover .....	21
<b>55 - Bonnet, rear lid</b> .....	<b>24</b>
<b>1 Bonnet (hood)</b> .....	<b>24</b>
1.1 Assembly overview - bonnet .....	24
1.2 Assembly overview - Bowden cable .....	26
1.3 Assembly overview - gas strut .....	27
1.4 Removing and installing bonnet .....	27
1.5 Adjusting bonnet .....	29
1.6 Removing and installing bonnet lock .....	36
1.7 Removing and installing bonnet release lever .....	41
1.8 Removing and installing striker pin .....	43
1.9 Removing and installing hinges .....	45
1.10 Removing and installing insulation .....	47
1.11 Removing and installing gas strut .....	50
1.12 Releasing gas from gas strut .....	51
1.13 Removing and installing Bowden cable .....	51
<b>2 Rear lid</b> .....	<b>55</b>
2.1 Assembly overview - rear lid .....	55
2.2 Removing and installing rear lid .....	56
2.3 Adjusting rear lid .....	58
2.4 Removing and installing bonnet lock .....	65
2.5 Removing and installing operating mechanism .....	67
2.6 Removing and installing hinges .....	72
2.7 Removing and installing striker pin .....	75
2.8 Removing and installing rear lid seal .....	76
2.9 Removing and installing gas strut .....	78
2.10 Releasing gas from gas strut .....	80
<b>3 Tank flap unit</b> .....	<b>81</b>
3.1 Assembly overview - tank flap unit .....	81
3.2 Removing and installing tank flap unit .....	81
3.3 Removing and installing fuel tank flap .....	84
3.4 Removing and installing actuator .....	87
<b>57 - Front doors, door components, central locking</b> .....	<b>88</b>
<b>1 Door</b> .....	<b>88</b>



1.1	Assembly overview - door	88
1.2	Removing and installing inner door seal	90
1.3	Removing and installing outer door seal	93
1.4	Removing and installing door	93
1.5	Adjusting door	97
1.6	Adjusting striker pin	99
1.7	Removing and installing door arrester	101
<b>2</b>	<b>Door components</b>	<b>104</b>
2.1	Assembly overview - door components	104
2.2	Assembly overview - window regulator	107
2.3	Assembly overview - door handle and door lock	108
2.4	Removing and installing window regulator motor	109
2.5	Removing and installing window regulator	111
2.6	Removing and installing inner door cover	114
2.7	Removing and installing striker pin	116
2.8	Removing and installing cover cap, for lock cylinder	118
2.9	Removing and installing cover cap, without lock cylinder	119
2.10	Removing and installing lock cylinder	123
2.11	Removing and installing door handle	126
2.12	Removing and installing door handle bracket	128
2.13	Removing and installing door lock	131
2.14	Removing and installing window channel	135
2.15	Removing and installing window slot seal	138
<b>3</b>	<b>Central locking</b>	<b>142</b>
3.1	Overview of fitting locations - central locking	142
3.2	Removing and installing ignition key battery	144
3.3	Removing and installing door control unit J386/J387	145
3.4	Removing and installing cap on ignition key	147
<b>58</b>	<b>Rear doors, door components</b>	<b>148</b>
<b>1</b>	<b>Door</b>	<b>148</b>
1.1	Assembly overview - door	148
1.2	Removing and installing door	150
1.3	Adjusting door	153
1.4	Adjusting striker pin	155
1.5	Removing and installing door arrester	157
1.6	Removing and installing inner door seal	159
1.7	Removing and installing outer door seal	162
<b>2</b>	<b>Door components</b>	<b>163</b>
2.1	Assembly overview - door components	163
2.2	Assembly overview - window regulator	165
2.3	Assembly overview - door handle and door lock	166
2.4	Removing and installing window regulator motor	166
2.5	Removing and installing window regulator	169
2.6	Removing and installing inner door cover	172
2.7	Removing and installing striker pin	174
2.8	Removing and installing cap	176
2.9	Removing and installing door handle	180
2.10	Removing and installing door handle bracket	182
2.11	Removing and installing door lock	185
2.12	Removing and installing window channel	189
2.13	Removing and installing window slot seal	192
<b>60</b>	<b>Sunroof</b>	<b>195</b>
<b>1</b>	<b>Sliding sunroof</b>	<b>195</b>



1.1	Assembly overview - sliding sunroof	195
1.2	Assembly overview - sunroof roller blind	197
1.3	Assembly overview - wind deflector	198
1.4	Removing and installing sunroof panel	198
1.5	Removing and installing rear sunroof panel	202
1.6	Adjusting sunroof panel	206
1.7	Removing and installing sliding sunroof frame	210
1.8	Removing and installing wind deflector	213
1.9	Removing and installing J245 sliding sunroof adjustment control unit	217
1.10	Removing and installing roller blind adjustment control unit J394	219
1.11	Closing sunroof by hand	221
1.12	Removing and installing sliding sunroof seals	222
1.13	Removing and installing sunroof roller blind	227
1.14	Programming sliding sunroof adjustment control unit J245	233
1.15	Adapting sunroof roller blind control unit J394	234
<b>2</b>	<b>Water drain hoses</b>	<b>235</b>
2.1	Assembly overview - water drainage hoses	235
2.2	Cleaning water drainage hoses	235
2.3	Removing and installing water drain hoses	237
<b>63</b>	<b>- Bumpers</b>	<b>239</b>
<b>1</b>	<b>Bumper, front</b>	<b>239</b>
1.1	Assembly overview - bumper cover	239
1.2	Assembly overview - add-on parts	240
1.3	Assembly overview - impact bar	242
1.4	Removing and installing bumper cover	243
1.5	Repairing bumper cover	246
<b>2</b>	<b>Bumper, rear</b>	<b>254</b>
2.1	Assembly overview - bumper cover	254
2.2	Assembly overview - guides for bumper cover	255
2.3	Assembly overview - add-on parts	256
2.4	Assembly overview - impact bar	258
2.5	Removing and installing bumper cover	258
2.6	Removing and installing impact bar	261
2.7	Repairing bumper cover	263
<b>64</b>	<b>- Glazing</b>	<b>271</b>
<b>1</b>	<b>Repair notes</b>	<b>271</b>
1.1	Minimum curing periods for bonded windows	271
1.2	Window repair	272
1.3	Installation instructions for bonded windows	272
1.4	Preparing old undamaged windows for fitting	273
1.5	Preparing new windows for installing	274
1.6	Preparing body flange for fitting	276
1.7	Cleaning off excess adhesive	277
<b>2</b>	<b>Windscreen</b>	<b>278</b>
2.1	Assembly overview - windscreen	278
2.2	Removing and installing windscreen	279
<b>3</b>	<b>Rear windscreen</b>	<b>286</b>
3.1	Assembly overview - rear window	286
3.2	Removing and installing rear window	287
<b>4</b>	<b>Side window</b>	<b>291</b>
4.1	Assembly overview - front side window	291
4.2	Assembly overview - rear side windows	292
4.3	Removing and installing front side window	292



4.4	Removing and installing rear side window	295
<b>5</b>	<b>Door windows</b>	<b>300</b>
5.1	Assembly overview - front door window	300
5.2	Assembly overview - rear door window	301
5.3	Removing and installing front door window	301
5.4	Removing and installing rear door window	306
5.5	Removing and installing fixed rear door window	310
<b>66</b>	<b>Exterior equipment</b>	<b>312</b>
<b>1</b>	<b>Radiator grille and front trim</b>	<b>312</b>
1.1	Assembly overview - radiator grille	312
1.2	Removing and installing radiator grille	314
<b>2</b>	<b>Spoiler</b>	<b>316</b>
2.1	Assembly overview - side spoiler	316
2.2	Removing and installing side spoiler	316
<b>3</b>	<b>Mouldings, trims, extensions</b>	<b>319</b>
3.1	Assembly overview - side member trim	319
3.2	Assembly overview - water deflector	321
3.3	Assembly overview - heat shield	322
3.4	Removing and installing water deflector	323
3.5	Removing and installing B-pillar trim on door	324
3.6	Removing and installing B-pillar trim on door	325
3.7	Removing and installing window channel trim strip of front door	326
3.8	Removing and installing window channel trim strip of rear door	327
3.9	Removing and installing entry moulding	328
3.10	Removing and installing side member trim	330
3.11	Removing and installing underbody heat shield	336
3.12	Removing and installing heat shield for centre exhaust system	337
3.13	Removing and installing heat shield for rear silencer	337
<b>4</b>	<b>Noise insulation</b>	<b>340</b>
4.1	Assembly overview - noise insulation	340
<b>5</b>	<b>Underbody cladding</b>	<b>343</b>
5.1	Assembly overview - underbody cladding	343
5.2	Removing and installing underbody cladding	344
5.3	Removing and installing centre underbody panels	346
5.4	Removing and installing rear underbody panel	347
5.5	Removing and installing front tunnel cross-piece	349
5.6	Removing and installing rear tunnel cross-piece	350
<b>6</b>	<b>Roof moulding and roof railing</b>	<b>353</b>
6.1	Assembly overview - roof railing	353
6.2	Removing and installing roof railing	354
<b>7</b>	<b>Exterior mirror</b>	<b>355</b>
7.1	Assembly overview - exterior mirror	355
7.2	Removing and installing exterior mirror	356
7.3	Removing and installing mirror glass	358
7.4	Removing and installing mirror adjustment unit	360
7.5	Removing and installing mirror cover	362
7.6	Removing and installing mirror trim	363
7.7	Preparing exterior mirror for painting	364
<b>8</b>	<b>Wheel housing liner</b>	<b>366</b>
8.1	Assembly overview - front wheel housing liner	366
8.2	Assembly overview - rear wheel housing liner	367
8.3	Removing and installing front wheel housing liner	368
8.4	Removing and installing rear wheel housing liner	370



<b>9</b>	<b>Lettering and emblems</b> .....	<b>372</b>
9.1	Dimensions - lettering and emblems on rear lid .....	372
9.2	Dimensions - lettering and emblems on wing .....	374
9.3	Removing and installing badges on front .....	375
9.4	Removing and installing emblems at rear .....	378
9.5	Renewing lettering and emblems for wing .....	379
9.6	Removing and installing lettering and emblems for radiator grille .....	380
<b>10</b>	<b>Special add-on parts</b> .....	<b>381</b>
10.1	Assembly overview – special add-on parts .....	381
<b>11</b>	<b>Support</b> .....	<b>382</b>
11.1	Assembly overview - towing bracket .....	382
11.2	Assembly overview - Bowden cable .....	383
11.3	Removing and installing towing bracket .....	383
11.4	Removing and installing Bowden cable .....	387