



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Vehicle identification data</b>	<b>1</b>
1.1 Vehicle identification number	1
1.2 Type plate	3
1.3 Vehicle data sticker	4
<b>2 Safety information</b>	<b>5</b>
<b>3 Moulded foam inserts</b>	<b>6</b>
<b>4 Galvanized body parts, high- and higher-strength and hot-formed body panels</b>	<b>8</b>
<b>5 Laser welding</b>	<b>11</b>
<b>6 Gaps/shut lines</b>	<b>12</b>
6.1 Body, front	12
6.2 Body, centre	14
6.3 Body - rear	17
<b>7 Body dimensions</b>	<b>19</b>
7.1 Body, front	19
7.2 Body, centre	20
7.3 Body - rear	25
7.4 Floor panel - front	26
7.5 Floor panel - centre	27
7.6 Floor panel - rear	28
<b>8 Alignment bracket set</b>	<b>29</b>
8.1 Setup overview of complete body	29
<b>9 Portal gauge</b>	<b>31</b>
9.1 Setup overview of complete body	31
<b>50 - Body - front</b>	<b>33</b>
<b>1 Renewing right bracket</b>	<b>33</b>
1.1 Tools	33
1.2 Removing	33
1.3 Installing	35
<b>2 Repairing threads for securing subframe</b>	<b>38</b>
2.1 Contents of thread repair kit	39
2.2 Repairing threads	39
<b>3 Renewing mounting bracket for subframe</b>	<b>43</b>
3.1 Tools	44
3.2 Removing	44
3.3 Installing	45
<b>4 Renewing cross panel for front longitudinal member</b>	<b>48</b>
4.1 Tools	49
4.2 Removing	49
4.3 Installing	50
<b>5 Renewing upper wheel housing longitudinal member</b>	<b>53</b>
5.1 Tools	54
5.2 Removing	54
5.3 Installing	55
<b>6 Renewing upper inner wheel housing longitudinal member</b>	<b>59</b>
6.1 Tools	60
6.2 Removing	60
6.3 Installing	61
<b>7 Renewing front wheel housing</b>	<b>64</b>



7.1	Tools	65
7.2	Removing	65
7.3	Installing	67
<b>8</b>	<b>Renewing front longitudinal member</b>	<b>72</b>
8.1	Tools	73
8.2	Removing	73
8.3	Installing	74
<b>9</b>	<b>Renewing front longitudinal member (left part section)</b>	<b>77</b>
9.1	Tools	78
9.2	Removing	78
9.3	Installing when using complete longitudinal member assembly	80
9.4	Installing when using individual components of longitudinal member	83
9.5	Renewing studs	86
<b>10</b>	<b>Renewing front longitudinal member (right part section)</b>	<b>88</b>
10.1	Tools	89
10.2	Removing	89
10.3	Installing when using complete longitudinal member assembly	91
10.4	Installing when using individual components of longitudinal member	94
10.5	Renewing studs	97
<b>51 - Body - centre</b>		<b>99</b>
<b>1</b>	<b>Renewing roof - vehicles with no panorama tilting sunroof</b>	<b>99</b>
1.1	Tools	100
1.2	Removing	100
1.3	Installing	103
<b>2</b>	<b>Renewing roof - vehicles with panorama tilting sunroof</b>	<b>115</b>
2.1	Tools	116
2.2	Removing	116
2.3	Installing	120
<b>3</b>	<b>Renewing side member cover plate</b>	<b>129</b>
3.1	Tools	130
3.2	Removing	130
3.3	Installing	131
<b>4</b>	<b>Renewing A-pillar</b>	<b>134</b>
4.1	Tools	135
4.2	Removing	136
4.3	Installing	138
<b>5</b>	<b>Renewing upper A-pillar reinforcement (part section)</b>	<b>142</b>
5.1	Tools	143
5.2	Moulded foam inserts	143
5.3	Removing	143
5.4	Installing	146
<b>6</b>	<b>Renewing A-pillar reinforcement (part section)</b>	<b>155</b>
6.1	Tools	156
6.2	Removing	156
6.3	Installing	157
<b>7</b>	<b>Renewing B-pillar</b>	<b>160</b>
7.1	Tools	161
7.2	Type plate	162
7.3	Removing	163
7.4	Installing	164
<b>8</b>	<b>Renewing B-pillar reinforcement</b>	<b>168</b>
8.1	Tools	169
8.2	Type plate	169



8.3	Removing .....	170
8.4	Installing .....	171
<b>9</b>	<b>Renewing B-pillar reinforcement (part section) .....</b>	<b>177</b>
9.1	Tools .....	178
9.2	Type plate .....	178
9.3	Removing .....	179
9.4	Installing .....	182
<b>10</b>	<b>Renewing outer side member .....</b>	<b>191</b>
10.1	Tools .....	192
10.2	Type plate .....	192
10.3	Removing .....	193
10.4	Installing .....	194
<b>53 - Body - rear .....</b>		<b>199</b>
<b>1</b>	<b>Renewing rear cross panel .....</b>	<b>199</b>
1.1	Tools .....	200
1.2	Removing .....	201
1.3	Installing .....	204
<b>2</b>	<b>Renewing lower corner part .....</b>	<b>209</b>
2.1	Tools .....	210
2.2	Removing .....	210
2.3	Installing .....	211
<b>3</b>	<b>Renewing cross panel member .....</b>	<b>214</b>
3.1	Tools .....	215
3.2	Removing .....	215
3.3	Installing .....	216
<b>4</b>	<b>Renewing luggage compartment floor .....</b>	<b>220</b>
4.1	Tools .....	221
4.2	Removing .....	221
4.3	Installing .....	222
<b>5</b>	<b>Renewing rear longitudinal member (part section) .....</b>	<b>226</b>
5.1	Tools .....	227
5.2	Removing .....	227
5.3	Installing .....	229
<b>6</b>	<b>Renewing rear longitudinal member (part section - second part section of torsion beam axle) .....</b>	<b>232</b>
6.1	Tools .....	233
6.2	Moulded foam inserts .....	233
6.3	Removing .....	233
6.4	Installing .....	235
<b>7</b>	<b>Renewing rear longitudinal member (part section - second part section of multi-link suspension) .....</b>	<b>244</b>
7.1	Tools .....	245
7.2	Moulded foam inserts .....	245
7.3	Removing .....	245
7.4	Installing .....	248
<b>8</b>	<b>Renewing side panel (part section) .....</b>	<b>258</b>
8.1	Tools .....	259
8.2	Removing .....	259
8.3	Installing .....	262