Contents

00 - Technical data			
	1	General information	•
	1.1	Starting conditions for auxiliary/supplementary heater	
	1.2	Notes for vehicles with a start/stop system	2
	1.3	Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	2
	1.4	Type plates	3
	2	Safety information	4
	2.1	Safety precautions when working on vehicles with auxiliary/supplementary heater	2
	2.2	Safety measures when working on vehicles with a start/stop system	4
	2.3	Safety precautions during work on fuel system	2
	3	Repair instructions	6
	3.1	Notes on general repairs on vehicles with auxiliary heater	6
82 -	Suppl	lementary heating	7
	1	Overview of fitting locations - auxiliary/supplementary heater	-
	1.1	Fittings location overview - auxiliary/supplementary heater components	-
	2	Auxiliary/supplementary heater	
	2.1	Overview of fitting locations - auxiliary/supplementary heater	
	2.1	Assembly overview - auxiliary/supplementary heater attachments	1
	2.3	Assembly overview - auxiliary/supplementary heater, internal	12
	2.4	Removing and installing auxiliary/supplementary heater	13
	2.5	Dismantling and assembling auxiliary/supplementary heater	17
	2.6	Removing and installing air intake silencer	19
	2.7	Removing and installing circulation pump V55	19
	2.8	Removing and installing exhaust system	22
	2.9	Removing and installing auxiliary/supplementary heater bracket	22
	2.10	Removing and installing covers for auxiliary heater control unit J364	23
	2.11	Removing and installing glow plug with flame monitor Q8	24
	2.12	Removing and installing temperature sensor G18 and overheating sensor G189	24
	2.13	Connector pin assignment for auxiliary/supplementary heater	25
	2.14	Dismantling and assembling burner unit	25
	2.15	Removing and installing auxiliary heater control unit J364 with combustion air blower V6	
	3	Coolant circuit with auxiliary/supplementary heater	
	3.1	Connection diagram - coolant hoses	28
	3.2	Bleeding coolant circuit of auxiliary/supplementary heater	29
	3.3	Removing and installing coolant pipes for auxiliary/supplementary heater	30
	4	Fuel supply system	33
	4.1	Overview of fitting locations - fuel supply system	33
	4.2	Checking fuel delivery rate	34
	4.3	Removing and installing metering pump V54	35
	5	Regulation of auxiliary/supplementary heater	39
	5.1	Functional description	39
	5.2	Supplementary heater mode	40
	5.3	Auxiliary heater mode	4(
	5.4	Switching off auxiliary/supplementary heater	4(
	6	Other controlling and regulating components	4
	6.1	Removing and installing ambient temperature sensor G17	4
	6.2	Removing and installing remote control receiver for auxiliary coolant heater R149	4
	6.3	Functional description of remote control for auxiliary/supplementary heater	43