



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
2 Identification	2
2.1 Gearbox identification	2
3 Technical data	3
3.1 Allocation gearbox - engine	3
3.2 Capacities	3
3.3 Calculation of gear ratios	3
4 Overview - power transmission	4
5 Electrical components	6
5.1 Overview of fitting locations - electrical components	6
6 Repair instructions	7
6.1 General repair instructions	7
30 - Clutch	10
1 Clutch mechanism	10
1.1 Overview of fitting locations – clutch mechanism	10
1.2 Assembly overview - pedal cluster	12
1.3 Assembly overview - clutch hydraulics	14
1.4 Assembly overview - clutch release mechanism	15
1.5 Removing and installing bearing bush	16
1.6 Checking clutch master cylinder and clutch slave cylinder	16
1.7 Removing and installing clutch position sender G476	17
1.8 Removing and installing return spring	17
1.9 Removing and installing over-centre spring	20
1.10 Removing and installing clutch pedal	22
1.11 Removing and installing mounting bracket	24
1.12 Removing and installing clutch master cylinder	28
1.13 Removing and installing clutch slave cylinder	28
1.14 Removing and installing lines for clutch mechanism	31
1.15 Bleeding clutch mechanism	33
1.16 Repairing clutch release mechanism	35
2 Clutch	37
2.1 Assembly overview - clutch	37
2.2 Removing and installing clutch	38
34 - Controls, housing	42
1 Selector mechanism	42
1.1 Installation position - selector mechanism	42
1.2 Assembly overview - gear knob and cover	44
1.3 Assembly overview - selector mechanism	45
1.4 Removing and installing gear knob	46
1.5 Removing and installing selector mechanism	48
1.6 Repairing selector mechanism	51
1.7 Adjusting selector mechanism	53
1.8 Checking selector mechanism	56
2 Removing and installing gearbox	57
2.1 Removing gearbox	57
2.2 Installing gearbox	67
2.3 Specified torques for gearbox	72
3 Assembly mountings	73



3.1	Assembly overview - assembly mountings	73
4	Transporting gearbox	75
5	Gear oil	76
5.1	Checking gear oil level	76
6	Securing to engine and gearbox support	78
7	Dismantling and assembling gearbox	80
7.1	Schematic overview - gearbox	80
7.2	Assembly overview - gearbox	81
7.3	Assembly overview - cover for gearbox housing and 5th gear	82
7.4	Assembly overview - clutch housing	83
7.5	Assembly overview - shafts, differential, selector mechanism	84
7.6	Assembly overview - selector unit	85
7.7	Assembly overview - selector forks	87
7.8	Repairing selector forks	88
7.9	Repairing selector unit	91
7.10	Renewing selector shaft seal	94
7.11	Dismantling and assembling gearbox	94
8	Gearbox housing, clutch housing	105
8.1	Assembly overview - gearbox housing and clutch housing	105
8.2	Repairing clutch housing	107
35 - Gears, shafts		109
1	Input shaft	109
1.1	Assembly overview - input shaft	109
1.2	Dismantling and assembling input shaft	111
1.3	Renewing input shaft seal	120
2	Output shaft	122
2.1	Assembly overview - output shaft	122
2.2	Dismantling and assembling output shaft	124
39 - Final drive - differential		130
1	Oil seals	130
1.1	Overview of fitting locations - seals	130
1.2	Renewing left seal	131
1.3	Renewing right oil seal	133
2	Differential	136
2.1	Assembly overview - differential	136
2.2	Dismantling and assembling differential	137
2.3	Adjusting differential	144