



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Notes on tow-starting/towing	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
<b>2 Identification</b>	<b>3</b>
2.1 Gearbox identification	3
<b>3 Repair instructions</b>	<b>4</b>
3.1 General information	4
3.2 Rules for cleanliness	4
3.3 General repair instructions	4
3.4 Gaskets and seals	5
3.5 Nuts and bolts	6
<b>4 Technical data</b>	<b>7</b>
4.1 Capacities	7
<b>5 Electrical components</b>	<b>8</b>
5.1 Overview of fitting locations - electrical components	8
<b>30 - Clutch</b>	<b>10</b>
<b>1 Clutch</b>	<b>10</b>
1.1 Assembly overview - dual clutch	10
1.2 Removing and installing clutch end cover	10
1.3 Removing dual clutch	15
1.4 Installing dual clutch	19
<b>34 - Controls, housing</b>	<b>29</b>
<b>1 Mechatronic unit</b>	<b>29</b>
1.1 Assembly overview - mechatronic unit	29
1.2 Removing and installing sump	30
1.3 Removing and installing mechatronic unit	33
<b>2 Bevel box</b>	<b>36</b>
2.1 Assembly overview - bevel box	36
2.2 Distinguishing between different types of bevel boxes	37
2.3 Removing bevel box	38
2.4 Installing bevel box	46
<b>3 Selector mechanism</b>	<b>52</b>
3.1 Assembly overview - selector mechanism	52
3.2 Emergency release from position P	54
3.3 Removing and installing selector lever handle	57
3.4 Moving push-button in the handle to installation position	73
3.5 Removing and installing selector mechanism	75
3.6 Removing and installing gear selector cable	79
3.7 Checking selector mechanism	82
3.8 Checking and adjusting selector lever cable	83
3.9 Renewing selector shaft seal	85
<b>4 Removing and installing gearbox</b>	<b>88</b>
4.1 Specified torques for gearbox	88
4.2 Removing gearbox	90
4.3 Installing gearbox	183
<b>5 Assembly mountings</b>	<b>187</b>
5.1 Assembly overview - assembly mountings	187



<b>6</b>	<b>Transporting gearbox</b> .....	<b>190</b>
6.1	Transporting gearbox .....	190
6.2	Transporting front differential lock .....	191
<b>7</b>	<b>Securing to engine and gearbox support</b> .....	<b>192</b>
7.1	Installing gearbox to engine and gearbox support .....	192
7.2	Securing front differential lock to engine and gearbox support .....	193
<b>8</b>	<b>Gear oil circuit</b> .....	<b>195</b>
8.1	Assembly overview - gear oil circuit .....	195
8.2	Removing and installing gear oil cooler .....	195
8.3	Removing and installing gear oil filter .....	198
8.4	Removing and installing motor for auxiliary hydraulic pump 1 for gearbox oil V475 .....	200
<b>9</b>	<b>Gear oil</b> .....	<b>203</b>
9.1	Overview of oil drain and inspection plugs .....	203
9.2	Tools for gear oil change .....	203
9.3	Checking gear oil level .....	205
9.4	Draining and filling gear oil .....	209
<b>10</b>	<b>Front differential lock</b> .....	<b>213</b>
10.1	Assembly overview - front differential lock .....	213
10.2	Removing front differential lock .....	213
10.3	Installing front differential lock .....	218
10.4	Removing and installing differential lock control unit J647 .....	220
<b>35 - Gears, shafts</b> .....		<b>222</b>
1	Currently, no repairs can be made to gears and shafts .....	222
<b>39 - Final drive - differential</b> .....		<b>223</b>
<b>1</b>	<b>Gear oil</b> .....	<b>223</b>
1.1	Checking gear oil level .....	223
1.2	Draining and filling gear oil .....	224
<b>2</b>	<b>Oil for front differential lock</b> .....	<b>229</b>
2.1	Checking oil level for front differential lock .....	229
2.2	Draining and filling oil for front differential lock .....	230
<b>3</b>	<b>Seals</b> .....	<b>235</b>
3.1	Overview of fitting locations - seals .....	235
3.2	Renewing left seal .....	235
3.3	Renewing right seal .....	238
<b>4</b>	<b>Differential</b> .....	<b>244</b>
4.1	Removing and installing right flange shaft .....	244
<b>5</b>	<b>Components of front differential lock</b> .....	<b>247</b>
5.1	Assembly overview - components of front differential lock .....	247
5.2	Checking function .....	249
5.3	Removing and installing pump for front differential lock V181 .....	249
5.4	Removing and installing coupling for front differential lock .....	251
5.5	Renewing seals for front differential lock .....	251
5.6	Renewing ball bearing for flange shaft .....	260
<b>6</b>	<b>Components of bevel box</b> .....	<b>263</b>
6.1	Assembly overview - components of bevel box .....	263
6.2	Renewing bevel box seals .....	268
6.3	Renewing output flange and redetermining thickness of shim .....	296