

001 - Basic equipment	1-19
1. Basic equipment	1
2. Hazard warning light switch, Onboard supply control unit	2
3. Bonnet contact switch, Ambient temperature sensor, Treble horn, Bass horn, Onboard supply control unit	3
4. Interior mirror, Anti-dazzle interior mirror button, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit, Washer pump, Front interior light	4
5. Glove compartment light switch, Onboard supply control unit, Rear interior light, Luggage compartment light, Glove compartment light	5
6. Light switch, Switch and instrument illumination regulator, Onboard supply control unit	6
7. Reversing light switch, Front right brake pad wear sender, Wiper motor control unit, Onboard supply control unit	7
8. Brake fluid level warning contact, Onboard supply control unit, Left fog light bulb, Left daytime running light bulb, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	8
9. Onboard supply control unit, Right fog light bulb, Right daytime running light bulb, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	9
10. Ignition/starter switch, Intermittent wiper switch, Multifunction display call-up button, Selector lever, Onboard supply control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid	10
11. Turn signal switch, Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit, Steering column electronics control unit	11
12. Horn plate, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Airbag igniter on driver side	12
13. Heater control unit, Fresh air blower control unit, Onboard supply control unit, Fresh air blower, Air recirculation flap control motor	13
14. Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Onboard supply control unit, Temperature flap control motor, Air distribution flap control motor	14
15. Tank flap release, Onboard supply control unit, Left tail light, Right tail light, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, High-level brake light bulb	15
16. Onboard supply control unit, Rear window wiper motor, Left number plate light, Right number plate light, Heated rear window	16
17. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Right tail light bulb, Left tail light bulb, Left tail light 2, Right tail light 2, Left reversing light bulb, Right reversing light bulb	17
18. Onboard supply control unit, Data bus diagnostic interface, Dash panel insert	18
19. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert	19
002 - Convenience system, left-hand drive	20-37
1. Convenience system, left-hand drive	20
2. Driver door control unit, Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	21
3. Driver door control unit, Driver side exterior mirror	22
4. Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Left window regulator motor, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	23
5. Driver side interior locking button for central locking system, Operating unit for window regulator in driver door, Driver door control unit	24
6. Exterior mirror adjuster, Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver door background lighting, Light 2 for driver door background lighting	25
7. Driver door control unit, Coupling point for front left door	26
8. Driver door control unit, Coupling point for front left door	27
9. Front passenger door control unit, Coupling point for front right door	28
10. Front passenger door control unit, Coupling point for front right door, Right window regulator motor, Front passenger door lock unit	29
11. Front passenger side window regulator button, Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger door background lighting, Light 2 for passenger door background lighting	30
12. Front passenger door control unit, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor, Heated exterior mirror on passenger side	31

13. Front passenger door control unit, Passenger side exterior mirror	32
14. Rear passenger side window regulator button, Rear right door contact switch, Onboard supply control unit, Rear right door lock unit, Rear right window regulator motor	33
15. Rear driver side window regulator button, Onboard supply control unit, Rear left door lock unit, Rear left window regulator motor	34
16. Onboard supply control unit	35
17. Rear lid handle release button, Onboard supply control unit, Front left footwell light, Front right footwell light, Rear lid lock unit	36
18. Interior mirror, Rain and light sensor, Onboard supply control unit, Data bus diagnostic interface, Front interior light	37
003 - Convenience system, right-hand drive	38-55
1. Convenience system, right-hand drive	38
2. Driver door control unit, Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	39
3. Driver door control unit, Driver side exterior mirror	40
4. Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Right window regulator motor, Driver door lock unit, Driver door central locking motor, Drive door central locking SAFELOCK function motor	41
5. Driver side interior locking button for central locking system, Operating unit for window regulator in driver door, Driver door control unit	42
6. Exterior mirror adjuster, Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver door background lighting, Light 2 for driver door background lighting	43
7. Driver door control unit, Coupling point for front right door	44
8. Coupling point for front right door	45
9. Front passenger door control unit, Coupling point for front left door	46
10. Front passenger door control unit, Coupling point for front left door, Left window regulator motor, Front passenger door lock unit	47
11. Front passenger side window regulator button, Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger door background lighting, Light 2 for passenger door background lighting	48
12. Front passenger door control unit, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor, Heated exterior mirror on passenger side	49
13. Front passenger door control unit, Passenger side exterior mirror	50
14. Rear driver side window regulator button, Rear right door contact switch, Onboard supply control unit, Rear right door lock unit, Rear right window regulator motor	51
15. Rear passenger side window regulator button, Onboard supply control unit, Rear left door lock unit, Rear left window regulator motor	52
16. Onboard supply control unit	53
17. Rear lid handle release button, Onboard supply control unit, Front left footwell light, Front right footwell light, Rear lid lock unit	54
18. Interior mirror, Rain and light sensor, Onboard supply control unit, Data bus diagnostic interface, Front interior light	55
004 - Fuse assignment	56-80
1. Fuse assignment	56
2. Fuse holder A	57
3. Heated windscreen relay, Fuse holder B	58
4. Fuse holder B	59
5. Starter relay 1, Starter relay 2, Fuse holder B	60
6. High heat output relay, Horn relay, Fuse holder B	61
7. Automatic glow period control unit, Main relay, Terminal 30 voltage supply relay, Low heat output relay, Fuse holder B	62
8. Camshaft control valve 1, Fuse holder B	63
9. Fuse holder B	64
10. Fuse holder B	65
11. Fuse holder B	66
12. Fuse holder C	67
13. Fuse holder C	68
14. Fuse holder C	69
15. Fuse holder C, Fuse 22 on fuse holder C	70
16. Heated rear window relay, Fuse holder C	71
17. Relay for power sockets, Fuse holder C	72
18. Terminal 15 voltage supply relay. Fuse holder C	73

19. Fuse holder C	74
20. Fuse holder C	75
21. Fuse holder C	76
22. Fuse holder C	77
23. Fuse holder H	78
24. Fuse holder H	79
25. Mirror taximeter	80
005 - Earthing concept	81-100
1. Earthing concept	81
2. Battery, Battery monitor control unit, Earth point, on left in engine compartment, Earth connection 5, in engine compartment wiring harness, Earth connection (control unit), in engine wiring harness, Earth point 3, on front of left longitudinal member	82
3. Earth point, on cylinder head, Earth connection 3, in engine compartment wiring harness, Earth connection (engine earth), in engine wiring harness, Earth connection (ignition coils), in engine prewiring harness, Earth point 1, on front of left longitudinal member, Earth point 1, on front of right longitudinal member	83
4. Earth connection 2 in automatic gearbox wiring harness, Earth connection, in left headlight wiring harness, Earth connection 6, in engine compartment wiring harness	84
5. Earth connection 1, in engine compartment wiring harness, Earth connection, in left headlight wiring harness	85
6. Earth connection 3, in headlight wiring harness, Earth connection, in left headlight wiring harness	86
7. Protective diode for onboard supply for coasting function, Earth connection 2, in engine compartment wiring harness, Earth connection, in right headlight wiring harness, Earth point, on right headlight	87
8. Earth connection, in dual tone horn wiring harness, Earth connection, in right headlight wiring harness	88
9. Earth connection, in dual tone horn wiring harness, Connection (right brake wear indicator), in engine compartment wiring harness	89
10. Earth connection 4, in interior wiring harness, Earth connection, in socket wiring harness, Earth point on central tube for dash panel, centre right	90
11. Earth connection 2, in drive side door wiring harness, Earth connection 4, in interior wiring harness, Earth connection 5, in interior wiring harness	91
12. Additional battery for coasting function, Earth point, lower part of left A-pillar, Earth connection 1, in interior wiring harness, Earth connection 8, in interior wiring harness, Earth connection (HRC), in dash panel wiring harness, Earth connection 1, in front left seat wiring harness	92
13. Earth connection 1, in interior wiring harness	93
14. Rotary light switch, Earth connection 1, in interior wiring harness, Earth connection 3, in interior wiring harness	94
15. Headlight range control and instrument illumination regulator, Earth connection 2, in interior wiring harness, Earth connection 3, in interior wiring harness, Earth point, on right A-pillar, Connection 1, in roof wiring harness, Connection 2, in roof wiring harness	95
16. Earth connection 2, in interior wiring harness, Earth connection 2, in front passenger side door wiring harness, Earth point on front of left side member	96
17. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Earth point, lower part of right A-pillar, Earth point, right C-pillar, Earth connection 1, in radio wiring harness, Earth connection 2, in radio wiring harness, Earth point, centre on rear lid, Connection 2, in main wiring harness	97
18. USB connection 1, Earth connection 3, in rear wiring harness, Earth connection 1, in radio wiring harness, Earth connection 5, in rear wiring harness, Earth connection, in fuel tank wiring harness, Earth point, rear right side panel	98
19. Earth connection 4, in rear wiring harness, Earth connection 1, in main wiring harness	99
20. Earth connection, in rear lid wiring harness, Earth connection 7, in interior wiring harness	100
006 - Airbag systems , (L0L)	101-111
1. Airbag systems , (L0L)	101
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Driver side curtain airbag igniter	102
3. Driver side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	103
4. Front passenger side belt force limiter, Airbag control unit, Control unit for front right belt tensioner, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side knee airbag igniter	104
5. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Airbag igniter on driver side	105
6. Belt switch for seat row 2. driver side. Belt switch for seat row 2. middle. Belt switch for seat	106

row 2, passenger side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	
7. Driver side belt switch, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	107
8. Front passenger side belt switch, Key operated switch to deactivate airbag on front passenger side, Seat occupied sensor, front passenger side, Airbag control unit	108
9. Airbag control unit, Airbag igniter 1 on front passenger side, Diagnostic connection	109
10. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for front airbag, Airbag control unit	110
11. Airbag control unit, Data bus diagnostic interface, Dash panel insert	111
007 - Airbag systems , (LOR)	112-122
1. Airbag systems , (LOR)	112
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Driver side curtain airbag igniter	113
3. Driver side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	114
4. Front passenger side belt force limiter, Airbag control unit, Control unit for front right belt tensioner, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side knee airbag igniter	115
5. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Airbag igniter on driver side	116
6. Belt switch for seat row 2, driver side, Belt switch for seat row 2, middle, Belt switch for seat row 2, passenger side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	117
7. Driver side belt switch, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	118
8. Front passenger side belt switch, Key operated switch to deactivate airbag on front passenger side, Seat occupied sensor, front passenger side, Airbag control unit	119
9. Airbag control unit, Airbag igniter 1 on front passenger side, Diagnostic connection	120
10. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for front airbag, Airbag control unit	121
11. Airbag control unit, Data bus diagnostic interface, Dash panel insert	122
008 - Entry and start authorisation	123-127
1. Entry and start authorisation	123
2. Interface for entry and start system, Fuse holder C	124
3. Driver exterior door handle contact sensor, Interface for entry and start system, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system	125
4. Starter button, Front passenger exterior door handle contact sensor, Engine/motor control unit, Control unit for electronic steering column lock, Interface for entry and start system	126
5. Control unit for electronic steering column lock	127
009 - Headlight washer system, windscreen wash/wiper system	128-129
1. Headlight washer system, windscreen wash/wiper system	128
2. Humidity sender for air conditioning system, Rain and light sensor, Onboard supply control unit, Fuse holder C, Washer pump, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	129
010 - Adaptive cruise control	130-131
1. Adaptive cruise control	130
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems	131
011 - Anti-theft alarm system	132-134
1. Anti-theft alarm system	132
2. Interior monitoring switch, Onboard supply control unit, Front interior light	133
3. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Coupling point for roof	134
012 - 12 V sockets	135-136
1. 12 V sockets	135
2. Onboard supply control unit, 12 V socket, 12 V socket 2, 12 V socket 3	136
013 - Dual clutch gearbox 0D9 , (0ES)	137-142
1. Dual clutch gearbox 0D9 , (0ES)	137
2. Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	138
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	139
4. Selector lever, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	140
5. Selector lever, Selector lever position display	141
6. Selector lever, Selector lever locked in position P switch, Selector lever lock solenoid	142
014 - Dual clutch gearbox 0CW , (0EG)	143-148
1. Dual clutch gearbox 0CW . (0EG)	143

2. Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	144
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	145
4. Selector lever, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	146
5. Selector lever, Selector lever position display	147
6. Selector lever, Selector lever locked in position P switch, Selector lever lock solenoid	148
015 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light	149-153
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light	149
2. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	150
3. Left gas discharge bulb control unit, Onboard supply control unit, Output module for left headlight, Control unit for left daytime running light and side light, Left daytime running light bulb, Left LED module for daytime running light and side light, Front left headlight, Control motor for left VARILIS headlight	151
4. Right gas discharge bulb control unit, Onboard supply control unit, Output module for right headlight, Control unit for right daytime running light and side light, Right daytime running light bulb, Right LED module for daytime running light and side light, Front right headlight, Right headlight main beam bulb, Control motor for right VARILIS headlight	152
5. Rear left vehicle level sender, Control unit for cornering light and headlight range control	153
016 - Gas discharge headlights with automatic headlight range control	154-158
1. Gas discharge headlights with automatic headlight range control	154
2. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C, Fuse 35 on fuse holder C	155
3. Left gas discharge bulb control unit, Onboard supply control unit, Left gas discharge (xenon) bulb, Left daytime running light bulb, Front left headlight, Front left turn signal bulb, Front left side marker bulb, Left static cornering light, Left main and dip beam switch-over solenoid, Left headlight range control motor, Control motor for left VARILIS headlight	156
4. Right gas discharge bulb control unit, Onboard supply control unit, Control unit for cornering light and headlight range control, Right gas discharge (xenon) bulb, Right daytime running light bulb, Front right headlight, Front right turn signal bulb, Front right side marker bulb, Right static cornering light, Right main and dip beam switch-over solenoid, Right headlight range control motor, Control motor for right VARILIS headlight	157
5. Rear left vehicle level sender, Data bus diagnostic interface, Control unit for cornering light and headlight range control	158
017 - Front camera for driver assist systems	159-161
1. Front camera for driver assist systems	159
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C	160
3. Front camera for driver assist systems, Windscreen heater for front sensors	161
018 - Dynamic Chassis Control	162-167
1. Dynamic Chassis Control	162
2. Rear body acceleration sender, Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	163
3. Rear left vehicle level sender, Electronically controlled damping control unit	164
4. Front left vehicle level sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve	165
5. Front right vehicle level sender, Front left body acceleration sender, Front right body acceleration sender, Electronically controlled damping control unit	166
6. Gearbox switch, Electronically controlled damping control unit, Onboard supply control unit, Data bus diagnostic interface	167
019 - Electromechanical steering	168-170
1. Electromechanical steering	168
2. Steering angle sender, Power steering control unit, Fuse holder A	169
3. Onboard supply control unit, Data bus diagnostic interface	170
020 - Parking aid (PDC)	171-175
1. Parking aid (PDC)	171
2. Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit, Park assist steering control unit, Fuse holder C	172
3. Switch module 2 in centre console, Park assist steering button, Parking aid control unit, Onboard supply control unit, Data bus diagnostic interface, Park assist steering control unit	173
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Parking aid control unit, Park assist steering control unit	174
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Rear left park assist steering sender, Rear right park assist steering sender, Parking aid control unit, Park assist steering control unit, Couplina point in	175



luggage compartment, right	
021 - Trailer coupling	176-180
1. Trailer coupling	176
2. Trailer detector control unit	177
3. Towing bracket release button, Brake light switch, Contact switch on locking pin, Trailer detector control unit, Onboard supply control unit, Engine/motor control unit	178
4. Trailer detector control unit, Trailer socket	179
5. Control unit in dash panel insert, Trailer detector control unit, Data bus diagnostic interface, Trailer operation warning lamp	180
022 - Air conditioning system	181-185
1. Air conditioning system	181
2. Heater and air conditioning controls, Air conditioning system control unit, Data bus diagnostic interface	182
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Air conditioning system control unit, Air conditioner compressor regulating valve	183
4. Heater and air conditioning controls, Evaporator temperature sensor, Fresh air blower control unit, Air conditioning system control unit, Fresh air blower, Air recirculation flap control motor	184
5. Heater and air conditioning controls, Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Air conditioning system control unit, Temperature flap control motor, Air distribution flap control motor	185
023 - Climatronic	186-192
1. Climatronic	186
2. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Climatronic control unit	187
3. Heater and air conditioning controls, Climatronic control unit, Data bus diagnostic interface, Air conditioner compressor regulating valve	188
4. Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit, Climatronic control unit	189
5. Heater and air conditioning controls, Potentiometer for front air distribution flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Climatronic control unit, Fresh air/air recirculation, air flow flap control motor, Front air distribution flap control motor	190
6. Heater and air conditioning controls, Potentiometer for defroster flap control motor, Potentiometer for left temperature flap control motor, Climatronic control unit, Defroster flap control motor, Left temperature flap control motor	191
7. Heater and air conditioning controls, Footwell vent temperature sender, Potentiometer for right temperature flap control motor, Evaporator temperature sensor, Fresh air blower control unit, Climatronic control unit, Fresh air blower, Right temperature flap control motor	192
024 - Radiator fan	193-194
1. Radiator fan	193
2. Radiator fan control unit, Fuse holder A, Fuse holder B, Radiator fan 2	194
025 - Auxiliary coolant heater	195-197
1. Auxiliary coolant heater	195
2. Temperature sensor, Overheating sensor, Auxiliary heater control unit, Data bus diagnostic interface, Glow plug with flame monitor, Metering pump	196
3. Auxiliary heater control unit, Roof aerial, Remote control receiver for auxiliary coolant heater, Auxiliary heater aerial, GSM aerial, Combustion air blower, Circulation pump	197
026 - Adjustable seat , (3PB),(3PE)	198-202
1. Adjustable seat , (3PB),(3PE)	198
2. Seat longitudinal adjustment button, Seat height adjustment button, Driver seat adjustment operating unit, Fuse holder C, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	199
3. Driver seat lumbar support adjustment switch, Rake adjustment button, Backrest adjustment button, Driver seat adjustment operating unit, Lumbar support for driver seat, Driver seat backrest adjustment motor, Driver seat rake adjustment motor	200
4. Seat longitudinal adjustment button, Seat height adjustment button, Driver seat adjustment operating unit, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	201
5. Driver seat lumbar support adjustment switch, Rake adjustment button, Backrest adjustment button, Driver seat adjustment operating unit, Lumbar support for driver seat, Driver seat backrest adjustment motor, Driver seat rake adjustment motor	202
027 - Driver seat , (8I2),(8I3)	203-207
1. Driver seat , (8I2),(8I3)	203
2. Driver seat lumbar support adjustment switch, Massage function button, Massage control unit	204
3. Massage control unit, Lumbar support for driver seat	205
4. Driver seat lumbar support adjustment switch, Massage function button, Massage control unit	206
5. Lumbar support height adjustment sender. Lumbar support longitudinal adjustment sender. Massage	207

control unit, Lumbar support for driver seat	
028 - Seat heating	208-211
1. Seat heating	208
2. Front left seat temperature sender, Onboard supply control unit, Seat heating (driver side)	209
3. Onboard supply control unit, Seat heating (driver side)	210
4. Front right seat temperature sender, Onboard supply control unit, Seat heating (front passenger side)	211
029 - Data bus network	212-223
1. Data bus network	212
2. Data bus diagnostic interface, Diagnostic connection	213
3. Electronically controlled damping control unit, Parking aid control unit, Data bus diagnostic interface, Park assist steering control unit	214
4. Data bus diagnostic interface, Control unit for cornering light and headlight range control, Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Selected range display	215
5. Auxiliary heater control unit, Digital sound package control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	216
6. Selector lever, Automatic gearbox control unit, Airbag control unit, Adaptive cruise control unit, Data bus diagnostic interface, Engine control unit, Mechatronic unit for dual clutch gearbox, Front camera for driver assist systems	217
7. Alternator, ABS control unit, Battery monitor control unit, Adaptive cruise control unit, Data bus diagnostic interface	218
8. Trailer detector control unit, Steering column electronics control unit, Data bus diagnostic interface, Interface for entry and start system	219
9. Heater and air conditioning controls, Driver door control unit, Dash panel insert, Steering column lock control element	220
10. Front passenger door control unit, Special vehicle control unit	221
11. Rain and light sensor, Alarm horn, Wiper motor control unit, Onboard supply control unit, Front left headlight, Front right headlight	222
12. Anti-theft alarm sensor, Sliding sunroof adjustment control unit, Sunroof roller blind control unit, Onboard supply control unit	223
030 - Sliding/tilting sunroof	224-226
1. Sliding/tilting sunroof	224
2. Rotary light switch, Sliding sunroof adjustment control unit, Onboard supply control unit, Sliding sunroof motor	225
3. Sunroof button, Button 1 for roof roller blind, Sliding sunroof adjustment control unit, Sunroof roller blind control unit	226
031 - Radio navigation system	227-238
1. Radio navigation system	227
2. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	228
3. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	229
4. Data bus diagnostic interface, Control unit 1 for information electronics, Telephone microphone	230
5. Control unit 1 for information electronics, Connection for external audio sources, USB connection 1	231
6. Control unit 1 for information electronics, Interface for external multimedia unit	232
7. Control unit 1 for information electronics, Interface for external multimedia unit, USB hub	233
8. Control unit 1 for information electronics, Connection for external audio sources, USB hub	234
9. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	235
10. Control unit 1 for information electronics, Rear right treble loudspeaker, Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	236
11. Control unit 1 for information electronics, Radio aerial 2, Left aerial module, Right aerial module, Digital radio aerial, Radio aerial, LTE aerial 1	237
12. Control unit 1 for information electronics, Roof aerial, GPS aerial, Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, GSM aerial, Heated rear window	238
032 - Reversing camera (Rear Assist) , (KA1)	239-240
1. Reversing camera (Rear Assist) , (KA1)	239
2. Interior mirror, Rear lid handle release button, Onboard supply control unit, Control unit 1 for information electronics, Rear overhead view camera	240
033 - Mobile telephone systems	241-242
1. Mobile telephone systems	241
2. Control unit 1 for information electronics, Two-way signal amplifier for mobile telephone/data services. Telephone microphone. Telephone bracket. Fuse holder C	242

034 - Anti-lock brake system (ABS) , (L0L)	243-249
1. Anti-lock brake system (ABS) , (L0L)	243
2. ABS control unit, Control unit for electromechanical parking brake, Front right ABS inlet valve, Front right ABS outlet valve	244
3. Clutch position sender, Vacuum sender, ABS control unit, ABS hydraulic unit, Vehicle stabilization program switch valve 1, Left parking brake motor	245
4. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Yaw rate sender, ABS control unit, Rear left ABS outlet valve, ABS hydraulic pump	246
5. Switch module 2 in centre console, Front left speed sensor, Lateral acceleration sender, Brake pressure sender 1, Longitudinal acceleration sender, ABS control unit, Right parking brake motor	247
6. Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert, ABS warning lamp, Brake system warning lamp, Handbrake warning lamp, Warning lamp for electronic stabilisation program and TCS, Tyre Pressure Loss Indicator warning lamp	248
7. Electromechanical parking brake button, Onboard supply control unit	249
035 - Anti-lock brake system (ABS) , (L0R)	250-256
1. Anti-lock brake system (ABS) , (L0R)	250
2. ABS control unit, Control unit for electromechanical parking brake, ABS hydraulic unit, Front right ABS inlet valve, Front right ABS outlet valve, Left parking brake motor	251
3. Front right speed sensor, Clutch position sender, Vacuum sender, ABS control unit, Vehicle stabilization program switch valve 1	252
4. Rear right speed sensor, Rear left speed sensor, Front left speed sensor, Yaw rate sender, ABS control unit, Rear left ABS outlet valve, ABS hydraulic pump	253
5. Switch module 2 in centre console, Lateral acceleration sender, Brake pressure sender 1, Longitudinal acceleration sender, ABS control unit, Right parking brake motor	254
6. Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert, ABS warning lamp, Brake system warning lamp, Handbrake warning lamp, Warning lamp for electronic stabilisation program and TCS, Tyre Pressure Loss Indicator warning lamp	255
7. Electromechanical parking brake button, Onboard supply control unit	256
036 - Multifunction steering wheel	257-259
1. Multifunction steering wheel	257
2. Airbag control unit, Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Airbag igniter on driver side, Fuse holder C	258
3. Selector lever, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit, Steering column electronics control unit, Engine/motor control unit, Heated steering wheel	259
037 - 1.2l petrol engine , CYVA,CYVB	260-276
1. 1.2l petrol engine , CYVA,CYVB	260
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	261
3. Alternator with voltage regulator, Main relay, Fuse holder B	262
4. Switch module 1 in centre console, Start/Stop operation button, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	263
5. Engine control unit	264
6. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine control unit	265
7. Brake light switch, Clutch position sender, Engine control unit, Mechatronic unit for dual clutch gearbox	266
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine control unit	267
9. Steering column electronics control unit, Engine control unit	268
10. Data bus diagnostic interface, Engine control unit	269
11. Hall sender, Coolant temperature sender, Engine control unit, Charge pressure positioner	270
12. Intake manifold sender, Charge pressure sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine control unit	271
13. Oil pressure switch for reduced oil pressure, Throttle valve module, Engine speed sender, Engine control unit	272
14. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	273
15. Knock sensor 1, Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Charge air cooling pump	274
16. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	275
17. Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	276
038 - 1.4l petrol engine . CZCA.CZDA	277-293



1. 1.4l petrol engine , CZCA,CZDA	277
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	278
3. Main relay, Fuse holder B	279
4. Switch module 1 in centre console, Start/Stop operation button, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	280
5. Engine/motor control unit	281
6. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	282
7. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	283
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit	284
9. Steering column electronics control unit, Engine/motor control unit	285
10. Data bus diagnostic interface, Engine/motor control unit	286
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	287
12. Intake manifold sender, Charge pressure sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	288
13. Throttle valve module, Engine speed sender, Engine/motor control unit	289
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Exhaust camshaft control valve 1, Valve for oil pressure control	290
15. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Charge air cooling pump	291
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	292
17. Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	293
039 - 1.6l petrol engine , CWVA	294-308
1. 1.6l petrol engine , CWVA	294
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	295
3. Main relay, Fuse holder B	296
4. Switch module 1 in centre console, Start/Stop operation button, Onboard supply control unit, Fuse holder B	297
5. Terminal 15 voltage supply relay, Engine/motor control unit, Fuse holder C	298
6. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Fuel pump relay, Engine/motor control unit	299
7. Brake light switch, Multifunction switch, Clutch position sender, Engine/motor control unit	300
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit	301
9. Steering column electronics control unit, Engine/motor control unit	302
10. Data bus diagnostic interface, Engine/motor control unit	303
11. Oil pressure switch, Intake manifold sender, Hall sender, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	304
12. Throttle valve module, Engine speed sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	305
13. Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	306
14. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	307
15. Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert	308
040 - 1.6l diesel engine , CRKA,CRKB	309-330
1. 1.6l diesel engine , CRKA,CRKB	309
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	310
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B	311
4. Switch module 1 in centre console, Start/Stop operation button, Onboard supply control unit, Fuse holder B	312
5. Terminal 15 voltage supply relay, Onboard supply control unit, Engine/motor control unit, Fuse holder C	313
6. Engine/motor control unit, Radiator blind control motor	314
7. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	315
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	316
9. Air mass meter, Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit	317

10. Accelerator pedal module, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	318
11. Low heat output relay, Engine/motor control unit, Heater element for crankcase breather, Fuse holder B, Auxiliary air heater element	319
12. Automatic glow period control unit, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4, Fuse holder B	320
13. Charge air temperature sender after charge air cooler, Engine/motor control unit, Charge pressure control solenoid valve	321
14. Oil level and oil temperature sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Auxiliary pump for heating	322
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Valve for oil pressure control, Coolant valve for cylinder head	323
16. Throttle valve module, Hall sender, Fuel pressure sender, Position sender for charge pressure positioner, Engine/motor control unit	324
17. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine speed sender, Engine/motor control unit	325
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Engine/motor control unit	326
19. Charge pressure sender, Exhaust gas pressure sensor 1, Pressure differential sender, Engine/motor control unit	327
20. Steering column electronics control unit, Engine/motor control unit	328
21. Data bus diagnostic interface, Engine/motor control unit, Charge air cooling pump	329
22. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	330
041 - 2.0l diesel engine , CRLB,CRVA	331-352
1. 2.0l diesel engine , CRLB,CRVA	331
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	332
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B	333
4. Switch module 1 in centre console, Start/Stop operation button, Onboard supply control unit, Fuse holder B	334
5. Terminal 15 voltage supply relay, Onboard supply control unit, Engine/motor control unit, Fuse holder C	335
6. Air mass meter, Engine/motor control unit	336
7. Accelerator pedal module, Water separator sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	337
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	338
9. Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit, Radiator blind control motor	339
10. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	340
11. Low heat output relay, Engine/motor control unit, Heater element for crankcase breather, Fuse holder B, Auxiliary air heater element	341
12. Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Fuse holder B	342
13. Charge air temperature sender after charge air cooler, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	343
14. Oil level and oil temperature sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Auxiliary pump for heating	344
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Valve for oil pressure control, Coolant valve for cylinder head	345
16. Throttle valve module, Hall sender, Fuel pressure sender, Position sender for charge pressure positioner, Engine/motor control unit	346
17. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine speed sender, Engine/motor control unit	347
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Engine/motor control unit	348
19. Charge pressure sender, Exhaust gas pressure sensor 1, Pressure differential sender, Engine/motor control unit	349
20. Steering column electronics control unit, Engine/motor control unit	350
21. Data bus diagnostic interface, Engine/motor control unit, Charge air cooling pump	351
22. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	352
042 - Sound system DYNAUDIO	353-357
1. Sound system DYNAUDIO	353
2. Digital sound package control unit. Rear left treble loudspeaker. Rear left bass loudspeaker.	354

Coupling point for rear left door	
3. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Coupling point for front left door	355
4. Digital sound package control unit, Rear right treble loudspeaker, Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre loudspeaker	356
5. Digital sound package control unit, Subwoofer	357
043 - Heated windscreen	358-359
1. Heated windscreen	358
2. Heated windscreen relay, Onboard supply control unit, Heated windscreen	359
044 - 1.4l petrol engine , CPVB	360-376
1. 1.4l petrol engine , CPVB	360
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	361
3. Alternator with voltage regulator, Ethanol concentration sender, Main relay, Fuse holder B	362
4. Switch module 1 in centre console, Start/Stop operation button, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	363
5. Engine/motor control unit	364
6. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	365
7. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	366
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit	367
9. Steering column electronics control unit, Engine/motor control unit	368
10. Data bus diagnostic interface, Engine/motor control unit	369
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	370
12. Intake manifold sender, Charge pressure sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	371
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Throttle valve module, Engine speed sender, Engine/motor control unit	372
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Valve for oil pressure control	373
15. Knock sensor 1, Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Charge air cooling pump	374
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	375
17. Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	376
045 - Steering column electronics for heated steering wheel	377-379
1. Steering column electronics for heated steering wheel	377
2. Airbag coil connector and return ring with slip ring, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Heated steering wheel	378
3. Steering column electronics control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit	379
046 - Lane change assist	380-382
1. Lane change assist	380
2. Blind Spot Monitor control unit 2, Blind Spot Monitor warning lamp in left exterior mirror, Blind Spot Monitor warning lamp in right exterior mirror	381
3. Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Front camera for driver assist systems	382
047 - 6-speed automatic gearbox , (0ID)	383-389
1. 6-speed automatic gearbox , (0ID)	383
2. Multifunction switch, Automatic gearbox control unit, Fuse 13 on fuse holder B	384
3. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Solenoid valve 1, Solenoid valve 2, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 7	385
4. Automatic gearbox control unit, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4	386
5. Automatic gearbox control unit, Data bus diagnostic interface	387
6. Selector lever	388
7. Selector lever, Selector lever locked in position P switch, Selector lever lock solenoid, Selector lever position display	389
048 - 1.6l diesel engine , CXXA,CXXB,DDYA,DDYB	390-412
1. 1.6l diesel engine , CXXA,CXXB,DDYA,DDYB	390
2. Batterv. Starter. Batterv monitor control unit. Starter relav 1. Starter relav 2. Fuse holder B	391

3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B	392
4. Switch module 1 in centre console, Start/Stop operation button, Onboard supply control unit, Fuse holder B	393
5. Terminal 15 voltage supply relay, Onboard supply control unit, Engine/motor control unit, Fuse holder C	394
6. Engine/motor control unit, Radiator blind control motor	395
7. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	396
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	397
9. Air mass meter, Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit	398
10. Accelerator pedal module, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit	399
11. Low heat output relay, Engine/motor control unit, Charge pressure control solenoid valve, Heater element for crankcase breather, Fuse holder B, Auxiliary air heater element	400
12. Automatic glow period control unit, Engine/motor control unit, Fuse holder B	401
13. Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	402
14. Engine/motor control unit	403
15. Oil level and oil temperature sender, Engine/motor control unit, Fuel metering valve, Auxiliary pump for heating	404
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Valve for oil pressure control, Coolant valve for cylinder head	405
17. Throttle valve module, Charge pressure sender, Hall sender, Position sender for charge pressure positioner, Engine/motor control unit	406
18. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine speed sender, Engine/motor control unit	407
19. Coolant temperature sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Pressure differential sender, Engine/motor control unit	408
20. Oil pressure switch, Oil pressure switch for reduced oil pressure, Fuel temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit, Fuel pressure regulating valve	409
21. Steering column electronics control unit, Engine/motor control unit	410
22. Data bus diagnostic interface, Engine/motor control unit, Charge air cooling pump	411
23. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	412
049 - Driving school equipment , (F5F)	413-416
1. Driving school equipment , (F5F)	413
2. Onboard supply control unit	414
3. Warning buzzer switch, Driving school mode relay	415
4. Footwell light switch, Pedal switch for warning buzzer on front passenger side, Driving school vehicle footwell illumination	416
050 - Driving aids for disabled persons with special vehicle control unit , (F6M)	417-421
1. Driving aids for disabled persons with special vehicle control unit , (F6M)	417
2. Fuse holder C	418
3. Special vehicle control unit	419
4. Special vehicle control unit	420
5. Special vehicle control unit	421
051 - Engine preheating , (7VP)	422-423
1. Engine preheating , (7VP)	422
2. Exterior socket, 230 V, 110 V, Engine preheating element	423
052 - 1.0l petrol engine , CHZD	424-441
1. 1.0l petrol engine , CHZD	424
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Starter relay	425
1, Starter relay 2, Fuse holder B	
3. Main relay, Fuse holder B	426
4. Switch module 1 in centre console, Start/Stop operation button, Onboard supply control unit, Fuse holder B	427
5. Engine/motor control unit	428
6. Accelerator pedal module, Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	429
7. Brake light switch, Oil level and oil temperature sender, Engine/motor control unit, Radiator blind control motor	430
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	431
9. Steering column electronics control unit. Engine/motor control unit. Fuse holder C	432

10. Oil pressure sender, Engine/motor control unit	433
11. Data bus diagnostic interface, Engine/motor control unit, Vacuum pump	434
12. Hall sender, Hall sender 3, Engine/motor control unit, Charge pressure positioner	435
13. Intake manifold sender, Coolant temperature sender, Fuel pressure sender, Engine/motor control unit	436
14. Throttle valve module, Charge pressure sender, Engine speed sender, Engine/motor control unit	437
15. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control	438
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Charge air cooling pump	439
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	440
18. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	441
053 - 1.6l diesel engine , DBKA	442-463
1. 1.6l diesel engine , DBKA	442
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	443
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B, Auxiliary air heater element	444
4. Automatic glow period control unit, Fuse holder B	445
5. Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Low heat output relay, Onboard supply control unit, Fuse holder B	446
6. Engine/motor control unit	447
7. Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit	448
8. Air mass meter, Gearbox neutral position sender, Engine/motor control unit	449
9. Accelerator pedal module, Engine/motor control unit, Exhaust flap control unit	450
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Heater element for crankcase breather	451
11. Brake light switch, Oil level and oil temperature sender, Engine/motor control unit, Auxiliary pump for heating, Radiator blind control motor	452
12. Clutch position sender, ABS control unit, Steering column electronics control unit, Engine/motor control unit, Fuse holder C, Radiator fan	453
13. Alternator with voltage regulator, Data bus diagnostic interface, Engine/motor control unit, Charge air cooling pump	454
14. Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	455
15. Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Charge pressure positioner	456
16. Engine speed sender, Charge pressure sender, Exhaust gas temperature sender 1, Fuel pressure sender, Engine/motor control unit	457
17. Hall sender, Coolant temperature sender, Fuel temperature sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	458
18. Exhaust gas pressure sensor 1, Pressure differential sender, Position sender for charge pressure positioner, Engine/motor control unit	459
19. Oil pressure switch, Oil pressure switch for reduced oil pressure, Throttle valve module, Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head	460
20. Exhaust gas recirculation valve 2, Engine/motor control unit	461
21. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	462
22. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	463
054 - 2.0l diesel engine , CRVA	464-485
1. 2.0l diesel engine , CRVA	464
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	465
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B	466
4. Automatic glow period control unit, Low heat output relay, Fuse holder B, Auxiliary air heater element	467
5. Switch module 1 in centre console, Start/Stop operation button, Automatic glow period control unit, Onboard supply control unit, Fuse holder B	468
6. Terminal 15 voltage supply relay, Engine/motor control unit, Fuse holder C	469
7. Water separator sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	470
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	471
9. Accelerator pedal module, Engine/motor control unit, Exhaust flap control unit	472
10. Clutch position sender, Gearbox neutral position sender, Engine/motor control unit, Radiator blind control motor	473



11. Brake light switch, Air mass meter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Heater element for crankcase breather	474
12. Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	475
13. Charge air temperature sender after charge air cooler, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	476
14. Oil level and oil temperature sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Auxiliary pump for heating	477
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Valve for oil pressure control, Coolant valve for cylinder head	478
16. Throttle valve module, Charge pressure sender, Hall sender, Fuel pressure sender, Engine/motor control unit	479
17. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine speed sender, Engine/motor control unit	480
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Engine/motor control unit	481
19. Exhaust gas pressure sensor 1, Pressure differential sender, Position sender for charge pressure positioner, Engine/motor control unit	482
20. Steering column electronics control unit, Engine/motor control unit	483
21. Data bus diagnostic interface, Engine/motor control unit, Charge air cooling pump	484
22. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	485
055 - 2.0l diesel engine , CRLB,CRLD,DCYA,DCYB	486-508
1. 2.0l diesel engine , CRLB,CRLD,DCYA,DCYB	486
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	487
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B, Auxiliary air heater element	488
4. Automatic glow period control unit, Fuse holder B	489
5. Low heat output relay, Fuse holder B	490
6. Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Onboard supply control unit, Engine/motor control unit	491
7. Engine/motor control unit	492
8. Air mass meter, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit	493
9. Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit	494
10. Accelerator pedal module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Heater element for crankcase breather	495
11. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	496
12. Oil level and oil temperature sender, Clutch position sender, ABS control unit, Engine/motor control unit, Radiator fan, Auxiliary pump for heating	497
13. Brake light switch, Steering column electronics control unit, Engine/motor control unit, Fuse holder C	498
14. Alternator with voltage regulator, Data bus diagnostic interface, Engine/motor control unit, Charge air cooling pump	499
15. Exhaust gas temperature sender 4, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	500
16. Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve, Charge pressure positioner	501
17. Engine speed sender, Charge pressure sender, Hall sender, Exhaust gas temperature sender 1, Fuel pressure sender, Engine/motor control unit	502
18. Coolant temperature sender, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	503
19. Throttle valve module, Exhaust gas pressure sensor 1, Position sender for charge pressure positioner, Engine/motor control unit	504
20. Oil pressure switch, Oil pressure switch for reduced oil pressure, Fuel temperature sender, Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head	505
21. Exhaust gas recirculation valve 2, Engine/motor control unit	506
22. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	507
23. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	508
056 - Air conditioning system , (KH6)	509-513
1. Air conditioning system , (KH6)	509
2. Heater and air conditioning controls, Air conditioning system control unit, Data bus diagnostic interface	510
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Air conditioning system control unit. Air conditioner compressor regulating valve	511

4. Heater and air conditioning controls, Evaporator temperature sensor, Fresh air blower control unit, Air conditioning system control unit, Fresh air blower, Air recirculation flap control motor	512
5. Heater and air conditioning controls, Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Air conditioning system control unit, Temperature flap control motor, Air distribution flap control motor	513
057 - Climatronic , (9AK)	514-520
1. Climatronic , (9AK)	514
2. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Climatronic control unit	515
3. Heater and air conditioning controls, Climatronic control unit, Data bus diagnostic interface, Air conditioner compressor regulating valve	516
4. Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit, Climatronic control unit	517
5. Heater and air conditioning controls, Potentiometer for front air distribution flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Climatronic control unit, Fresh air/air recirculation, air flow flap control motor, Front air distribution flap control motor	518
6. Heater and air conditioning controls, Potentiometer for defroster flap control motor, Potentiometer for left temperature flap control motor, Climatronic control unit, Defroster flap control motor, Left temperature flap control motor	519
7. Heater and air conditioning controls, Footwell vent temperature sender, Potentiometer for right temperature flap control motor, Evaporator temperature sensor, Fresh air blower control unit, Climatronic control unit, Fresh air blower, Right temperature flap control motor	520
058 - Radio and navigation system (South Korea) , (ER7)	521-526
1. Radio and navigation system (South Korea) , (ER7)	521
2. Multimedia system operating unit, Control unit for navigation system, Fuse holder C	522
3. Multimedia system operating unit, Control unit for navigation system, Telephone microphone	523
4. Control unit 1 for information electronics, Control unit for navigation system	524
5. Control unit 1 for information electronics, Control unit for navigation system, Connection for external audio sources, USB connection 1	525
6. Control unit for navigation system, Aerial, Radio aerial, Transmission and reception stabilisation control unit	526
059 - 1.2l petrol engine , CYVA,CYVB	527-543
1. 1.2l petrol engine , CYVA,CYVB	527
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	528
3. Alternator with voltage regulator, Main relay, Fuse holder B	529
4. Switch module 1 in centre console, Start/Stop operation button, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	530
5. Engine/motor control unit	531
6. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	532
7. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	533
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit	534
9. Steering column electronics control unit, Engine/motor control unit	535
10. Data bus diagnostic interface, Engine/motor control unit	536
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	537
12. Intake manifold sender, Charge pressure sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	538
13. Oil pressure switch for reduced oil pressure, Throttle valve module, Engine speed sender, Engine/motor control unit	539
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	540
15. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Charge air cooling pump	541
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	542
17. Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	543
060 - 1.4l petrol engine , CZCA,CZDA	544-560
1. 1.4l petrol engine , CZCA,CZDA	544
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	545
3. Main relay, Fuse holder B	546
4. Switch module 1 in centre console. Start/Stop operation button. Terminal 15 voltage supply relay.	547

Onboard supply control unit, Fuse holder C	
5. Engine/motor control unit	548
6. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	549
7. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	550
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit	551
9. Steering column electronics control unit, Engine/motor control unit	552
10. Data bus diagnostic interface, Engine/motor control unit	553
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	554
12. Intake manifold sender, Charge pressure sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	555
13. Throttle valve module, Engine speed sender, Engine/motor control unit	556
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Exhaust camshaft control valve 1, Valve for oil pressure control	557
15. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Charge air cooling pump	558
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	559
17. Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	560
061 - 1.4l petrol engine , CPVB	561-577
1. 1.4l petrol engine , CPVB	561
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	562
3. Alternator with voltage regulator, Ethanol concentration sender, Main relay, Fuse holder B	563
4. Switch module 1 in centre console, Start/Stop operation button, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	564
5. Engine/motor control unit	565
6. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	566
7. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	567
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit	568
9. Steering column electronics control unit, Engine/motor control unit	569
10. Data bus diagnostic interface, Engine/motor control unit	570
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	571
12. Intake manifold sender, Charge pressure sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	572
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Throttle valve module, Engine speed sender, Engine/motor control unit	573
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Valve for oil pressure control	574
15. Knock sensor 1, Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Charge air cooling pump	575
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	576
17. Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	577
062 - Seat heating , (4A3),(L0L)	578-581
1. Seat heating , (4A3),(L0L)	578
2. Front left seat temperature sender, Onboard supply control unit, Seat heating (driver side)	579
3. Front right seat temperature sender, Onboard supply control unit, Seat heating (driver side), Seat heating (front passenger side)	580
4. Front right seat temperature sender, Seat heating (front passenger side)	581
063 - Seat heating , (4A3),(L0R)	582-585
1. Seat heating , (4A3),(L0R)	582
2. Front left seat temperature sender, Onboard supply control unit, Seat heating (front passenger side)	583
3. Front right seat temperature sender, Onboard supply control unit, Seat heating (driver side), Seat heating (front passenger side)	584
4. Front right seat temperature sender, Seat heating (driver side)	585
064 - Driving aids for disabled persons with special vehicle control unit . (F6M)	586-590

1. Driving aids for disabled persons with special vehicle control unit , (F6M)	586
2. Rotary light switch, Fuse holder H	587
3. Data bus diagnostic interface, Special vehicle control unit	588
4. Special vehicle control unit	589
5. Special vehicle control unit	590
065 - Taxi equipment , (F4E),(F4F),(F5Z)	591-601
1. Taxi equipment , (F4E),(F4F),(F5Z)	591
2. Fuse holder B, Fuse holder H	592
3. Onboard supply control unit, Voltage stabiliser	593
4. Taxi alarm active button, Data bus diagnostic interface, Special vehicle control unit	594
5. Interior light switch (taxi), Taxi sign switch, Taxi alarm off button, Special vehicle control unit	595
6. Hands-free system button, Passive Taxi alarm button, Taxi alarm remote control, control unit, Special vehicle control unit, Remote controlled taxi alarm aerial	596
7. Special vehicle control unit, Coupling point on dash panel, right, Coupling point in luggage compartment, left	597
8. 2-way radio loudspeaker volume control 1, Special vehicle control unit, Two-way radio loudspeaker, 2-way radio unit microphone, Coupling point on dash panel, right, Coupling point in luggage compartment, left	598
9. Mirror taximeter, Special vehicle control unit, Coupling point in interior	599
10. Reader unit for taxi charge system, Mirror taximeter, Coupling point on dash panel, centre, Coupling point in luggage compartment, left	600
11. Coupling point on dash panel, centre, Coupling point for roof, Coupling point in luggage compartment, left	601
066 - Basic equipment	602-620
1. Basic equipment	602
2. Onboard supply control unit	603
3. Hazard warning light switch, Bonnet contact switch, Ambient temperature sensor, Treble horn, Bass horn, Onboard supply control unit	604
4. Interior mirror, Anti-dazzle interior mirror button, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit, Front interior light	605
5. Glove compartment light switch, Onboard supply control unit, Washer pump, Rear interior light, Luggage compartment light, Glove compartment light	606
6. Light switch, Switch and instrument illumination regulator, Onboard supply control unit	607
7. Reversing light switch, Front right brake pad wear sender, Wiper motor control unit, Onboard supply control unit	608
8. Brake fluid level warning contact, Onboard supply control unit, Left fog light bulb, Left daytime running light bulb, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	609
9. Onboard supply control unit, Right fog light bulb, Right daytime running light bulb, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	610
10. Ignition/starter switch, Intermittent wiper switch, Multifunction display call-up button, Selector lever, Onboard supply control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid	611
11. Turn signal switch, Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit, Steering column electronics control unit	612
12. Horn plate, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Airbag igniter on driver side	613
13. Heater control unit, Fresh air blower control unit, Onboard supply control unit, Fresh air blower, Air recirculation flap control motor	614
14. Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Onboard supply control unit, Temperature flap control motor, Air distribution flap control motor	615
15. Tank flap release, Onboard supply control unit, Left tail light, Right tail light, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, High-level brake light bulb	616
16. Onboard supply control unit, Rear window wiper motor, Left number plate light, Right number plate light, Heated rear window	617
17. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Right tail light bulb, Left tail light bulb, Left tail light 2, Right tail light 2, Left reversing light bulb, Right reversing light bulb	618
18. Onboard supply control unit, Data bus diagnostic interface, Dash panel insert	619
19. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert	620
067 - Fuse assignment	621-645
1. Fuse assignment	621

2. Fuse holder A	622
3. Heated windscreen relay, Fuse holder B	623
4. Fuse holder B	624
5. Starter relay 1, Starter relay 2, Fuse holder B	625
6. High heat output relay, Horn relay, Fuse holder B	626
7. Automatic glow period control unit, Main relay, Terminal 30 voltage supply relay, Low heat output relay, Fuse holder B	627
8. Camshaft control valve 1, Fuse holder B	628
9. Fuse holder B	629
10. Fuse holder B	630
11. Fuse holder B	631
12. Fuse holder C	632
13. Fuse holder C	633
14. Control unit for front left belt tensioner, Fuse holder C	634
15. Electronically controlled damping control unit, Fuse holder C, Fuse 22 on fuse holder C	635
16. Heated rear window relay, Fuse holder C	636
17. Relay for power sockets, Fuse holder C	637
18. Terminal 15 voltage supply relay, Fuse holder C	638
19. Fuse holder C	639
20. Fuse holder C	640
21. Fuse holder C	641
22. Fuse holder C	642
23. Fuse holder H	643
24. Fuse holder H	644
25. Mirror taximeter	645
068 - Adaptive cruise control , (8T7),(8T8)	646-647
1. Adaptive cruise control , (8T7),(8T8)	646
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C	647
069 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (8IM),(8IP),(8Q5)	648-652
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (8IM),(8IP),(8Q5)	648
2. Rear left vehicle level sender, Onboard supply control unit, Fuse holder C	649
3. Left gas discharge bulb control unit, Onboard supply control unit, Output module for left headlight, Control unit for left daytime running light and side light, Left daytime running light bulb, Left LED module for daytime running light and side light, Front left headlight, Control motor for left VARILIS headlight	650
4. Right gas discharge bulb control unit, Onboard supply control unit, Output module for right headlight, Control unit for cornering light and headlight range control, Control unit for right daytime running light and side light, Right daytime running light bulb, Right LED module for daytime running light and side light, Front right headlight, Right headlight main beam bulb, Control motor for right VARILIS headlight	651
5. Control unit for cornering light and headlight range control	652
070 - Auxiliary coolant heater , (9M9)	653-655
1. Auxiliary coolant heater , (9M9)	653
2. Overheating sensor, Auxiliary heater control unit, Roof aerial, Remote control receiver for auxiliary coolant heater, Auxiliary heater aerial, GSM aerial, Fuse holder B, Fuse holder C	654
3. Temperature sensor, Auxiliary heater control unit, Data bus diagnostic interface, Glow plug with flame monitor, Combustion air blower, Metering pump, Circulation pump	655
071 - Data bus network	656-669
1. Data bus network	656
2. Fuse holder B, Fuse 18 on fuse holder B, Fuse holder C	657
3. Diagnostic connection	658
4. Electronically controlled damping control unit, Parking aid control unit, Data bus diagnostic interface, Park assist steering control unit	659
5. Data bus diagnostic interface, Control unit for cornering light and headlight range control, Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Selector lever position display	660
6. Selector lever, Auxiliary heater control unit, Digital sound package control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit for cornering light and headlight range control, Control unit 1 for information electronics	661
7. Additional battery for coasting function, Automatic gearbox control unit, Airbag control unit, Adaptive cruise control unit, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Protective diode for onboard supply for coasting function, Front camera for driver assist systems	662



8. Alternator, Battery monitor control unit, Data bus diagnostic interface	663
9. ABS control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	664
10. Steering column electronics control unit, Data bus diagnostic interface	665
11. Trailer detector control unit, Front passenger door control unit, Interface for entry and start system	666
12. Driver door control unit, Special vehicle control unit	667
13. Heater and air conditioning controls, Front left headlight, Front right headlight, Steering column lock control element	668
14. Rain and light sensor, Anti-theft alarm sensor, Alarm horn, Sliding sunroof adjustment control unit, Sunroof roller blind control unit, Wiper motor control unit, Onboard supply control unit	669
072 - Anti-lock brake system (ABS) , (1AC),(L0R)	670-676
1. Anti-lock brake system (ABS) , (1AC),(L0R)	670
2. ABS control unit, Control unit for electromechanical parking brake, Front right ABS inlet valve, Front right ABS outlet valve	671
3. Clutch position sender, Vacuum sender, ABS control unit, ABS hydraulic unit, Vehicle stabilization program switch valve 1, Left parking brake motor	672
4. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Yaw rate sender, ABS control unit, Rear left ABS outlet valve, ABS hydraulic pump	673
5. Switch module 2 in centre console, Front left speed sensor, Lateral acceleration sender, Brake pressure sender 1, Longitudinal acceleration sender, ABS control unit, Right parking brake motor	674
6. Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert, ABS warning lamp, Brake system warning lamp, Handbrake warning lamp, Warning lamp for electronic stabilisation program and TCS, Tyre Pressure Loss Indicator warning lamp	675
7. Electromechanical parking brake button, Onboard supply control unit	676
073 - Air conditioning system , (KH6)	677-682
1. Air conditioning system , (KH6)	677
2. Fresh air blower control unit, Fresh air blower	678
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Air conditioning system control unit	679
4. Heater and air conditioning controls, Air conditioning system control unit	680
5. Heater and air conditioning controls, Air conditioning system control unit, Data bus diagnostic interface, Air conditioner compressor regulating valve	681
6. Heater and air conditioning controls, Potentiometer for temperature flap control motor, Evaporator temperature sensor, Potentiometer for air distribution flap control motor, Air conditioning system control unit, Temperature flap control motor, Air recirculation flap control motor, Air distribution flap control motor	682
074 - Climatronic , (9AK)	683-690
1. Climatronic , (9AK)	683
2. Fresh air blower control unit, Fresh air blower	684
3. Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit, Climatronic control unit	685
4. Heater and air conditioning controls, Climatronic control unit	686
5. Heater and air conditioning controls, Climatronic control unit	687
6. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Climatronic control unit, Data bus diagnostic interface	688
7. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor, Potentiometer for front air distribution flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Climatronic control unit, Fresh air/air recirculation, air flow flap control motor, Front air distribution flap control motor	689
8. Heater and air conditioning controls, Potentiometer for defroster flap control motor, Potentiometer for left temperature flap control motor, Potentiometer for right temperature flap control motor, Climatronic control unit, Defroster flap control motor, Left temperature flap control motor, Right temperature flap control motor	690
075 - Dual clutch gearbox 0GC , (0IJ)	691-695
1. Dual clutch gearbox 0GC , (0IJ)	691
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	692
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	693
4. Selector lever, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid	694
5. Selector lever, Selector lever locked in position P switch, Onboard supply control unit, Steering column electronics control unit, Selector lever position display	695
076 - 6-speed automatic gearbox , (0ID)	696-702
1. 6-speed automatic gearbox , (0ID)	696
2. Multifunction switch, Automatic gearbox control unit, Gearbox, Fuse holder B, Fuse holder C	697
3. Multifunction switch. Gearbox oil temperature sender. Gearbox input speed sender. Automatic	698

gearbox control unit, Gearbox, Solenoid valve 2, Automatic gearbox pressure regulating valve 5	
4. Gearbox output speed sender, Automatic gearbox control unit, Gearbox, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 7	699
5. Automatic gearbox control unit, Engine/motor control unit	700
6. Selector lever, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	701
7. Selector lever, Selector lever locked in position P switch, Selector lever lock solenoid, Selector lever position display	702
077 - Anti-theft alarm system , (7AL),(7AS)	703-705
1. Anti-theft alarm system , (7AL),(7AS)	703
2. Alarm horn, Fuse holder B, Fuse holder C, Coupling point in interior, below left	704
3. Anti-theft alarm sensor, Onboard supply control unit, Coupling point for roof, Front interior light	705
078 - Radio navigation system	706-715
1. Radio navigation system	706
2. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	707
3. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Telephone microphone	708
4. Data bus diagnostic interface, Control unit 1 for information electronics, USB hub	709
5. Control unit 1 for information electronics, USB connection 1	710
6. Control unit 1 for information electronics, Connection for external audio sources, USB connection 1	711
7. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	712
8. Control unit 1 for information electronics, Rear right treble loudspeaker, Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	713
9. Control unit 1 for information electronics, Left aerial module, Right aerial module	714
10. Control unit 1 for information electronics, Roof aerial, GPS aerial, Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, GSM aerial, LTE aerial 1	715
079 - Emergency call module , (EL2),(EL3),(EL5),(NZ4)	716-719
1. Emergency call module , (EL2),(EL3),(EL5),(NZ4)	716
2. Operating unit for preparation for mobile telephone, Loudspeaker for emergency call module, Fuse holder C, Coupling point for roof	717
3. Data bus diagnostic interface	718
4. Control unit 1 for information electronics, Telephone microphone	719
080 - Driver seat , (8I2)	720-722
1. Driver seat , (8I2)	720
2. Driver seat lumbar support adjustment switch, Massage function button, Massage control unit, Fuse holder C	721
3. Massage control unit, Lumbar support for driver seat	722
081 - Reversing camera (Rear Assist) , (KA2)	723-724
1. Reversing camera (Rear Assist) , (KA2)	723
2. Rear lid handle release button, Data bus diagnostic interface, Control unit 1 for information electronics, Reversing camera, Fuse holder C	724
082 - Sound system DYNAUDIO , (9VC)	725-728
1. Sound system DYNAUDIO , (9VC)	725
2. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Coupling point for rear left door	726
3. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre loudspeaker, Coupling point for front left door	727
4. Digital sound package control unit, Rear right treble loudspeaker, Rear right bass loudspeaker, Subwoofer	728
083 - Lane change assist , (7Y4),(7Y9)	729-732
1. Lane change assist , (7Y4),(7Y9)	729
2. Blind Spot Monitor control unit 2, Fuse holder C	730
3. Data bus diagnostic interface, Blind Spot Monitor control unit	731
4. Driver side exterior mirror, Passenger side exterior mirror	732
084 - Steering column electronics for heated steering wheel , (2ZD),(2ZW)	733-735
1. Steering column electronics for heated steering wheel , (2ZD),(2ZW)	733
2. Airbag coil connector and return ring with slip ring, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Fuse holder C, Heated steering wheel	734

3. Steering column electronics control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit	735
085 - Basic equipment	736-756
1. Basic equipment	736
2. Fuse holder C	737
3. Fuse holder B, Fuse holder C	738
4. Hazard warning light switch, Onboard supply control unit	739
5. Bonnet contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Treble horn, Bass horn, Onboard supply control unit	740
6. Interior mirror, Glove compartment light switch, Anti-dazzle interior mirror button, Onboard supply control unit, Front interior light, Luggage compartment light, Glove compartment light	741
7. Light switch, Onboard supply control unit, Rear interior light	742
8. Reversing light switch, Front right brake pad wear sender, Wiper motor control unit, Onboard supply control unit	743
9. Brake fluid level warning contact, Onboard supply control unit, Left fog light bulb, Left daytime running light bulb, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	744
10. Onboard supply control unit, Right fog light bulb, Right daytime running light bulb, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	745
11. Tank flap release, Onboard supply control unit, Left tail light cluster, Right tail light cluster, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, High-level brake light bulb	746
12. Onboard supply control unit, Rear window wiper motor, Left number plate light, Right number plate light, Heated rear window	747
13. Onboard supply control unit, Rear right fog light bulb, Right tail light bulb, Right tail light cluster 2, Right reversing light bulb	748
14. Onboard supply control unit, Data bus diagnostic interface	749
15. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert	750
16. Ignition/starter switch, Turn signal switch, Steering column electronics control unit	751
17. Cruise control system switch, Cruise control system (CCS) SET button, Selector lever, Steering column electronics control unit, Ignition key withdrawal lock solenoid	752
18. Intermittent wiper switch, Multifunction display call-up button, Horn plate, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	753
19. Steering column electronics control unit, Engine/motor control unit	754
20. Heater control unit, Fresh air blower control unit, Fresh air blower, Air recirculation flap control motor	755
21. Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Temperature flap control motor, Air distribution flap control motor	756
086 - Fuse assignment	757-783
1. Fuse assignment	757
2. Low heat output relay, Relay and fuse carrier 1	758
3. Battery, Additional battery for coasting function, Alternator with voltage regulator, Power steering control unit, Protective diode for onboard supply for coasting function, Fuse holder A, Radiator fan	759
4. Heated windscreen relay, ABS control unit, Auxiliary heater control unit, Fuse holder B, Coupling point in engine compartment, left, Heated windscreen	760
5. Alarm horn, Battery monitor control unit, Wiper motor control unit, Fuse holder B	761
6. Starter, Clutch position sender, Starter relay 1, Starter relay 2, Fuse holder B	762
7. Treble horn, Bass horn, High heat output relay, Horn relay, Fuse holder B, Auxiliary air heater element	763
8. Oil level and oil temperature sender, Ethanol concentration sender, Main relay, Terminal 30 voltage supply relay, Charge pressure control solenoid valve, Fuse holder B, Auxiliary pump for heating	764
9. Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Fuse holder B	765
10. Brake light switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Air mass meter, Intake manifold preheating heater element, Fuse holder B, Charge air cooling pump, Radiator blind control motor	766
11. Data bus diagnostic interface, Fuel pump control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B, Vacuum pump for brakes	767
12. Steering column electronics control unit, Fuse holder B, Fuse holder C	768
13. Heater and air conditioning controls, Selector lever, Anti-theft alarm sensor, Electronically controlled damping control unit, Remote control receiver for auxiliary coolant heater, Fuse holder C	769
14. Rotary light switch. Electromechanical parking brake button. Rain and light sensor. Fuse holder	770

C	
15. Ignition/starter switch, Fresh air blower control unit, Trailer detector control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for front left belt tensioner, Fuse holder C, Fuse 22 on fuse holder C	771
16. Heated rear window relay, Front passenger door control unit, Control unit for front right belt tensioner, Fuse holder C, Rear right window regulator motor, Heated rear window	772
17. Interior mirror, Switch module 1 in centre console, Reversing light switch, Air quality sensor, Pressure sender for refrigerant circuit, Relay for power sockets, Fuse holder C, 12 V socket, 12 V socket 2, 12 V socket 3	773
18. Terminal 15 voltage supply relay, Adaptive cruise control unit, Parking aid control unit, Control unit for cornering light and headlight range control, Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Front camera for driver assist systems, Fuse holder C	774
19. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Front right headlight, Fuse holder C, Diagnostic connection	775
20. Rear lid handle, Two-way signal amplifier for mobile telephone/data services, Front left headlight, Steering column lock control element, Telephone bracket, USB hub, Fuse holder C, Rear window wiper motor	776
21. Sliding sunroof adjustment control unit, Driver door control unit, Sunroof roller blind control unit, Fuse holder C, Rear left window regulator motor	777
22. Digital sound package control unit, Emergency call module control unit and communication unit, Interface for entry and start system, Dash panel insert, Fuse holder C	778
23. Fuse holder C	779
24. Special vehicle control unit, Fuse holder H	780
25. Interior light switch (taxi), Taxi sign switch, Taxi alarm active button, Mirror taximeter, Voltage stabiliser, Massage control unit	781
26. Engine/motor control unit	782
27. Onboard supply control unit	783
087 - Anti-lock brake system (ABS) , (L0L)	784-790
1. Anti-lock brake system (ABS) , (L0L)	784
2. ABS control unit, Fuse holder B, Fuse holder C	785
3. ABS control unit, Left parking brake motor	786
4. Front right speed sensor, Front left speed sensor, Clutch position sender, Vacuum sender, ABS control unit	787
5. Rear right speed sensor, Rear left speed sensor, ABS control unit, Right parking brake motor	788
6. Onboard supply control unit, Data bus diagnostic interface, Dash panel insert	789
7. Electromechanical parking brake button	790
088 - Anti-lock brake system (ABS) , (L0R)	791-797
1. Anti-lock brake system (ABS) , (L0R)	791
2. ABS control unit, Fuse holder B, Fuse holder C	792
3. ABS control unit, Left parking brake motor	793
4. Front right speed sensor, Front left speed sensor, Clutch position sender, Vacuum sender, ABS control unit	794
5. Rear right speed sensor, Rear left speed sensor, ABS control unit, Right parking brake motor	795
6. Onboard supply control unit, Data bus diagnostic interface, Dash panel insert	796
7. Electromechanical parking brake button	797
089 - LED headlights , (8IT),(8IU),(8IX)	798-802
1. LED headlights , (8IT),(8IU),(8IX)	798
2. Fuse holder C	799
3. Rear left vehicle level sender, Onboard supply control unit, Front left headlight	800
4. Onboard supply control unit, Front right headlight	801
5. Data bus diagnostic interface, Control unit for cornering light and headlight range control	802
090 - 1.0l petrol engine , CHZC,CHZK	803-820
1. 1.0l petrol engine , CHZC,CHZK	803
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Starter relay	804
1, Starter relay 2, Fuse holder B	
3. Main relay, Fuse holder B	805
4. Switch module 1 in centre console, Onboard supply control unit, Fuse holder B, Fuse holder C	806
5. Gearbox neutral position sender, Engine/motor control unit	807
6. Accelerator pedal module, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	808
7. Brake light switch, Oil level and oil temperature sender, Engine/motor control unit	809
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	810
9. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit	811
10. Oil pressure sender, Engine/motor control unit	812
11. Data bus diagnostic interface. Engine/motor control unit. Vacuum pump for brakes	813



12. Hall sender, Hall sender 3, Engine/motor control unit, Charge pressure positioner	814
13. Intake manifold sender, Coolant temperature sender, Fuel pressure sender, Engine/motor control unit	815
14. Throttle valve module, Charge pressure sender, Engine speed sender, Engine/motor control unit	816
15. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control	817
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Charge air cooling pump	818
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	819
18. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	820
091 - Convenience system, left-hand drive , (L0L)	821-839
1. Convenience system, left-hand drive , (L0L)	821
2. Fuse holder C	822
3. Driver door control unit, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor	823
4. Driver door control unit, Driver side exterior mirror turn signal bulb, Driver side exterior mirror, Heated exterior mirror on driver side	824
5. Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Left window regulator motor, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	825
6. Driver side interior locking button for central locking system, Operating unit for window regulator in driver door, Driver door control unit	826
7. Exterior mirror adjuster, Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver door background lighting, Light 2 for driver door background lighting	827
8. Driver door control unit	828
9. Driver door control unit, Front passenger door control unit, Lane change assist control unit 2	829
10. Front passenger door control unit, Right window regulator motor, Front passenger door lock unit	830
11. Front passenger side window regulator button, Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger door background lighting, Light 2 for passenger door background lighting	831
12. Front passenger door control unit, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	832
13. Front passenger door control unit, Front passenger side exterior mirror turn signal bulb, Passenger side exterior mirror, Heated exterior mirror on passenger side	833
14. Rear passenger side window regulator button, Rear right door contact switch, Onboard supply control unit, Rear right door lock unit, Rear right window regulator motor	834
15. Rear driver side window regulator button, Onboard supply control unit, Rear left door lock unit, Rear left window regulator motor	835
16. Driver vanity mirror contact switch, Onboard supply control unit, Rear interior light, Driver side illuminated vanity mirror, Rear left interior light, Rear right interior light	836
17. Rear lid handle release button, Front passenger vanity mirror contact switch, Onboard supply control unit, Rear lid lock unit, Front passenger side illuminated vanity mirror	837
18. Rain and light sensor, Onboard supply control unit, Front left footwell light, Front right footwell light	838
19. Interior mirror, Data bus diagnostic interface, Front interior light	839
092 - Convenience system, right-hand drive , (L0R)	840-858
1. Convenience system, right-hand drive , (L0R)	840
2. Fuse holder C	841
3. Driver door control unit, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor	842
4. Driver door control unit, Driver side exterior mirror turn signal bulb, Driver side exterior mirror, Heated exterior mirror on driver side	843
5. Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Right window regulator motor, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	844
6. Driver side interior locking button for central locking system, Operating unit for window regulator in driver door, Driver door control unit	845
7. Exterior mirror adjuster, Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver door background lighting, Light 2 for driver door background lighting	846



8. Driver door control unit	847
9. Driver door control unit, Front passenger door control unit, Blind Spot Monitor control unit 2	848
10. Front passenger door control unit, Left window regulator motor, Front passenger door lock unit	849
11. Front passenger side window regulator button, Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger door background lighting, Light 2 for passenger door background lighting	850
12. Front passenger door control unit, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	851
13. Front passenger door control unit, Front passenger side exterior mirror turn signal bulb, Passenger side exterior mirror, Heated exterior mirror on passenger side	852
14. Rear driver side window regulator button, Rear right door contact switch, Onboard supply control unit, Rear right door lock unit, Rear right window regulator motor	853
15. Rear passenger side window regulator button, Onboard supply control unit, Rear left door lock unit, Rear left window regulator motor	854
16. Driver vanity mirror contact switch, Onboard supply control unit, Rear interior light, Driver side illuminated vanity mirror, Rear left interior light, Rear right interior light	855
17. Rear lid handle release button, Front passenger vanity mirror contact switch, Onboard supply control unit, Rear lid lock unit, Front passenger side illuminated vanity mirror	856
18. Rain and light sensor, Onboard supply control unit, Front left footwell light, Front right footwell light	857
19. Interior mirror, Data bus diagnostic interface, Front interior light	858
093 - Airbag systems , (L0L)	859-867
1. Airbag systems , (L0L)	859
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Driver side curtain airbag igniter	860
3. Airbag control unit, Airbag igniter on driver side, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side knee airbag igniter	861
4. Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	862
5. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	863
6. Driver side belt switch, Belt switch for seat row 2, driver side, Belt switch for seat row 2, middle, Belt switch for seat row 2, passenger side, Airbag control unit, Side airbag igniter on driver side	864
7. Front passenger side belt switch, Key operated switch to deactivate airbag on front passenger side, Seat occupied sensor, front passenger side, Airbag control unit, Side airbag igniter on front passenger side	865
8. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for front airbag, Airbag control unit, Airbag igniter 1 on front passenger side, Diagnostic connection	866
9. Airbag control unit, Data bus diagnostic interface, Dash panel insert	867
094 - Airbag systems , (L0R)	868-876
1. Airbag systems , (L0R)	868
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Driver side curtain airbag igniter	869
3. Airbag control unit, Airbag igniter on driver side, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side knee airbag igniter	870
4. Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	871
5. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	872
6. Driver side belt switch, Belt switch for seat row 2, driver side, Belt switch for seat row 2, middle, Belt switch for seat row 2, passenger side, Airbag control unit, Side airbag igniter on front passenger side	873
7. Front passenger side belt switch, Key operated switch to deactivate airbag on front passenger side, Seat occupied sensor, front passenger side, Airbag control unit, Side airbag igniter on driver side	874
8. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for front airbag, Airbag control unit, Airbag igniter 1 on front passenger side, Diagnostic connection	875
9. Airbaa control unit. Data bus diaagnostic interface. Dash panel insert	876

095 - 12 V sockets , (7B2),(9JB)	877-878
1. 12 V sockets , (7B2),(9JB)	877
2. Onboard supply control unit, 12 V socket, 12 V socket 2, 12 V socket 3	878
096 - Trailer coupling , (1D4),(1M5)	879-883
1. Trailer coupling , (1D4),(1M5)	879
2. Trailer detector control unit, Fuse holder C	880
3. Towing bracket release button, Brake light switch, Contact switch on locking pin, Trailer detector control unit, Onboard supply control unit, Engine/motor control unit	881
4. Trailer detector control unit, Trailer socket	882
5. Trailer detector control unit, Data bus diagnostic interface, Dash panel insert, Trailer operation warning lamp	883
097 - Sliding/tilting sunroof , (3FU)	884-886
1. Sliding/tilting sunroof , (3FU)	884
2. Switch module 1 in centre console, Sliding sunroof adjustment control unit, Onboard supply control unit	885
3. Sunroof button, Button 1 for roof roller blind, Sliding sunroof adjustment control unit, Sunroof roller blind control unit	886
098 - Heated windscreen , (4GW)	887-888
1. Heated windscreen , (4GW)	887
2. Onboard supply control unit, Fuse holder B, Relay and fuse carrier 3, Heated windscreen	888
099 - Steering column electronics for heated steering wheel , (2ZD),(2ZW)	889-892
1. Steering column electronics for heated steering wheel , (2ZD),(2ZW)	889
2. Selector lever, Airbag coil connector and return ring with slip ring, Steering column electronics control unit, Engine/motor control unit, Fuse holder C	890
3. Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit, Heated steering wheel	891
4. Steering column electronics control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit	892
100 - 1.6l diesel engine , DDYA,DDYB,DGTE	893-917
1. 1.6l diesel engine , DDYA,DDYB,DGTE	893
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B, Auxiliary air heater element	894
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B	895
4. Fuse holder B, Fuse holder C	896
5. Automatic glow period control unit, Low heat output relay	897
6. Switch module 1 in centre console, Start/Stop operation button, Onboard supply control unit, Engine/motor control unit	898
7. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	899
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	900
9. Air mass measurement module, Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit	901
10. Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	902
11. Accelerator pedal module, Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit	903
12. Engine/motor control unit, Charge pressure control solenoid valve, Heater element for crankcase breather, Glow plug 1, Glow plug 2	904
13. Engine/motor control unit, Glow plug 3, Glow plug 4	905
14. Engine/motor control unit, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	906
15. Oil level and oil temperature sender, Engine/motor control unit, Auxiliary pump for heating	907
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	908
17. Throttle valve module, Charge pressure sender, Hall sender, Position sender for charge pressure positioner, Engine/motor control unit	909
18. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine speed sender, Engine/motor control unit	910
19. Coolant temperature sender, Exhaust gas temperature sender 1, Fuel pressure sender, Pressure differential sender, Engine/motor control unit	911
20. Oil pressure switch, Oil pressure switch for reduced oil pressure, Fuel temperature sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit, Fuel pressure regulating valve	912
21. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater. Heater for reducing agent line (heater circuit 2)	913

22. Delivery unit for reducing agent metering system, Engine/motor control unit	914
23. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Control unit for electronic steering column lock	915
24. Data bus diagnostic interface, Engine/motor control unit, Charge air cooling pump	916
25. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	917
101 - 2.0l diesel engine , DCYA,DFGA	918-942
1. 2.0l diesel engine , DCYA,DFGA	918
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	919
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B, Auxiliary air heater element	920
4. Automatic glow period control unit, Fuse holder B, Relay and fuse carrier 1	921
5. Low heat output relay, Relay and fuse carrier 1, Fuse holder C	922
6. Switch module 1 in centre console, Onboard supply control unit, Engine/motor control unit	923
7. Water separator sender, Gearbox neutral position sender, Engine/motor control unit	924
8. Air mass measurement module, Engine/motor control unit, Exhaust flap control unit	925
9. Accelerator pedal module, Engine/motor control unit, Heater element for crankcase breather	926
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Radiator fan	927
11. Brake light switch, Oil level and oil temperature sender, Clutch position sender, ABS control unit, Engine/motor control unit, Auxiliary pump for heating	928
12. Control unit for NOx sender, Control unit 2 for NOx sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	929
13. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	930
14. Delivery unit for reducing agent metering system, Engine/motor control unit	931
15. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit	932
16. Alternator with voltage regulator, Data bus diagnostic interface, Engine/motor control unit, Charge air cooling pump	933
17. Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	934
18. Engine/motor control unit, Charge pressure control solenoid valve, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve	935
19. Engine speed sender, Charge pressure sender, Hall sender, Exhaust gas temperature sender 1, Fuel pressure sender, Engine/motor control unit	936
20. Coolant temperature sender, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	937
21. Throttle valve module, Position sender for charge pressure positioner, Engine/motor control unit	938
22. Oil pressure switch, Oil pressure switch for reduced oil pressure, Fuel temperature sender, Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head	939
23. Exhaust gas recirculation valve 2, Engine/motor control unit	940
24. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	941
25. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	942
102 - 1.4l petrol engine , CZCA,CZDA	943-959
1. 1.4l petrol engine , CZCA,CZDA	943
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	944
3. Main relay, Fuse holder B	945
4. Switch module 1 in centre console, Onboard supply control unit, Fuse holder C	946
5. Engine/motor control unit	947
6. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	948
7. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	949
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit	950
9. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Control unit for electronic steering column lock	951
10. Data bus diagnostic interface, Engine/motor control unit	952
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	953
12. Intake manifold sender, Charge pressure sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	954
13. Throttle valve module, Engine speed sender, Engine/motor control unit	955
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Exhaust camshaft control valve 1, Valve for oil pressure control	956
15. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1. Fuel pressure regulating valve. Charge air cooling pump	957

16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	958
17. Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	959
103 - Dynamic Chassis Control , (2H4)	960-963
1. Dynamic Chassis Control , (2H4)	960
2. Rear body acceleration sender, Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	961
3. Front left vehicle level sender, Front right vehicle level sender, Front left body acceleration sender, Front right body acceleration sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve	962
4. Selector lever, Rear left vehicle level sender, Electronically controlled damping control unit, Onboard supply control unit, Data bus diagnostic interface	963
104 - 1.5l petrol engine , DACA,DADA,DPBA,DPCA	964-983
1. 1.5l petrol engine , DACA,DADA,DPBA,DPCA	964
2. Battery, Additional battery for coasting function, Starter, Starter relay 1, Starter relay 2, Fuse holder A, Fuse holder B	965
3. Main relay, Fuse holder B	966
4. Vacuum pump relay, Fuse holder C, Vacuum pump for brakes	967
5. Battery monitor control unit, Onboard supply control unit, Protective diode for onboard supply for coasting function	968
6. Switch module 1 in centre console, Onboard supply control unit, Engine/motor control unit	969
7. Accelerator pedal module, Air mass measurement module, Gearbox neutral position sender, Engine/motor control unit	970
8. Radiator outlet coolant temperature sender, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	971
9. Brake light switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator fan	972
10. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Control unit for electronic steering column lock	973
11. Data bus diagnostic interface, Engine/motor control unit	974
12. Engine/motor control unit	975
13. Charge pressure sender, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	976
14. Oil pressure sender, Engine speed sender, Charge pressure control module, Fuel pressure sender, Pressure differential sender for particulate filter, Engine/motor control unit	977
15. Intake manifold sender, Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	978
16. Throttle valve module, Engine temperature regulation module, Engine/motor control unit, Fuel metering valve	979
17. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	980
18. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Inlet camshaft control valve 1	981
19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Exhaust cam actuator for cylinder 3, Spark plug 1, Spark plug 2, Charge air cooling pump	982
20. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	983
105 - Entry and start authorisation , (4F2),(4I3)	984-989
1. Entry and start authorisation , (4F2),(4I3)	984
2. Interface for entry and start system, Fuse holder C	985
3. Driver exterior door handle, Engine/motor control unit, Interface for entry and start system	986
4. Front passenger exterior door handle, Interface for entry and start system	987
5. Starter button, Control unit for electronic steering column lock, Interface for entry and start system, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system	988
6.	989
106 - Multifunction steering wheel , (1XX),(2ZH)	990-992
1. Multifunction steering wheel , (1XX),(2ZH)	990
2. Airbag control unit, Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Airbag igniter on driver side, Fuse holder C	991
3. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Heated steering wheel sender. Multifunction steering wheel control unit	992



107 - Basic equipment	993-1012
1. Basic equipment	993
2. Fuse holder C	994
3. Fuse holder B, Fuse holder C	995
4. Hazard warning light switch, Onboard supply control unit	996
5. Bonnet contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Treble horn, Bass horn, Onboard supply control unit	997
6. Interior mirror, Glove compartment light switch, Anti-dazzle interior mirror button, Onboard supply control unit, Front interior light, Luggage compartment light, Glove compartment light	998
7. Light switch, Onboard supply control unit, Rear interior light	999
8. Reversing light switch, Front right brake pad wear sender, Wiper motor control unit, Onboard supply control unit	1000
9. Brake fluid level warning contact, Onboard supply control unit, Left fog light bulb, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	1001
10. Onboard supply control unit, Right fog light bulb, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	1002
11. Tank flap release, Onboard supply control unit, Left tail light cluster, Right tail light cluster, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, High-level brake light bulb	1003
12. Onboard supply control unit, Rear window wiper motor, Left number plate light, Right number plate light, Heated rear window	1004
13. Onboard supply control unit, Rear right fog light bulb, Right tail light bulb, Right tail light cluster 2, Right reversing light bulb	1005
14. Onboard supply control unit, Data bus diagnostic interface	1006
15. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert	1007
16. Turn signal switch, Intermittent wiper switch, Multifunction display call-up button, Steering column electronics control unit	1008
17. Cruise control system switch, Cruise control system (CCS) SET button, Steering column electronics control unit	1009
18. Ignition/starter switch, Horn plate, Airbag control unit, Steering column electronics control unit, Engine/motor control unit, Airbag igniter on driver side	1010
19. Heater control unit, Fresh air blower control unit, Fresh air blower, Air recirculation flap control motor	1011
20. Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Temperature flap control motor, Air distribution flap control motor	1012
108 - 1.0l petrol engine , DKLB,DKRF	1013-1030
1. 1.0l petrol engine , DKLB,DKRF	1013
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	1014
3. Main relay, Fuse holder B	1015
4. Switch module 1 in centre console, Onboard supply control unit, Fuse holder B, Fuse holder C	1016
5. Engine/motor control unit, Radiator fan	1017
6. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1018
7. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	1019
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Data bus diagnostic interface, Engine/motor control unit	1020
9. Ignition/starter switch, Engine/motor control unit, Interface for entry and start system, Vacuum pump for brakes	1021
10. Oil level and oil temperature sender, Power steering control unit, Steering column electronics control unit, Engine/motor control unit	1022
11. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	1023
12. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	1024
13. Throttle valve module, Engine speed sender, Pressure differential sender for particulate filter, Engine/motor control unit	1025
14. Pressure sensor for activated charcoal filter air flushing, Coolant temperature sender, Fuel pressure sender, Engine/motor control unit	1026
15. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1	1027
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Charge air cooling pump	1028



17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	1029
18. Fuel delivery unit, Fuel pump control unit, Dash panel insert	1030
109 - Radio navigation system	1031-1040
1. Radio navigation system	1031
2. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	1032
3. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	1033
4. Control unit 1 for information electronics, USB hub	1034
5. Onboard supply control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Telephone microphone, USB hub	1035
6. Control unit 1 for information electronics	1036
7. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	1037
8. Control unit 1 for information electronics, Rear right treble loudspeaker, Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	1038
9. Control unit 1 for information electronics, Left aerial module, Right aerial module	1039
10. Control unit 1 for information electronics, Roof aerial, GPS aerial, Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, GSM aerial, LTE aerial 1	1040
110 - Emergency call module , (8AR),(EL2),(EL3),(EL5),(NZ4),(I8I)	1041-1044
1. Emergency call module , (8AR),(EL2),(EL3),(EL5),(NZ4),(I8I)	1041
2. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit, Fuse holder C, Coupling point for roof	1042
3. Data bus diagnostic interface, Emergency call module control unit and communication unit, Loudspeaker for emergency call module	1043
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit	1044
111 - Sound system DYNAUDIO , (9VC)	1045-1049
1. Sound system DYNAUDIO , (9VC)	1045
2. Digital sound package control unit, Centre loudspeaker, Subwoofer, Fuse holder C	1046
3. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics	1047
4. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	1048
5. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	1049
801 - - Fitting locations: Earth points - 3	1050-1069
1. Earth points	1050-1069
1.1 Earth points in front part of vehicle	1050-1065
1.1.1 Front from left	1051-1052
1.1.2 Front from right	1053
1.1.3 1.0l petrol engine	1054
1.1.4 1.2l petrol engine	1055
1.1.5 1.4l petrol engine	1056
1.1.6 1.5l petrol engine	1057
1.1.7 1.6l petrol engine	1058
1.1.8 Manual gearbox, 0AF, 0AH, 0AJ	1059
1.1.9 Manual gearbox 0AJ, for models with 1.5l petrol engine	1060
1.1.10 Manual gearbox 0A4, 02S	1061
1.1.11 Manual gearbox 02Q	1062
1.1.12 Dual clutch gearbox 0CW	1063
1.1.13 Dual clutch gearbox, 0D9, 0GC	1064
1.1.14 Automatic gearbox 09G	1065
1.2 Earth points in middle part of vehicle	1066
1.2.1 Interior from left	1066
1.2.2 Interior from right	1067
1.3 Earth points in rear part of vehicle	1067-1069
1.3.1 Left luggage compartment	1068
1.3.2 Right luggage compartment, rear lid	1069
802 - -Fitting locations: Fuses - 3	1070-1139
1. Fuses	1070-1139
1.1 Overview of fuse holders	1070
1.2 Fitting location of fuse holder C -SC-	1071-1072
1.2.1 Fitting location of fuse holder C -SC-. LHD models	1071

1.2.2 Fitting location of fuse holder C -SC-, RHD models	1072
1.3 Fuse assignment for fuse holder C -SC-, from February 2014	1073-1076
1.4 Fuse assignment for fuse holder C -SC-, from May 2015	1077-1080
1.5 Fuse assignment for fuse holder C -SC-, from November 2015	1081-1084
1.6 Fuse assignment for fuse holder C -SC-, from November 2016	1085-1089
1.7 Fuse assignment for fuse holder C -SC-, from May 2017	1090-1093
1.8 Fuse assignment for fuse holder C -SC-, from November 2017	1094-1097
1.9 Fuse assignment for fuse holder C -SC-, from July 2018	1098-1102
1.10 Fuse assignment for fuse holder C -SC-, from November 2018	1103-1106
1.11 Fuse assignment for fuse holder C -SC-, from July 2019	1107-1110
1.12 Fitting location of relay and fuse carrier 3 -SR3-, only for special vehicles	1111
1.13 Fuse assignment for relay and fuse carrier 3 -SR3-, only for special vehicles, from November 2014	1112
1.14 Fitting location of fuse holder H -SH-, only for special vehicles	1113
1.14.1 Fitting location of fuse holder H -SH-	1113
1.15 Fuse assignment for fuse holder H -SH-, only for special vehicles	1114-1115
1.15.1 Fuse assignment for fuse holder H -SH-, from November 2015	1114
1.15.2 Fuse assignment for fuse holder H -SH-, from November 2016	1115
1.16 Fitting location of single fuses	1116-1118
1.16.1 Fitting location of single fuses, left-hand drive models	1116
1.16.2 Fitting location of single fuses, right-hand drive models	1117-1118
1.17 Fitting location of fuse holder B -SB-	1119
1.18 Fuse assignment for fuse holder B -SB-, from February 2014	1120-1122
1.19 Fuse assignment for fuse holder B -SB-, from May 2015	1123-1125
1.20 Fuse assignment for fuse holder B -SB-, from November 2016	1126-1128
1.21 Fuse assignment for fuse holder B -SB-, from November 2017	1129-1130
1.22 Fuse assignment for fuse holder B -SB-, from July 2018	1131-1133
1.23 Fuse assignment for fuse holder B -SB-, from November 2018	1134-1135
1.24 Fitting location of fuse holder A -SA-	1136-1137
1.25 Fuse assignment for fuse holder A -SA-, from February 2014	1138
1.26 Fuse assignment for fuse holder A -SA-, from November 2018	1138-1139
803 - - Fitting locations: Relays - 3	1140-1149
1. Relays	1140-1149
1.1 Overview of relay carriers	1140-1141
1.2 Relay and fuse carrier 2 -SR2-, on left under dash panel	1142-1147
1.2.1 Fitting location and relay assignment of relay and fuse carrier 2 -SR2-, left-hand drive models, from February 2014	1142
1.2.2 Fitting location and relay assignment of relay and fuse carrier 2 -SR2-, left-hand drive models, from July 2018	1143
1.2.3 Fitting location and relay assignment of relay and fuse carrier 2 -SR2-, left-hand drive models, from July 2019	1144
1.2.4 Fitting location and relay assignment of relay and fuse carrier 2 -SR2-, right-hand drive models, from February 2014	1145
1.2.5 Fitting location and relay assignment of relay and fuse carrier 2 -SR2-, right-hand drive models, from July 2018	1146
1.2.6 Fitting location and relay assignment of relay and fuse carrier 2 -SR2-, right-hand drive models, from July 2019	1147
1.3 Relay and fuse carrier 3 -SR3-, on left under dash panel	1148
1.3.1 Fitting location and fuse assignment of relay and fuse carrier 3 -SR3-, only for special vehicles, from November 2014	1148
1.4 Relay and fuse carrier 1 -SR1-, in E-box in engine compartment	1149
1.4.1 Fitting location and relay assignment of relay and fuse carrier 1 -SR1-, on E-box, from February 2014	1149
804 - -Fitting locations: Control units in front part of vehicle - 3	1150-1185
1. Control units in front part of vehicle	1150-1185
1.1 Overview of control units	1150-1151
1.2 Auxiliary heater control unit -J364-	1152
1.3 Right gas discharge bulb control unit -J344-, sales type AM1	1153-1154
1.4 Front right headlight -MX2-, sales type AN1	1155
1.5 ABS control unit -J104-	1156-1157
1.6 Battery monitor control unit -J367-	1158-1159
1.7 Wiper motor control unit -J400-, left-hand drive models	1160
1.8 Wiper motor control unit -J400-, right-hand drive models	1161-1162
1.9 Automatic gearbox control unit -J217-	1163-1168
1.9.1 Automatic gearbox control unit -J217-, from May 2014	1163-1164
1.9.2 Automatic gearbox control unit -J217-. from November 2016	1165-1168

1.10 Engine/motor control unit -J623-	1169-1171
1.10.1 Engine/motor control unit -J623-, 60-pin connector -T60-/94-pin connector -T94-	1169-1170
1.10.2 Engine/motor control unit -J623-, 105-pin connector -T105-/91-pin connector -T91-	1171
1.11 Power steering control unit -J500-	1172
1.12 Left gas discharge bulb control unit -J343-, sales type AM1	1173-1174
1.13 Front left headlight -MX1-, sales type AN1	1175
1.14 Mechatronic unit for dual clutch gearbox -J743-	1176-1181
1.14.1 Mechatronic unit for dual clutch gearbox -J743-, 20-pin connector -T20c-	1176-1177
1.14.2 Mechatronic unit for dual clutch gearbox -J743-, 25-pin connector -T25a-	1178-1179
1.14.3 Mechatronic unit for dual clutch gearbox -J743-	1180-1181
1.15 Radiator fan -VX57-	1182-1183
1.16 Adaptive cruise control unit -J428-	1184-1185
805 - - Fitting locations: Control units in middle part of vehicle - 3	1186-1283
1. Control units in middle part of vehicle	1186-1283
1.1 Overview of control units	1186-1188
1.2 Sliding sunroof adjustment control unit -J245-/sunroof roller blind control unit -J394-	1189-1190
1.3 Fuel pump control unit -J538-, for models with petrol engine	1191-1192
1.4 Fuel pump control unit -J538-, for models with diesel engine	1193-1194
1.5 Multifunction steering wheel control unit -J453-	1195-1196
1.6 Massage control unit -J740-	1197-1198
1.7 Driver door control unit -J386-	1199-1201
1.8 Steering column electronics control unit -J527-, up to July 2018	1202-1204
1.9 Steering column electronics control unit -J527-, for models with no heated steering wheel, from July 2018	1205-1206
1.10 Steering column electronics control unit -J527-, for models with heated steering wheel, from July 2018	1207-1208
1.11 Control unit for electronic steering column lock -J764-	1209-1210
1.12 Digital sound package control unit -J525-, up to July 2019	1211-1212
1.13 Digital sound package control unit -J525-, from July 2019	1213-1214
1.14 Interface for entry and start system -J965-, up to July 2018	1215-1216
1.15 Interface for entry and start system -J965-, from July 2018	1217-1218
1.16 Onboard supply control unit -J519-, up to July 2018	1219-1222
1.17 Onboard supply control unit -J519-, from July 2018	1223-1226
1.18 Parking aid control unit -J446-/park assist steering control unit -J791-	1227-1229
1.19 Emergency call module control unit and communication unit -J949-, up to July 2019	1230-1231
1.20 Emergency call module control unit and communication unit -J949-, from July 2019	1232-1233
1.21 Data bus diagnostic interface -J533-	1234-1235
1.22 Control unit for cornering light and headlight range control -J745-	1236-1239
1.22.1 Control unit for cornering light and headlight range control -J745- with 20-pin connector -T20-	1238-1239
1.23 Airbag control unit -J234-	1240
1.24 Fresh air blower control unit -J126-	1241-1242
1.25 Telephone bracket -R126-	1243-1244
1.26 Control unit 1 for information electronics -J794-, up to July 2019	1245-1247
1.27 Control unit 1 for information electronics -J794-, from July 2019	1248-1250
1.28 Chip card reader -D8-	1251
1.29 Control unit in dash panel insert -J285-	1252-1253
1.30 Climatronic control unit -J255-	1254-1256
1.31 Air conditioning system control unit -J301-	1257-1258
1.32 Display unit for front information display and operating unit control unit -J685-	1259-1262
1.32.1 Display unit for front information display and operating unit control unit -J685-	1262
1.33 Front passenger door control unit -J387-	1263-1265
1.34 Front camera for driver assist systems -R242-	1266-1267
1.35 Main beam assist control unit -J844-	1268-1269
1.36 Special vehicle control unit -J608-	1270
1.37 Taxi alarm remote control, control unit -J601-	1271-1272
1.38 Electronically controlled damping control unit -J250-	1273-1274
1.39 Control unit for navigation system -J856-	1275-1276
1.40 Selector lever -E313-	1277-1278
1.41 Control unit for electronic steering column lock -J764-, up to July 2018	1279-1280
1.42 Control unit for electronic steering column lock -J764-, from July 2018	1281-1283
806 - - Fitting locations: Control units in rear part of vehicle - 3	1284-1295
1. Control units in rear part of vehicle	1284-1295
1.1 Overview of control units	1284
1.2 Control unit for reducing agent heater -J891-	1285
1.3 Two-way signal amplifier for mobile telephone/data services -J984-	1286-1287

1.4 Blind Spot Monitor control unit 2 -J1087-	1288
1.5 Blind Spot Monitor control unit -J1086-	1289-1290
1.6 Trailer detector control unit -J345-	1291-1292
1.7 Remote control receiver for auxiliary coolant heater -R149-	1293-1295
807 - -Fitting locations: Coupling points - 3	1296-1323
1. Coupling points	1296-1323
1.1 Coupling point in engine compartment, left -TML-	1296-1297
1.2 Diagnostic connection -U31-	1298-1299
1.2.1 Diagnostic connection -U31-, LHD models	1298
1.2.2 Diagnostic connection -U31-, RHD models	1299
1.3 Coupling point on front left door -TTVL-	1300
1.4 Coupling point on rear left door -TTHL-	1301
1.5 Coupling point in interior, below left -TIUL-	1302
1.6 Coupling point in interior, below left -TIUL-, only vehicles with special equipment	1303
1.7 Coupling point for front left seat -TSVL-, LHD models	1304
1.8 Coupling point for front left seat -TSVL-, RHD models	1305
1.9 Coupling point for rear left seat -TSHL-	1306
1.10 Coupling point for roof -TH-	1307
1.11 Coupling point for roof, centre -THM-	1308
1.12 Coupling point in interior, centre -TIM-	1309
1.13 Coupling point in interior, right -TIR-	1310
1.14 Coupling point in interior -TI-, only special vehicles	1311
1.15 Coupling point on front right door -TTVR-	1312
1.16 Coupling point on rear right door -TTHR-	1313
1.17 Coupling point in interior, below right -TIUR-	1314
1.18 Coupling point for front right seat -TSVR-, left-hand drive models	1315
1.19 Coupling point for front right seat -TSVR-, right-hand drive models	1316
1.20 Coupling point for rear right seat -TSHR-	1317
1.21 Coupling point on rear lid -THK-	1318
1.22 Coupling point on left C-pillar -TCL-, taxi equipment	1319
1.23 Coupling point in luggage compartment, left -THRL-	1320
1.24 Coupling point in luggage compartment, right -THRR-	1321
1.25 Coupling point on rear cross member, left -TAQL-	1322
1.26 Coupling point for reducing agent metering system -TRMD-	1323