



Contents

1	Engine list	1
2	Service work	18
2.1	Information about flexible or fixed service	18
2.2	Service tables up to model year ➤2020	21
2.3	Service tables as of model year 2021➤	30
3	General information	39
3.1	General warnings for working on high-voltage system	39
3.2	Raising vehicle on lifting platform	39
3.3	Entries in service schedule	41
3.4	Severe operating conditions	41
3.5	Vehicle data sticker	42
3.6	Connecting vehicle diagnostic tester	43
3.7	Vehicle identification number	44
3.8	Countries with hot climate	45
3.9	Country overview for petrol not compliant with EN 228	46
3.10	Country overview for diesel not compliant with EN 590/EN 15940	47
3.11	Engine code and engine number	48
3.12	Countries with high levels of dust	48
3.13	Identification plate	49
3.14	Shortened intervals for spark plug replacement	50
4	Descriptions of work	55
4.1	Swivel joints and suspension link mountings: inspecting	57
4.2	All-wheel drive coupling: changing oil	59
4.3	Automatic headlight control and static cornering light: checking function	63
4.4	Automatic gearbox 09G: changing ATF	64
4.5	Battery (12V): checking battery terminal clamps for secure seating	64
4.6	Battery (12V): checking with battery tester (always refer to workshop manual)	69
4.7	Battery (12V): checking (only applies for Golf GTE and e-Golf)	69
4.8	Status of battery (12V): reading - sending diagnosis protocol via online connection	70
4.9	Front passenger front airbag: checking key switch and "ON/OFF function"	70
4.10	Tyres: checking condition, wear pattern, tyre pressure and tread depth	71
4.11	Brake and clutch system: changing brake fluid	128
4.12	Brake system and shock absorbers: inspecting for leaks and damage	135
4.13	Brake fluid level: checking	135
4.14	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	137
4.15	Diesel fuel filter: draining	140
4.16	Diesel fuel filter: renewing	140
4.17	Diesel particulate filter: checking	142
4.18	Dual clutch gearbox 0D9: changing gear oil and filter	142
4.19	Dual clutch gearbox 0DD: changing gear oil	143
4.20	Dual clutch gearbox 0DL: changing gear oil	143
4.21	Dual clutch gearbox 0GC: changing gear oil	143
4.22	Three-phase current drive: calibrating	143
4.23	Electric windows: checking positioning (open and close functions)	143
4.24	Natural gas system: resetting interval display if a check in line with ECE ruling 110 has been carried out	144
4.25	Natural gas system (bivalent): visual inspection of natural gas fuel tank for corrosion and leakage	144
4.26	Natural gas system (monovalent): visual inspection of natural gas fuel tank for corrosion and leakage	150
4.27	Natural gas system: checking wax layer between natural gas fuel tank and fuel tank shut-off valve	156
4.28	Natural gas tank: renewing	156



4.29	Natural gas filler connection and sealing cap: checking condition, if necessary cleaning and checking seal	157
4.30	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	157
4.31	Boots: inspecting	157
4.32	High-voltage battery: checking charge level	158
4.33	Maintenance of high-voltage battery	158
4.34	High-voltage battery: charging	159
4.35	High voltage components and high-voltage cables: inspecting for damage and correct routing and securing of lines	159
4.36	Hybrid components: inspect for damage to high-voltage components and wires.	160
4.37	Interior and exterior body: inspecting for corrosion with doors and flaps open	160
4.38	Poly V-belt: renewing	161
4.39	Poly V-belt: checking condition	161
4.40	Cooling system: checking frost protection and coolant level	163
4.41	Cooling system for high-voltage system: checking coolant additive and coolant level	166
4.42	Air filter: cleaning housing and renewing filter element	169
4.43	Multi-purpose additive for diesel fuel: adding	179
4.44	Multi-purpose additive for petrol fuel: adding	181
4.45	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	183
4.46	Engine cover panel "top": removing and installing	184
4.47	Motor compartment cover (noise insulation) "bottom": removing and installing	186
4.48	Engine oil level: checking	186
4.49	Engine oil: draining, renewing oil filter and filling engine oil	187
4.50	Engine oil: capacities and specifications up to model year ▶2020	195
4.51	Engine oil: capacities and specifications as of model year 2021▶	202
4.52	Panoramic sliding sunroof	203
4.53	Panorama sliding roof with rear panorama roof	210
4.54	Road test: performing (driving behaviour, noises, air conditioner etc.)	212
4.55	Wheel securing bolts: tightening to specified torque	213
4.56	Reducing agent (AdBlue®/DEF): replenishing	214
4.57	Reducing agent (AdBlue®/DEF): changing	218
4.58	Tyre Pressure Loss Indicator: calibrating	218
4.59	Tyre repair set: checking	219
4.60	Window wash/wipe system and headlight washer system: checking function	221
4.61	Headlight adjustment: checking halogen headlights	225
4.62	Headlight adjustment: checking LED headlights with cornering light	229
4.63	Headlight adjustment: checking LED headlights	235
4.64	Headlight adjustment: checking fog lights	239
4.65	Sliding sunroof drains at rear (Golf saloon): check for blockage, clean if necessary	242
4.66	Sliding sunroof drains at front: check for blockage, clean if necessary	242
4.67	Service interval display: Reset	243
4.68	Service interval display: recoding	244
4.69	Track rods: checking clearance, attachment and boots	246
4.70	Interior filter: cleaning housing and renewing filter element	246
4.71	Transportation mode: switching off	247
4.72	Transportation devices: removing blocking pieces	247
4.73	Clock and date: setting	249
4.74	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	249
4.75	Front differential lock: changing oil	249
4.76	Warning stickers, e-Golf: checking	249
4.77	Warning stickers, Golf GTE: checking	250
4.78	Water drain valves at rear (Golf SV): checking for blockages, cleaning as necessary	250
4.79	Water drain valves at rear (Golf estate): check for blockages, clean if necessary	251
4.80	Toothed belt (petrol engines): renewing	252



4.81	Camshaft drive toothed belt (diesel engines): renewing	252
4.82	Spark plugs: renewing	252
5	Exhaust emissions test	272
5.1	Exhaust emissions test for petrol engines	272
5.2	Exhaust emissions test for diesel engines	274
6	00 Periodic Technical Inspection (PTI)	278
7	Glossary	282
8	—Change history—	285