



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions for when using test instruments and measuring equipment during a road test	1
2 Repair instructions	2
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	2
2.4 Routing and attachment of lines	2
3 Battery	4
3.1 Types of battery	4
3.2 Battery - general notes	4
27 - Starter, current supply, CCS	5
1 Battery	5
1.1 Assembly overview – battery	5
1.2 Removing and installing battery	10
1.3 Disconnecting and connecting battery	15
1.4 Removing and installing battery tray	17
1.5 Removing and installing protective diode for onboard supply for coasting function J1159	18
1.6 Checking battery	19
1.7 Charging battery	19
1.8 Removing and installing earth wire with battery monitor control unit J367	19
1.9 Adapting battery monitor control unit J367	20
2 Alternator	21
2.1 Assembly overview - alternator	21
2.2 Removing and installing alternator	22
2.3 Checking alternator	28
2.4 Removing and installing poly V-belt pulley	28
2.5 Removing and installing voltage regulator	37
3 Starter	41
3.1 Assembly overview – starter	41
3.2 Removing and installing starter	43
4 Cruise control system (CCS)	50
5 Start/stop system	51
5.1 General description - start/stop system	51
5.2 Overview of fitting locations - start/stop system	51
6 Adaptive cruise control	52
6.1 Overview of fitting locations - adaptive cruise control	52
6.2 Removing and installing automatic distance control unit	52
6.3 Calibrating adaptive cruise control	53
90 - Gauges, instruments	54
1 Dash panel insert	54
1.1 Assembly overview - dash panel insert	54
1.2 Removing and installing dash panel insert KX2	54
2 Horn	57
2.1 Assembly overview - horn	57
2.2 Removing and installing treble horn H2 and bass horn H7	57
2.3 Removing and installing bracket for treble horn H2/bass horn H7	59



92 - Windscreen wash/wipe system	60
1 Windscreen wiper system	60
1.1 Assembly overview - windscreen wiper system	60
1.2 Moving wipers to service position	62
1.3 Removing and installing wiper blade	62
1.4 Removing and installing wiper arms	63
1.5 Adjusting wiper arms	66
1.6 Removing and installing wiper motor V	68
1.7 Deactivating APP function of wiper motor	69
1.8 Removing and installing rain and light sensor	70
2 Windscreen washer system	74
2.1 Assembly overview - windscreen washer system	74
2.2 Removing and installing washer fluid reservoir	77
2.3 Removing and installing windscreen washer fluid level sender	80
2.4 Removing and installing windscreen washer pump	81
2.5 Removing and installing spray jets	82
2.6 Adjusting spray jet	83
3 Rear window wiper system	84
3.1 Assembly overview - rear window wiper system	84
3.2 Removing and installing wiper blade	84
3.3 Removing and installing wiper arm	85
3.4 Adjusting wiper arm	86
3.5 Removing and installing rear window wiper motor V12	87
4 Rear window washer system	90
4.1 Assembly overview - rear window washer system	90
4.2 Removing and installing washer fluid reservoir	90
4.3 Removing and installing rear window washer pump	91
4.4 Removing and installing spray jet	91
4.5 Adjusting spray jet	91
5 Headlight washer system	92
5.1 Assembly overview - headlight washer system	92
5.2 Removing and installing washer fluid reservoir	93
5.3 Removing and installing headlight washer system pump V11	93
5.4 Adjusting spray jets	94
5.5 Removing and installing pop-up cylinder	94
6 Washer fluid lines	97
6.1 Repairing washer fluid lines	97
94 - Lights, bulbs, switches - exterior	98
1 Headlights	98
1.1 Assembly overview – headlight	98
1.2 Removing and installing headlight	103
1.3 Adjusting headlights	106
1.4 Adjusting headlight installation position	106
1.5 Removing and installing front turn signal bulb M5/M7	108
1.6 Installing repair kit for headlight housing	110
1.7 Converting headlights from driving on right to driving on left	111
1.8 Converting headlights from driving on left to driving on right	112
1.9 Removing and installing headlight range control motor V48/V49	112
1.10 Removing and installing headlight dipped beam bulb	116
1.11 Removing and installing headlight main beam bulb M30/M32	117
1.12 Removing and installing LED modules for daytime running light and side light L176/L177	119
1.13 Removing and installing bulbs for cornering light L148/L149	121
1.14 Removing and installing output module for headlight J667/J668	123



1.15	Removing and installing output module 1 for LED headlight A31/A27	124
2	Fog lights	126
2.1	Assembly overview - fog lights	126
2.2	Removing and installing fog light	126
2.3	Removing and installing fog light bulb L22/L23	128
2.4	Adjusting fog lights	129
3	Lights in exterior mirror	130
3.1	Assembly overview - lights in exterior mirror	130
3.2	Removing and installing turn signal	131
3.3	Removing and installing entry light in exterior mirror	133
4	Tail light clusters	135
4.1	Assembly overview - tail light cluster in body	135
4.2	Assembly overview - tail lights in rear lid	135
4.3	Removing and installing tail light in rear lid	136
4.4	Adjusting installation position of tail light	138
4.5	Removing and installing tail light cluster	139
5	High-level brake light	141
5.1	Assembly overview – high-level brake light	141
5.2	Removing and installing high-level brake light	141
6	Number plate light	144
6.1	Assembly overview – number plate lights	144
6.2	Removing and installing number plate light X4/X5	144
7	Entry and start authorisation system	146
7.1	Overview of fitting locations - entry and start authorisation system	146
7.2	Overview of fitting locations - keyless entry system	148
7.3	Removing and installing interface for entry and start system J965	152
7.4	Removing and installing door exterior handle contact sensor G415/G416	153
7.5	Removing and installing interior aerial 1 for entry and start authorisation R138	154
7.6	Removing and installing front passenger side aerial for entry and start system R135	154
7.7	Removing and installing driver side aerial for entry and start system R134	155
7.8	Removing and installing luggage compartment aerial for entry and start system R137	155
7.9	Removing and installing rear bumper aerial for entry and start system R136	156
8	Steering column switch module	157
8.1	Assembly overview - steering column switch module	157
8.2	Removing and installing steering column switch module	159
8.3	Removing and installing steering column electronics control unit J527	162
8.4	Removing and installing steering column combination switch	166
8.5	Removing and installing turn signal switch E2	167
8.6	Removing and installing cruise control system switch E45	167
8.7	Removing and installing intermittent wiper switch E22	167
8.8	Removing and installing immobiliser reader coil D2	168
8.9	Removing and installing ignition/starter switch	168
8.10	Removing and installing lock cylinder	170
8.11	Removing and installing steering lock housing	172
8.12	Removing and installing ignition key withdrawal lock solenoid N376	173
9	Parking aid	175
9.1	Assembly overview – parking aid	175
9.2	Removing and installing parking aid control unit J446	179
9.3	Removing and installing front parking aid warning buzzer H22	181
9.4	Removing and installing rear parking aid warning buzzer H15	182
9.5	Removing and installing front parking aid senders	183
9.6	Removing and installing rear parking aid senders	184
10	Park assist steering	187
10.1	Assembly overview - park assist steering	187



10.2	Removing and installing control unit	188
10.3	Removing and installing front senders	188
10.4	Removing and installing rear senders	189
11	Automatic headlight range control	191
11.1	Assembly overview - automatic headlight range control	191
11.2	Removing and installing cornering light and headlight range control unit J745	192
12	Towing bracket	195
12.1	Assembly overview - towing bracket socket	195
12.2	Trailer socket U10	195
12.3	Removing and installing trailer detector control unit J345	196
13	Blind Spot Monitor	198
13.1	Assembly overview - Blind Spot Monitor	198
13.2	Removing and installing warning lamp for Blind Spot Monitor K303/K304	199
13.3	Removing and installing Blind Spot Monitor control unit J1086/J1087	199
96	Lights, bulbs, switches - interior	201
1	Lights	201
1.1	Overview of fitting locations - lights in dash panel	201
1.2	Overview of fitting locations - lights in front doors	202
1.3	Overview of fitting locations - lights in centre console	203
1.4	Overview of fitting locations - lights in luggage compartment	204
1.5	Overview of fitting locations - lights in roof trim	205
1.6	Removing and installing glove compartment light W6	207
1.7	Replacing bulb for glove compartment light W6	208
1.8	Removing and installing front footwell light K268/K269	209
1.9	Removing and installing front footwell illumination bulb L151/L152	210
1.10	Removing and installing Central locking SAFELOCK function warning lamp K133	211
1.11	Removing and installing door opener illumination bulb L108/L109	212
1.12	Removing and installing light 2 for front door background lighting L203/L204	213
1.13	Removing and installing selector lever position display Y26	213
1.14	Removing and installing luggage compartment light W3	213
1.15	Removing and installing illuminated vanity mirror W20/W14	215
1.16	Removing and installing bulb for front interior light W1	216
1.17	Removing and installing bulb for rear interior light WX2	218
1.18	Renewing bulb of rear interior light W47/W48	220
2	Controls	223
2.1	Overview of fitting locations - controls in dash panel	224
2.2	Overview of fitting locations - controls in front doors	226
2.3	Overview of fitting locations - controls in rear doors	226
2.4	Overview of fitting locations - controls in centre console	227
2.5	Overview of fitting locations - controls in luggage compartment	228
2.6	Overview of fitting locations - controls in roof trim	229
2.7	Removing and installing rotary light switch EX1	232
2.8	Removing and installing driving mode selection button E735	233
2.9	Removing and installing Start/Stop operation button E693	233
2.10	Removing and installing TCS and ESP button E256	233
2.11	Removing and installing parking aid button E266	233
2.12	Removing and installing park assist steering button E581	233
2.13	Removing and installing switch module in centre console EX23/EX30	234
2.14	Removing and installing hazard warning light switch EX3	235
2.15	Removing and installing buttons for seat heating E653/E654	236
2.16	Removing and installing glove compartment light switch E26	236
2.17	Removing and installing exterior mirror adjuster EX11	238
2.18	Removing and installing operating unit for window regulator in driver door E512	238
2.19	Removing and installing front passenger side window regulator button E716	239



2.20	Removing and installing driver side interior locking button for central locking system E308	240
2.21	Removing and installing door contact switch F2/F3	241
2.22	Removing and installing rear window regulator switch in door E52/E54	241
2.23	Removing and installing rear door contact switches F10/F11	242
2.24	Removing and installing electromechanical parking brake button E538/auto-hold button E540	242
2.25	Removing and installing the starter button E378	243
2.26	Removing and installing rear lid contact switch for anti-theft alarm F123	243
2.27	Removing and installing vanity mirror contact switch F147/F148	244
2.28	Removing and installing sunroof button E325	244
2.29	Removing and installing front interior light/reading light	245
2.30	Removing and installing rear interior light/reading light	246
2.31	Removing and installing front reading light button E633/E634	247
2.32	Removing and installing button 1 for roof roller blind E584	248
3	Anti-theft alarm	249
3.1	Assembly overview - interior monitor	249
3.2	Removing and installing alarm horn H12	249
3.3	Removing and installing anti-theft alarm sensor G578	251
4	Front camera for driver assist systems	252
4.1	Removing and installing front camera for driver assist systems	252
5	Cigarette lighter, socket	253
5.1	Removing and installing cigarette lighter U1	253
5.2	Removing and installing socket illumination bulb L42	253
5.3	Removing and installing rear cigarette lighter illumination bulb L32	253
5.4	Removing and installing electric socket U	253
97 - Wiring		254
1	Relay carriers, fuse holders, electronics boxes	254
1.1	Overview of fitting locations - relay carriers, fuse holders, electronics boxes	254
1.2	Removing and installing electronics box (E-box)	257
1.3	Removing and installing relay and fuse holder in electronics box	258
1.4	Removing and installing relay and fuse carrier behind dash panel	262
2	Select Control units	265
2.1	Overview of fitting locations - control units	265
2.2	Removing and installing onboard supply control unit J519	266
2.3	Removing and installing data bus diagnostic interface J533	271
2.4	Removing and installing bracket for onboard supply control unit J519	273
2.5	Removing and installing parking aid control unit J446/park assist steering control unit J791	275
3	Connectors	277
3.1	Repairing electrical wiring harnesses and plug-in connections	277
4	Releasing and dismantling connector housings	278
5	Repairing aerial wires	279
6	Fibre optic cables	280
7	Vehicle diagnosis, testing and information systems	281