



Contents

00 - Technical data	1
1 Repair instructions	1
1.1 General repair instructions	1
1.2 Routing and attachment of lines	1
1.3 Notes on repair of CAN bus wiring	1
1.4 General information	1
91 - Communication	3
1 Infotainment system	3
1.1 Components of infotainment system	3
1.2 Overview of fitting locations - Infotainment system	5
1.3 Removing and installing infotainment system display	7
1.4 Removing and installing control unit 1 for information electronics J794	8
1.5 Removing and installing CD player R89	9
1.6 Renewing rotary knobs of display unit for front information display and operating unit control unit J685	10
2 Sound system	11
2.1 Components of sound system	11
2.2 Overview of fitting locations - sound system	12
2.3 Removing and installing digital sound package control unit/amplifier	12
2.4 Removing and installing retainer for digital sound package control unit J525	14
2.5 Removing and installing rear treble loudspeakers R14 / R16	15
2.6 Removing and installing front treble loudspeakers R20 / R22	16
2.7 Removing and installing rear bass loudspeakers R15 / R17	16
2.8 Removing and installing front bass loudspeakers R21 / R23	18
2.9 Removing and installing subwoofer R211	19
2.10 Removing and installing centre loudspeaker	20
3 Aerial systems	22
3.1 Components of aerial systems	22
3.2 Overview of fitting locations - aerial systems	22
3.3 Removing and installing amplitude modulation (AM) frequency filter R177	24
3.4 Removing and installing frequency modulation (FM) frequency filter R178 / R179	25
3.5 Removing and installing aerial module	26
3.6 Removing and installing roof aerial	27
3.7 Removing and installing bumper aerials	28
4 Radio	30
4.1 Components of radio system	30
4.2 Removing and installing radio	30
5 Telephone system	32
5.1 Mobile telephone preparation	32
5.2 Overview of fitting locations - telephone system	34
5.3 Removing and installing telephone microphone R38	35
5.4 Removing and installing two-way signal amplifier for mobile telephone/data services J984	36
5.5 Removing and installing storage compartment with interface for mobile telephone R265	37
6 Navigation system	39
6.1 Components of navigation system	39
6.2 Overview of fitting locations - navigation system	39
6.3 Removing and installing control unit for navigation system	40
7 Reversing camera system	41
7.1 Components of reversing camera system	41
7.2 Overview of fitting locations - reversing camera system	41



7.3	Removing and installing reversing camera R189	42
7.4	Calibrating reversing camera system	43
8	Multifunction steering wheel	49
8.1	Components of multifunction steering wheel	49
8.2	Assembly overview - multifunction steering wheel	49
8.3	Removing and installing steering wheel multifunction buttons E441 / E440	50
8.4	Removing and installing Tiptronic switch in steering wheel E439 / E438	53
9	Connection for external multimedia devices	55
9.1	Removing and installing connection for external multimedia devices	55
9.2	Removing and installing USB hub R293	55
10	Car-Net	57
10.1	General information	57
10.2	Overview of fitting locations - Car-Net services	57
10.3	Removing and installing emergency call module control unit and communication unit J949	60
10.4	Renewing battery in emergency call module control unit and communication unit J949	61
10.5	Removing and installing telematics button module E734	62
10.6	Removing and installing loudspeaker for emergency call module R335	63
10.7	Renewing control unit for emergency call module and communication unit J949	64