



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	2
1.2 Safety measures when working with pyrotechnic components	3
1.3 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	4
1.4 Additional safety regulations for side airbag	5
1.5 Additional safety instructions for curtain airbag	5
1.6 Safety regulations for crash sensors (pressure sensors) for front side airbags	6
1.7 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	6
1.8 Checking airbag securing parts after an accident	8
1.9 Accident without airbag triggering	8
1.10 Checking seat belts	9
1.11 Check belt webbing	9
1.12 Checking inertia reel (locking mechanism)	10
1.13 Visually checking belt buckle	11
1.14 Check operation of belt buckle	11
1.15 Checking belt relays, and buckle tongues	11
1.16 Checking securing parts and anchorage points after an accident	11
1.17 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific	12
1.18 Checking child seat anchors after an accident	12
1.19 Safety instructions for automatic anti-dazzle interior mirror	13
2 Repair notes	14
2.1 Contact corrosion	14
2.2 Routing and attachment of lines	14
68 - Interior equipment	15
1 Compartments/covers	15
1.1 Overview of fitting locations - storage compartments/covers	15
1.2 Assembly overview - centre storage compartment	16
1.3 Assembly overview - driver side footwell cover	17
1.4 Assembly overview - driver side dash panel cover	18
1.5 Assembly overview - steering column trim	19
1.6 Assembly overview - storage compartment on driver side	20
1.7 Assembly overview - glove compartment	21
1.8 Assembly overview - storage compartment in roof headliner	22
1.9 Removing and installing centre storage compartment	22
1.10 Removing and installing driver side footwell cover	23
1.11 Removing and installing driver side storage compartment	25
1.12 Removing and installing dash panel cover on driver side	26
1.13 Removing and installing upper steering column trim	28
1.14 Removing and installing lower steering column trim	29
1.15 Removing and installing front passenger side footwell cover	31
1.16 Removing and installing glove compartment opener	31
1.17 Service position for glove compartment lid	33
1.18 Removing and installing damper element for glove compartment lid	33
1.19 Removing and installing glove compartment	34
1.20 Removing and installing glove compartment cover	37
1.21 Removing and installing headliner storage compartment	37
2 Equipment	39
2.1 Assembly overview - sun visors	39



2.2	Assembly overview - roof grab handle	40
2.3	Removing and installing sun visor	40
2.4	Removing and installing sun visor centre mount	42
2.5	Removing and installing roof grab handle	43
2.6	Removing and installing bracket for roof grab handle	45
3	Centre console	47
3.1	Assembly overview - centre console	47
3.2	Removing and installing front ashtray	49
3.3	Removing and installing rear centre console trim	49
3.4	Removing and installing centre console trim in footwell	49
3.5	Removing and installing trim for operating and display unit	51
3.6	Removing and installing centre piece	53
3.7	Removing and installing centre console insert	54
3.8	Removing and installing centre console	55
3.9	Removing and installing centre console bracket	59
4	Front centre armrest	61
4.1	Assembly overview - front centre armrest	61
4.2	Removing and installing front centre armrest	61
5	On inside	63
5.1	Assembly overview - interior mirror	63
5.2	Removing and installing interior mirror	70
5.3	Bonding retaining plate for interior mirror	81
69	Passenger protection	85
1	Seat belts	85
1.1	Overview of fitting locations - seat belts and anchorage points	85
1.2	Assembly overview - front three-point seat belt	88
1.3	Assembly overview - rear outer three-point seat belt	89
1.4	Assembly overview - rear centre three-point seat belt	91
1.5	Assembly overview - front belt buckle	92
1.6	Assembly overview - rear belt buckle	93
1.7	Removing and installing front three-point seat belt	94
1.8	Removing and installing rear three-point seat belt	96
1.9	Removing and installing front belt guide	99
1.10	Removing and installing front belt end fitting	99
1.11	Removing and installing rear outer belt end fitting	100
1.12	Removing and installing rear centre belt end anchor	100
1.13	Removing and installing belt height adjuster	100
1.14	Removing and installing front belt buckle	102
1.15	Removing and installing rear belt buckle	103
2	Child seat anchors	106
2.1	Assembly overview - rear child seat anchors	106
2.2	Removing and installing guide for ISOFIX child seat anchor	107
2.3	Removing and installing cover for Top Tether child seat anchor	107
3	Airbag system	108
3.1	Overview of fitting locations - airbag system	108
4	Airbag control unit	110
4.1	Assembly overview - airbag control unit	110
4.2	Removing and installing airbag control unit J234	110
5	Driver's airbag	114
5.1	Assembly overview - driver side airbag	114
5.2	Removing and installing airbag unit with igniter	115
5.3	Renewing connector on airbag	119
6	Front passenger side airbag	121



6.1	Assembly overview - front passenger side airbag	121
6.2	Removing and installing front passenger side airbag unit with igniter	122
6.3	Removing and installing key-operated switch to deactivate front passenger side airbag	125
6.4	Removing and installing front passenger side airbag deactivated warning lamp K145	125
7	Side airbags	126
7.1	Assembly overview - front side airbag	126
7.2	Assembly overview - rear side airbag	127
7.3	Removing and installing front side airbag with igniter	127
7.4	Removing and installing rear side airbag with igniter	128
8	Curtain airbags	130
8.1	Assembly overview - curtain airbag	130
8.2	Removing and installing curtain airbag with igniter	130
9	Knee airbags	135
9.1	Assembly overview - knee airbag	135
9.2	Removing and installing knee airbag with igniter	136
10	Airbag crash sensors	139
10.1	Overview of fitting locations - airbag crash sensors	139
10.2	Removing and installing front airbag crash sensor, driver side G283	140
10.3	Removing and installing front side airbag crash sensor G179 / G180	143
10.4	Removing and installing rear side airbag crash sensor G256 / G257	149
11	Seat belt verification	151
11.1	Removing and installing Seat occupied sensor, front passenger side G128	151
70	Trim, insulation	154
1	Front door trims	154
1.1	Assembly overview - front door trim	154
1.2	Removing and installing front door trim	155
1.3	Removing and installing trim	159
1.4	Removing and installing mirror cover trim	162
1.5	Removing and installing interior door handle	162
2	Rear door trims	163
2.1	Assembly overview - rear door trim	163
2.2	Removing and installing rear door trim	164
3	Dash panel	168
3.1	Assembly overview - dash panel	168
3.2	Removing and installing dash panel end cover	169
3.3	Removing and installing dash panel trim	169
3.4	Removing and installing light switch trim	174
3.5	Removing and installing dash panel insert trim	175
3.6	Removing and installing dash panel	176
3.7	Removing and installing dash panel vents	185
3.8	Removing and installing side defroster vent	186
4	Central tube for dash panel	188
4.1	Assembly overview - dash panel central tube	188
4.2	Removing and installing crash bar	189
4.3	Removing and installing dash panel central tube	190
5	Interior trims	196
5.1	Overview of fitting locations - interior trims	196
5.2	Assembly overview - sill panel moulding	198
5.3	Assembly overview - A-pillar trim	199
5.4	Assembly overview - B-pillar trim	202
5.5	Assembly overview - C-pillar trim	203
5.6	Assembly overview - wheel housing trim	204
5.7	Assembly overview - foot rest and floor covering	205



5.8	Removing and installing sill panel moulding	206
5.9	Removing and installing A-pillar gap cover	208
5.10	Removing and installing A-pillar trim	208
5.11	Removing and installing B-pillar trim	216
5.12	Removing and installing C-pillar trim	220
5.13	Removing and installing wheel housing trims	222
5.14	Removing and installing foot rest	224
5.15	Removing and installing floor covering	226
6	Luggage compartment trims	228
6.1	Overview of fitting locations - luggage compartment trims	228
6.2	Assembly overview - rear shelf support	230
6.3	Assembly overview - luggage compartment side trim	231
6.4	Assembly overview - luggage compartment floor	232
6.5	Assembly overview - upper rear lid trim	233
6.6	Assembly overview - lower rear lid trim	234
6.7	Removing and installing lock carrier trim	234
6.8	Removing and installing rear shelf support	235
6.9	Removing and installing fastening rings	237
6.10	Removing and installing support for luggage compartment floor	238
6.11	Removing and installing luggage compartment side trim	239
6.12	Removing and installing upper rear lid trim	240
6.13	Removing and installing lower rear lid trim	242
7	Roof trims	244
7.1	Assembly overview - moulded headliner	244
7.2	Removing and installing roof end strip	245
7.3	Removing and installing moulded headlining	245
7.4	Installing roof reinforcement to body	248
72	Seat frames	253
1	Overview of seat variants	253
1.1	Overview of fitting locations - seat variants	253
1.2	Mounting front seat on seat repair stand	253
2	Front seats	256
2.1	Overview of fitting locations - electrical and electronic components	256
2.2	Assembly overview - front seat	258
2.3	Assembly overview - front backrest	260
2.4	Assembly overview - seat pan	262
2.5	Assembly overview - folding tray table	268
2.6	Assembly overview - fire extinguisher	269
2.7	Removing and installing front seat	269
2.8	Connecting and disconnecting airbag adapter	273
2.9	Removing and installing seat trim on tunnel side	274
2.10	Removing and installing seat trim on sill side	275
2.11	Removing and installing bracket for seat trim	279
2.12	Removing and installing front backrest	280
2.13	Removing and installing seat depth adjustment unit	281
2.14	Removing and installing seat rake adjustment unit	285
2.15	Removing and installing handle for seat height adjustment	286
2.16	Removing and installing seat height adjustment unit	287
2.17	Removing and installing backrest adjustment unit	289
2.18	Removing and installing lumbar support adjustment unit	290
2.19	Removing and installing head restraint	291
2.20	Removing and installing head restraint guide	292
2.21	Removing and installing storage compartment	293
2.22	Removing and installing lumbar support adjustment switch E176 / E177	294



2.23	Removing and installing lumbar support adjustment motor V125 / V126 / V129 / V130 . . .	295
2.24	Removing and installing massage control unit J740	296
3	Rear seats	297
3.1	Assembly overview - bench seat / individual seats	297
3.2	Assembly overview - rear seats	299
3.3	Assembly overview - locking mechanism	300
3.4	Assembly overview - load-through hatch and centre armrest	301
3.5	Removing and installing bench seat / individual seats	302
3.6	Removing and installing rear seats	303
3.7	Removing and installing trim for locking mechanism	307
3.8	Removing and installing locking mechanism for load-through hatch	307
3.9	Removing and installing through-loading aperture	309
3.10	Removing and installing centre armrest	310
3.11	Removing and installing seat trim on sill side	311
3.12	Removing and installing seat trim on tunnel side	312
3.13	Removing and installing head restraint	313
3.14	Removing and installing head restraint guide	313
74	Seat - padding, covers	314
1	Front seat covers and padding	314
1.1	Assembly overview - cover and padding for seat pan	314
1.2	Assembly overview - cover and padding for backrest	317
1.3	Assembly overview - seat heating element	318
1.4	Removing and installing cover and padding for seat pan	318
1.5	Removing and installing backrest cover and backrest padding	321
1.6	Separating cover and padding on seat pan	323
1.7	Separating cover and padding on backrest	326
1.8	Removing and installing seat heating element Z6 / Z8	330
1.9	Removing and installing backrest heating element Z7 / Z9	331
2	Rear seat covers and padding	332
2.1	Assembly overview - cover and padding for bench seat	332
2.2	Assembly overview - rear seat backrest cover and padding	333
2.3	Removing and installing rear seat backrest cover and padding	333
2.4	Removing and installing cover and padding of load-through hatch	336
2.5	Removing and installing intermediate padding	337
2.6	Separating cover and padding for rear bench seat	338
2.7	Separating cover and padding for rear seat backrest	339