



Contents

00 - Technical data	1
1 Vehicle identification data	1
1.1 Vehicle identification number	1
1.2 Type plate	3
1.3 Vehicle data sticker	4
2 Safety information	5
3 Moulded foam inserts	6
4 Galvanized body parts, high- and higher-strength and hot-formed body panels	8
5 Laser welding	11
6 Gaps/shut lines	12
6.1 Body, front	12
6.2 Body, centre	14
6.3 Body - rear	17
7 Body dimensions	19
7.1 Body, front	19
7.2 Body, centre	20
7.3 Body - rear	25
7.4 Floor panel - front	26
7.5 Floor panel - centre	27
7.6 Floor panel - rear	28
8 Alignment bracket set	29
8.1 Setup overview of complete body	29
9 Portal gauge	31
9.1 Setup overview of complete body	31
50 - Body - front	33
1 Renewing right bracket	33
1.1 Tools	33
1.2 Removing	33
1.3 Installing	35
2 Repairing threads for securing subframe	38
2.1 Contents of thread repair kit	39
2.2 Repairing threads	39
3 Renewing mounting bracket for subframe	43
3.1 Tools	44
3.2 Removing	44
3.3 Installing	45
4 Renewing cross panel for front longitudinal member	48
4.1 Tools	49
4.2 Removing	49
4.3 Installing	50
5 Renewing upper wheel housing longitudinal member	53
5.1 Tools	54
5.2 Removing	54
5.3 Installing	55
6 Renewing upper inner wheel housing longitudinal member	59
6.1 Tools	60
6.2 Removing	60
6.3 Installing	61
7 Renewing front wheel housing	64



7.1	Tools	65
7.2	Removing	65
7.3	Installing	67
8	Renewing front longitudinal member	72
8.1	Tools	73
8.2	Removing	73
8.3	Installing	74
9	Renewing front longitudinal member (left part section)	77
9.1	Tools	78
9.2	Removing	78
9.3	Installing when using complete longitudinal member assembly	80
9.4	Installing when using individual components of longitudinal member	83
9.5	Renewing studs	86
10	Renewing front longitudinal member (right part section)	88
10.1	Tools	89
10.2	Removing	89
10.3	Installing when using complete longitudinal member assembly	91
10.4	Installing when using individual components of longitudinal member	94
10.5	Renewing studs	97
51 - Body - centre		99
1	Renewing roof - vehicles with no panorama tilting sunroof	99
1.1	Tools	100
1.2	Removing	100
1.3	Installing	103
2	Renewing roof - vehicles with panorama tilting sunroof	115
2.1	Tools	116
2.2	Removing	116
2.3	Installing	120
3	Renewing side member cover plate	129
3.1	Tools	130
3.2	Removing	130
3.3	Installing	131
4	Renewing A-pillar	134
4.1	Tools	135
4.2	Removing	136
4.3	Installing	138
5	Renewing upper A-pillar reinforcement (part section)	142
5.1	Tools	143
5.2	Moulded foam inserts	143
5.3	Removing	143
5.4	Installing	146
6	Renewing A-pillar reinforcement (part section)	155
6.1	Tools	156
6.2	Removing	156
6.3	Installing	157
7	Renewing B-pillar	160
7.1	Tools	161
7.2	Type plate	162
7.3	Removing	163
7.4	Installing	164
8	Renewing B-pillar reinforcement	168
8.1	Tools	169
8.2	Type plate	169



8.3	Removing	170
8.4	Installing	171
9	Renewing B-pillar reinforcement (part section)	177
9.1	Tools	178
9.2	Type plate	178
9.3	Removing	179
9.4	Installing	182
10	Renewing outer side member	191
10.1	Tools	192
10.2	Type plate	192
10.3	Removing	193
10.4	Installing	194
53 - Body - rear		199
1	Renewing rear cross panel	199
1.1	Tools	200
1.2	Removing	201
1.3	Installing	204
2	Renewing lower corner part	209
2.1	Tools	210
2.2	Removing	210
2.3	Installing	211
3	Renewing cross panel member	214
3.1	Tools	215
3.2	Removing	215
3.3	Installing	216
4	Renewing luggage compartment floor	220
4.1	Tools	221
4.2	Removing	221
4.3	Installing	222
5	Renewing rear longitudinal member (part section)	226
5.1	Tools	227
5.2	Removing	227
5.3	Installing	229
6	Renewing rear longitudinal member (part section - second part section of torsion beam axle)	232
6.1	Tools	233
6.2	Moulded foam inserts	233
6.3	Removing	233
6.4	Installing	235
7	Renewing rear longitudinal member (part section - second part section of multi-link suspension)	244
7.1	Tools	245
7.2	Moulded foam inserts	245
7.3	Removing	245
7.4	Installing	248
8	Renewing side panel (part section)	258
8.1	Tools	259
8.2	Removing	259
8.3	Installing	262