



Contents

1	Engine list	1
2	Service work	16
2.1	Information about flexible or fixed service	16
2.2	Service tables	19
3	General information	29
3.1	General warnings for working on high-voltage system	29
3.2	Raising vehicle with lifting platform or trolley jack	29
3.3	Entries in service schedule	31
3.4	Severe operating conditions	31
3.5	Vehicle diagnostic tester	32
3.6	Vehicle identification number	33
3.7	Vehicle data sticker	34
3.8	Countries with hot climate	35
3.9	Country overview for petrol not compliant with EN 228	36
3.10	Country overview for diesel not compliant with EN 590/EN 15940	37
3.11	Engine code and engine number	38
3.12	Countries with high levels of dust	38
3.13	Identification plate	39
3.14	Shortened intervals for spark plug replacement	40
4	Descriptions of work	45
4.1	Swivel joints and suspension link mountings: inspecting	47
4.2	Automatic headlight control and static cornering light: checking function	48
4.3	Automatic gearbox 09G: changing ATF	50
4.4	Front passenger front airbag: checking key switch and "ON/OFF function"	50
4.5	Battery (12V): checking battery terminal clamps for secure seating	51
4.6	Battery (12V): checking with battery tester (always refer to workshop manual)	56
4.7	Battery (12V): checking (only applicable for Golf GTE and e-Golf)	56
4.8	Status of battery (12V): reading - sending diagnosis protocol via online connection	57
4.9	Tyres: checking condition, wear pattern, tyre pressure and tread depth	57
4.10	Brake and clutch system: changing brake fluid	102
4.11	Brake system and shock absorbers: inspecting for leaks and damage	109
4.12	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	110
4.13	Brake fluid level: checking	112
4.14	Dual clutch gearbox 0D9: changing gear oil and filter	114
4.15	Dual clutch gearbox 0DD: changing gear oil	114
4.16	Diesel particulate filter: checking	114
4.17	Three-phase current drive: calibrating	114
4.18	Electric windows: checking positioning (open and close functions)	115
4.19	Natural gas system: visually inspecting natural gas tank for corrosion and leakage	115
4.20	Natural gas system: checking wax layer between natural gas fuel tank and fuel tank shut-off valve	120
4.21	Natural gas tank: renewing	121
4.22	Natural gas filler connection and sealing cap: checking condition, if necessary cleaning and checking seal	121
4.23	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	122
4.24	Assembly overview - dual controls	122
4.25	Dual controls, greasing components	128
4.26	Dual controls, checking secure fit of bolts	139
4.27	Assembly overview - warning buzzer for control mechanism	142
4.28	Dual controls, adjusting switching point of warning buzzer for control mechanism	144
4.29	Boots: inspecting	146
4.30	All-wheel drive coupling: changing oil	146
4.31	High-voltage battery: checking charge level	150



4.32	Maintenance of high-voltage battery	150
4.33	High-voltage battery: charging	151
4.34	High voltage components and high-voltage cables: inspecting for damage and correct routing and securing of lines	151
4.35	Hybrid components: inspect for damage to high-voltage components and wires.	152
4.36	Interior and exterior body: inspecting for corrosion with doors and flaps open	152
4.37	Poly V-belt: renewing	153
4.38	Poly V-belt: checking condition	153
4.39	Cooling system: checking frost protection and coolant level	155
4.40	Cooling system for high-voltage system: checking coolant additive and coolant level	158
4.41	Diesel fuel filter: draining	161
4.42	Diesel fuel filter: renewing	162
4.43	Air filter: cleaning housing and renewing filter element	164
4.44	Multi-purpose additive for diesel fuel: adding	174
4.45	Multi-purpose additive for petrol fuel: adding	176
4.46	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	178
4.47	Engine cover panel "top": removing and installing	179
4.48	Motor compartment cover (noise insulation) "bottom": removing and installing	181
4.49	Engine oil level: checking	181
4.50	Engine oil: draining, renewing oil filter and filling engine oil	183
4.51	Engine oil: capacities and specifications	194
4.52	Panoramic sliding sunroof	198
4.53	Panorama sliding roof with rear panorama roof	206
4.54	Road test: performing (driving behaviour, noises, air conditioner etc.)	209
4.55	Wheel securing bolts: tightening to specified torque	209
4.56	Reducing agent (AdBlue®/DEF): replenishing	210
4.57	Reducing agent (AdBlue®/DEF): changing	215
4.58	Tyre pressure indicator: calibrating	215
4.59	Tyre repair set: checking	216
4.60	Window wash/wipe system and headlight washer system: checking function	217
4.61	Headlight adjustment: checking halogen headlights	222
4.62	Headlight adjustment: checking gas discharge headlights without DLA	227
4.63	Headlight adjustment: checking gas discharge headlights with DLA	232
4.64	Headlight adjustment: checking LED headlights	242
4.65	Headlight adjustment: checking fog lights	247
4.66	Sliding sunroof drains at rear (Golf saloon): check for blockage, clean if necessary	250
4.67	Service interval display: Reset	251
4.68	Service interval display: recoding	252
4.69	Sliding sunroof drains at front: check for blockage, clean if necessary	253
4.70	Track rods: checking clearance, attachment and boots	254
4.71	Interior filter: cleaning housing and renewing filter element	254
4.72	Transportation mode: switching off	255
4.73	Transportation devices: removing blocking pieces	255
4.74	Clock and date: setting	257
4.75	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	258
4.76	Front differential lock: changing oil	258
4.77	Warning stickers, e-Golf: checking	266
4.78	Warning stickers, Golf GTE: checking	266
4.79	Water drain valves at rear (Golf Estate, Golf SV): check for blockages, clean if necessary	267
4.80	Toothed belt (petrol engines): renewing	267
4.81	Camshaft drive toothed belt (diesel engines): renewing	267
4.82	Spark plugs: renewing	268
5	Exhaust emissions test	287
5.1	Exhaust emissions test for petrol engines	287



5.2	Exhaust emissions test for diesel engines	289
6	Glossary	293
7	—Change history—	296