



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when working on high-voltage system	1
1.3 Safety precautions when working in vicinity of high-voltage components	2
1.4 Safety precautions when working on subframe	2
2 Repair notes	3
2.1 Leaks at shock absorbers	3
2.2 Noises from shock absorbers	3
2.3 Checking shock absorbers when removed	4
2.4 Steering rack	4
2.5 Gaskets and seals	5
2.6 Nuts and bolts	5
2.7 Electrical components	5
2.8 Raising suspension to unladen position (vehicles with coil springs)	6
3 Evaluating accident vehicles	12
3.1 Check list for evaluating running gear on accident vehicles	12
4 Disposal	14
4.1 Releasing gas and draining front gas-filled shock absorbers	14
4.2 Releasing gas and draining rear gas-filled shock absorbers	16
40 - Front suspension	18
1 Front axle	18
1.1 Overview of fitting locations – front axle	18
2 Subframe	19
2.1 Assembly overview – subframe	19
2.2 Removing and installing subframe without steering rack	21
2.3 Removing and installing subframe with steering rack	29
2.4 Repairing subframe	57
2.5 Removing and installing anti-roll bar	69
2.6 Removing and installing coupling rod	74
2.7 Repairing thread in longitudinal member	75
2.8 Fixing subframe in position	76
2.9 Lowering subframe	80
3 Suspension strut, upper suspension link	90
3.1 Assembly overview – suspension strut, upper suspension link	90
3.2 Removing and installing suspension strut	91
3.3 Repairing suspension strut	102
4 Lower suspension link, swivel joint	106
4.1 Assembly overview – lower suspension link, swivel joint	106
4.2 Removing and installing lower suspension link	107
4.3 Checking swivel joint	120
4.4 Removing and installing swivel joint	121
4.5 Renewing bonded rubber bush for lower suspension link	125
5 Wheel bearing	133
5.1 Assembly overview – wheel bearing assembly	133
5.2 Removing and installing wheel bearing housing	133
5.3 Removing and installing wheel bearing unit	140
6 Drive shaft	145
6.1 Overview - drive shaft	145
6.2 Assembly overview – drive shaft	146
6.3 Removing and installing drive shaft	152



6.4	Loosening and tightening threaded connections of drive shaft	176
6.5	Removing and installing drive shaft heat shield	178
6.6	Dismantling and assembling drive shaft	178
6.7	Checking outer constant velocity joint	195
6.8	Checking inner constant velocity joint	197
42	Rear suspension	200
1	Rear axle	200
1.1	Overview of fitting locations – rear axle	200
1.2	Lowering rear axle	204
1.3	Removing and installing rear axle	215
1.4	Removing and installing shield for rear axle	234
2	Axle beam	236
2.1	Assembly overview – axle beam	236
2.2	Renewing bonded rubber bush for axle beam	236
3	Subframe	245
3.1	Assembly overview – subframe	245
3.2	Assembly overview – add-on parts for subframe	247
3.3	Fixing subframe in position	248
3.4	Repairing subframe	269
4	Anti-roll bar	284
4.1	Assembly overview – anti-roll bar	284
4.2	Removing and installing anti-roll bar	285
4.3	Removing and installing coupling rod	286
5	Suspension link, track rod	290
5.1	Assembly overview – transverse link	290
5.2	Assembly overview – track rod	293
5.3	Removing and installing upper transverse link	294
5.4	Removing and installing lower transverse link	296
5.5	Removing and installing track rod	298
6	Suspension strut, shock absorber, spring	300
6.1	Assembly overview – suspension strut, shock absorber, spring	300
6.2	Removing and installing shock absorber	302
6.3	Repairing shock absorber	308
6.4	Removing and installing spring	311
7	Wheel bearing assembly, trailing arm	321
7.1	Assembly overview – wheel bearing assembly	321
7.2	Assembly overview – trailing arm	324
7.3	Removing and installing wheel bearing housing	326
7.4	Removing and installing wheel bearing unit	338
7.5	Renewing bonded rubber bush for wheel bearing housing	349
7.6	Removing and installing trailing arm with mounting bracket	353
7.7	Repairing trailing arm	362
8	Drive shaft	368
8.1	Assembly overview – drive shaft	368
8.2	Removing and installing drive shaft	370
8.3	Dismantling and assembling drive shaft	375
8.4	Loosening and tightening threaded connections of drive shaft	381
8.5	Checking outer constant velocity joint	383
8.6	Checking inner constant velocity joint	385
43	Self-levelling suspension	388
1	Electronic damping control	388
1.1	Assembly overview - electronically controlled damping system	388
1.2	Removing and installing electronically controlled damping control unit J250	394



1.3	Removing and installing front body acceleration senders G341/G342	397
1.4	Removing and installing rear body acceleration sender G343	398
2	Vehicle level sender	400
2.1	Assembly overview – front vehicle level senders	400
2.2	Assembly overview – rear vehicle level senders	401
2.3	Removing and installing front vehicle level senders G78/G289	403
2.4	Removing and installing rear vehicle level senders G76/G77	405
44	- Wheels, tyres, vehicle geometry	408
1	Wheel alignment	408
1.1	Notes for wheel alignment	408
1.2	Conditions for testing	409
1.3	Preparations for testing	409
1.4	Specifications for wheel alignment	411
1.5	Setting vehicle to initial position for wheel alignment	422
1.6	Wheel alignment procedure	423
1.7	Necessity of wheel alignment	424
1.8	Adjusting camber at front wheels	426
1.9	Adjusting camber on rear axle	428
1.10	Adjusting toe at rear axle	429
1.11	Adjusting front axle toe	430
1.12	Wheel runout compensation	431
1.13	Vehicle data sticker	432
1.14	Checking maximum steering wheel angle	432
2	Adaptive cruise control	434
2.1	Calibrating adaptive cruise control	434
3	Front camera for assist systems	459
3.1	Calibrating front camera for assist systems	459
48	- Steering	467
1	Steering wheel	467
1.1	Assembly overview – steering wheel	467
1.2	Removing and installing steering wheel	468
2	Steering column	470
2.1	Assembly overview – steering column	470
2.2	Checking steering column for damage	471
2.3	Handling and transporting steering column	472
2.4	Removing and installing steering column	473
2.5	Removing and installing control unit for electronic steering column lock J764	483
3	Steering rack	485
3.1	Assembly overview – steering rack	485
3.2	Removing and installing steering rack	490
3.3	Removing and installing bellows	525
3.4	Removing and installing track rod	527
3.5	Removing and installing track rod ball joint	532
3.6	Repairing steering rack	533
4	Sensors	538
4.1	Removing and installing steering angle sender G85	538