



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Repair instructions</b> .....	<b>1</b>
1.1 General repair instructions .....	1
1.2 Notes on repair of CAN bus wiring .....	1
1.3 Transmitting power and aerial fitting locations .....	1
<b>91 - Communication</b> .....	<b>3</b>
<b>1 Infotainment system</b> .....	<b>3</b>
1.1 Components of infotainment system .....	3
1.2 Overview of fitting locations - Infotainment system .....	11
1.3 Removing and installing infotainment system display .....	12
1.4 Removing and installing control unit 1 for information electronics J794 .....	13
<b>2 Sound system</b> .....	<b>15</b>
2.1 Fitting locations overview - sound systems .....	15
2.2 Digital sound package control unit J525 .....	18
2.3 Removing and installing retainer for digital sound package control unit J525 .....	23
2.4 Removing and installing front treble loudspeakers R20 / R22 .....	24
2.5 Removing and installing rear treble loudspeakers R14 / R16 .....	24
2.6 Removing and installing front bass loudspeakers R21 / R23 .....	26
2.7 Removing and installing rear bass loudspeakers R15 / R17 .....	27
2.8 Removing and installing subwoofer R211 .....	29
<b>3 Aerial systems</b> .....	<b>30</b>
3.1 Overview of fitting locations - aerial systems .....	30
3.2 Removing and installing aerial amplifier R24 / R93 / R84 .....	31
3.3 Removing and installing amplitude modulation (AM) frequency filter R177 .....	32
3.4 Removing and installing frequency modulation (FM) frequency filter R178 / R179 .....	34
3.5 Removing and installing roof aerial RX5 .....	34
<b>4 Radio</b> .....	<b>36</b>
4.1 Components of radio system .....	36
4.2 Removing and installing radio .....	36
<b>5 Telephone system</b> .....	<b>39</b>
5.1 Mobile telephone preparation .....	39
5.2 Overview of fitting locations - telephone system .....	40
5.3 Removing and installing telephone microphone R38 .....	41
5.4 Removing and installing aerial amplifier for mobile telephone R86 .....	42
5.5 Removing and installing retainer for aerial amplifier for mobile telephone R86 .....	42
<b>6 Navigation system</b> .....	<b>44</b>
6.1 Components of navigation system .....	44
6.2 Overview of fitting locations - navigation system .....	44
6.3 Removing and installing control unit for navigation system .....	45
<b>7 TV system</b> .....	<b>46</b>
7.1 Fitting locations overview - TV system .....	46
7.2 Removing and installing TV tuner .....	46
<b>8 Reversing camera system</b> .....	<b>50</b>
8.1 Components of reversing camera system .....	50
8.2 Overview of fitting locations - reversing camera system .....	50
8.3 Assembly overview - reversing camera system .....	52
8.4 Removing and installing reversing camera R189 .....	52
<b>9 Multifunction steering wheel</b> .....	<b>53</b>
9.1 Components of multifunction steering wheel .....	53
9.2 Assembly overview - multifunction steering wheel .....	53
9.3 Removing and installing steering wheel multifunction buttons E441 / E440 .....	54



9.4	Removing and installing Tiptronic switch in steering wheel E439 / E438	57
<b>10</b>	<b>Connection for external multimedia devices</b>	<b>59</b>
10.1	Removing and installing connection for external multimedia devices	59
10.2	Removing and installing USB hub R293	61
<b>11</b>	<b>Car-Net</b>	<b>62</b>
11.1	General information	62
11.2	Overview of fitting locations - Car-Net services	62
11.3	Removing and installing emergency call module control unit and communication unit J949	64
11.4	Renewing control unit for emergency call module and communication unit J949	65