



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety precautions when working on a high-voltage system | 1 |
| 1.2 Safety precautions when working in the vicinity of high-voltage components | 2 |
| 1.3 Safety precautions when using testers and measuring instruments during a road test | 2 |
| 1.4 Safety precautions when working on the cooling system | 2 |
| 1.5 Notes on tow-starting/towing | 2 |
| 2 Identification | 3 |
| 2.1 Gearbox identification | 3 |
| 3 Technical data | 4 |
| 3.1 Allocation gearbox - engine | 4 |
| 3.2 Capacities | 4 |
| 4 Repair instructions | 5 |
| 4.1 General repair instructions | 5 |
| 34 - Controls, housing | 7 |
| 1 Selector mechanism | 7 |
| 1.1 Assembly overview - selector mechanism | 7 |
| 1.2 Repairing cable support bracket | 9 |
| 1.3 Emergency release from position P | 9 |
| 1.4 Removing and installing selector lever handle | 10 |
| 1.5 Moving push-button in the handle to installation position | 13 |
| 1.6 Removing and installing selector mechanism | 15 |
| 1.7 Removing and installing gear selector cable | 18 |
| 1.8 Checking selector mechanism | 19 |
| 1.9 Checking and adjusting selector lever cable | 20 |
| 1.10 Renewing oil seal for selector shaft | 22 |
| 2 Gearbox housing, clutch housing | 25 |
| 2.1 Renewing sealing cap on gearbox housing | 25 |
| 3 Removing and installing gearbox | 28 |
| 4 Assembly mountings | 29 |
| 4.1 Assembly overview - assembly mountings | 29 |
| 4.2 Removing and installing cross member for three-phase current drive VX54 | 31 |
| 4.3 Removing and installing gearbox mounting | 35 |
| 4.4 Removing and installing motor mountings | 38 |
| 5 Transporting gearbox | 41 |
| 6 Gear oil | 42 |
| 6.1 Checking gear oil level | 42 |
| 39 - Final drive - differential | 43 |
| 1 Oil seals | 43 |
| 1.1 Overview of fitting locations - seals | 43 |
| 1.2 Renewing left oil seal | 43 |
| 1.3 Renewing right oil seal | 46 |