



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
2 Repair instructions	3
2.1 Contact corrosion	3
2.2 Routing and attachment of lines	3
2.3 Rules for cleanliness when working on high-voltage system	3
3 Hazard classification for the high-voltage system	5
93 - Electric drive systems	12
1 Warning stickers	12
1.1 Warning stickers, version 1	12
1.2 Warning stickers, version 2	15
2 Overview of fitting locations - high-voltage components	20
3 High-voltage battery unit	22
3.1 Overview of fitting locations - high-voltage battery	22
3.2 Assembly overview – high-voltage battery	26
3.3 Visual inspection of high-voltage battery 1 AX2	39
3.4 Diagnosis of high-voltage battery 1 AX2	39
3.5 Removing and installing high-voltage battery 1 AX2	39
3.6 Raising high-voltage battery 1 AX2	49
3.7 Removing and installing charge voltage control unit for high-voltage battery J966	54
3.8 Leakage test of high-voltage battery 1 AX2	55
3.9 Searching for leaks from high-voltage battery	56
3.10 Opening high-voltage battery 1 AX2	56
3.11 Voltage and insulation measurement	62
3.12 Opening electrical circuit	66
3.13 Closing high-voltage battery 1 AX2	68
3.14 Removing and installing DC connector mounting on high-voltage battery 1 AX2	72
3.15 Removing and installing switching unit for high-voltage battery SX6	75
3.16 Removing and installing battery regulation control unit J840	77
3.17 Removing and installing mounting for high-voltage network connector	78
3.18 Discharging and charging capacitor	81
3.19 Charging and discharging battery modules	83
3.20 Removing and installing battery modules	85
3.21 Renewing lower part of battery housing	158
4 Power and control electronics for electric drive	282
4.1 Assembly overview - power and control electronics for electric drive	282
4.2 Removing and installing power and control electronics for electric drive JX1	284
4.3 Removing and installing bracket for power and control electronics for electric drive JX1	290
4.4 Removing and installing electrical air conditioner compressor fuse S355	291
5 Electric drive motor	295
5.1 Assembly overview - three-phase current drive VX54	295
5.2 Removing and installing engine cover	297
5.3 Removing and installing three-phase current drive VX54	298
5.4 Renewing three-phase current drive VX54	307
5.5 Calibrating three-phase current drive VX54	308
5.6 Removing and installing gearbox.	309
5.7 Removing and installing drive motor temperature sender G712	309



5.8	Removing and installing drive motor rotor position sender 1 G713	311
5.9	Removing and installing pendulum support	315
6	Engine control unit	317
6.1	Assembly overview – engine/motor control unit	317
6.2	Removing and installing engine control unit J623	318
6.3	Removing and installing bracket for engine (motor) control unit J623	323
7	High-voltage cables	324
7.1	General description - high-voltage cables	324
7.2	Overview of fitting locations - high-voltage cables	324
7.3	Identifying high-voltage cables	325
7.4	Removing and installing high-voltage cable for charging unit 1 for high-voltage battery AX4	326
7.5	Removing and installing high-voltage wiring harness for high-voltage battery PX1	327
7.6	Removing and installing high-voltage wiring harness for drive motor PX2	330
7.7	Removing and installing high-voltage cable for high-voltage heater (PTC) P11	334
7.8	Removing and installing high-voltage cable for electrical air conditioner compressor P3 ..	336
8	Cooling system for high-voltage system	339
8.1	Overview of fitting locations - high-voltage system cooling components	339
8.2	Coolant hose connection diagram	341
8.3	Checking cooling system for leaks	342
8.4	Draining and adding coolant	345
8.5	Removing and installing power and control electronics for electric drive V508	351
8.6	Removing and installing radiator outlet coolant temperature sender G83	353
8.7	Removing and installing temperature sender after electric drive motor G788	353
8.8	Removing and installing radiator	355
8.9	Removing and installing radiator cowl with radiator fan	357
8.10	Removing and installing radiator fan V7	358
8.11	Removing and installing radiator bypass changeover valve N687	359
9	High-voltage heater (PTC) Z115	361
10	Electrical air conditioner compressor V470	362
11	De-energising the high-voltage system	363
12	Recommissioning high-voltage system	365
13	Potential equalisation lines	366
13.1	Overview of fitting locations - potential equalisation lines	366
14	Charging socket	371
14.1	Assembly overview - charging socket	371
14.2	Assembly overview – charging socket	372
14.3	Removing and installing high-voltage battery charging socket 1 UX4	376
14.4	Removing and installing actuator for high-voltage charging socket lock 1 F498, AC-DC charging socket Combo 2	384
14.5	Removing and installing actuator for high-voltage charging socket lock 1 F498, AC-DC charging socket Combo 1 NAR	387
14.6	Removing and installing actuator for high-voltage charging socket lock 1 F498, AC charging socket	390
14.7	Emergency release for high-voltage battery charging socket 1 UX4 AC-DC charging socket Combo 1 NAR	393
14.8	Removing and installing module for battery charge selector buttons EX32 including immediate charge button E766	394
15	Charging unit for high-voltage battery	396
15.1	Assembly overview – charging unit for high-voltage battery	396
15.2	Removing and installing charging unit 1 for high-voltage battery AX4	397
15.3	Removing and installing bracket for charging unit 1 for high-voltage battery AX4	401
16	Vehicle noise/engine sound	403
16.1	Overview of fitting locations – vehicle noise/engine sound	403
16.2	Removing and installing engine sound generator control unit J943	403



16.3	Removing and installing actuator 1 for engine sound generator R257	404
17	Accelerator pedal	406
17.1	Assembly overview - accelerator module	406
17.2	Removing and installing accelerator pedal module GX2	406