



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures for working on vehicles with high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
<b>2 Repair instructions</b>	<b>3</b>
2.1 Contact corrosion	3
2.2 Routing and attachment of lines	3
2.3 Rules for cleanliness when working on high-voltage system	3
<b>3 Hazard classification for the high-voltage system</b>	<b>5</b>
<b>93 - Electric drive systems</b>	<b>12</b>
<b>1 High-voltage components</b>	<b>12</b>
1.1 Overview of fitting locations – high-voltage components	12
<b>2 Warning stickers</b>	<b>14</b>
2.1 Checking warning stickers	14
<b>3 High-voltage battery unit</b>	<b>18</b>
3.1 Overview of fitting locations - high-voltage battery	18
3.2 Assembly overview – high-voltage battery	21
3.3 Visual inspection of high-voltage battery 1 AX2	33
3.4 Diagnosis of high-voltage battery 1 AX2	34
3.5 Leak test of high-voltage battery 1 AX2	34
3.6 Searching for leaks from high-voltage battery	35
3.7 Removing and installing high-voltage battery 1 AX2	35
3.8 Raising high-voltage battery 1 AX2	44
3.9 Removing and installing charge voltage control unit for high-voltage battery J966	49
3.10 Opening high-voltage battery 1 AX2	50
3.11 Closing high-voltage battery 1 AX2	56
3.12 Voltage and insulation measurement	60
3.13 Opening electrical circuit	64
3.14 Removing and installing DC connector mounting on high-voltage battery 1 AX2	65
3.15 Removing and installing switching unit for high-voltage battery SX6	68
3.16 Removing and installing battery regulation control unit J840	70
3.17 Removing and installing mounting for high-voltage network connector	74
3.18 Discharging and charging capacitor	77
3.19 Charging and discharging battery modules	79
3.20 Removing and installing high-voltage wire for high-voltage battery charging unit	80
3.21 Removing and installing battery modules	82
3.22 Renewing lower part of battery housing	179
<b>4 Power and control electronics for electric drive</b>	<b>191</b>
4.1 Assembly overview – power and control electronics for electric drive	191
4.2 Assembly overview - bracket for power and control electronics for electric drive	193
4.3 Removing and installing power and control electronics for electric drive JX1	193
4.4 Removing and installing bracket for power and control electronics for electric drive JX1	198
4.5 Removing and installing high-voltage system fuse 3 S353	199
<b>5 Electric drive motor</b>	<b>202</b>
5.1 Assembly overview – electric drive motor	202
5.2 Removing and installing pendulum support	204
5.3 Removing and installing three-phase current drive VX54	205
5.4 Renewing three-phase current drive VX54	213
5.5 Calibrating three-phase current drive VX54	214



5.6	Removing and installing drive motor temperature sender G712	214
5.7	Removing and installing drive motor rotor position sender 1 G713	217
<b>6</b>	<b>Engine/motor control unit</b>	<b>220</b>
6.1	Assembly overview - engine/motor control unit	220
6.2	Removing and installing engine control unit J623	220
6.3	Removing and installing bracket for engine/motor control unit J623	221
<b>7</b>	<b>High-voltage cables</b>	<b>222</b>
7.1	General description - high-voltage cables	222
7.2	Overview of fitting locations – high-voltage cables	222
7.3	Identifying high-voltage cables	223
7.4	Removing and installing high-voltage wire for high-voltage battery charging unit	224
7.5	Removing and installing high-voltage wiring harness for high-voltage battery PX1	225
7.6	Removing and installing high-voltage wiring harness for drive motor PX2	228
7.7	Removing and installing high-voltage cable for high-voltage heater	232
7.8	Removing and installing high-voltage cable for electrical air conditioner compressor P3	234
<b>8</b>	<b>Potential equalisation lines</b>	<b>236</b>
8.1	Overview of fitting locations – potential equalisation lines	236
<b>9</b>	<b>De-energising high-voltage system</b>	<b>240</b>
<b>10</b>	<b>Re-energising high-voltage system</b>	<b>242</b>
<b>11</b>	<b>Charging socket</b>	<b>243</b>
11.1	Assembly overview – charging socket	243
11.2	Assembly overview – charging socket	244
11.3	Removing and installing high-voltage battery charging socket 1 UX4	248
11.4	Removing and installing actuator for high-voltage charging socket lock 1 F498, AC-DC charging socket Combo 2	254
11.5	Removing and installing actuator for high-voltage charging socket lock 1 F498, AC-DC charging socket Combo 1 NAR	257
11.6	Removing and installing actuator for high-voltage charging socket lock 1 F498, AC charging socket	260
11.7	Emergency release for high-voltage battery charging socket 1 UX4 AC-DC charging socket Combo 1 NAR	263
11.8	Removing and installing module for battery charge selector buttons EX32 including immediate charge button E766	264
<b>12</b>	<b>Charging unit for high-voltage battery</b>	<b>266</b>
12.1	Assembly overview – charging unit for high-voltage battery	266
12.2	Removing and installing charging unit 1 for high-voltage battery AX4	267
12.3	Removing and installing bracket for charging unit 1 for high-voltage battery AX4	271
<b>13</b>	<b>Vehicle noise/engine sound</b>	<b>272</b>
13.1	Overview of fitting locations – vehicle noise/engine sound	272
13.2	Removing and installing engine sound generator control unit J943	272
13.3	Removing and installing actuator 1 for engine sound generator R257	273
<b>14</b>	<b>Accelerator pedal</b>	<b>275</b>
14.1	Assembly overview - accelerator module	275
14.2	Removing and installing accelerator pedal module GX2	275
<b>15</b>	<b>Cooling system/coolant</b>	<b>277</b>
15.1	Overview of fitting locations - high-voltage system cooling components	277
15.2	Coolant hose connection diagram	279
15.3	Checking cooling system for leaks	280
15.4	Draining and adding coolant	283
15.5	Removing and installing power and control electronics for electric drive V508	290
15.6	Removing and installing temperature sender after electric drive motor G788	291
15.7	Removing and installing radiator outlet coolant temperature sender G83	293
15.8	Removing and installing radiator	294
15.9	Removing and installing radiator cowl with radiator fan	297
15.10	Removing and installing radiator fan V7	298



---

15.11 Removing and installing 3/2-way valve .....	298
---	-----