



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures for working on vehicles with high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with a start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
<b>2 Repair notes</b>	<b>3</b>
2.1 Contact corrosion	3
2.2 Routing and attachment of lines	3
<b>3 Battery</b>	<b>4</b>
3.1 Battery - general notes	4
3.2 Types of battery	4
<b>27 - Starter, current supply, CCS</b>	<b>5</b>
<b>1 Battery</b>	<b>5</b>
1.1 Assembly overview – battery	5
1.2 Removing and installing battery	7
1.3 Disconnecting and connecting battery	10
1.4 Removing and installing battery tray	12
1.5 Checking battery	13
1.6 Charging battery	13
1.7 Removing and installing earth wire with battery monitor control unit J367	13
1.8 Adapting battery monitor control unit J367	14
<b>2 Cruise control system (CCS)</b>	<b>15</b>
<b>3 Adaptive cruise control</b>	<b>16</b>
3.1 Overview of fitting locations - adaptive cruise control	16
3.2 Removing and installing automatic distance control unit	17
3.3 Calibrating adaptive cruise control	20
<b>90 - Gauges, instruments</b>	<b>22</b>
<b>1 Dash panel insert</b>	<b>22</b>
1.1 Assembly overview - dash panel insert	22
1.2 Removing and installing dash panel insert KX2	25
<b>2 Horn</b>	<b>30</b>
2.1 Assembly overview - horn	30
2.2 Removing and installing treble horn H2 and bass horn H7	30
<b>92 - Windscreen wash/wipe system</b>	<b>32</b>
<b>1 Windscreen wiper system</b>	<b>32</b>
1.1 Assembly overview - windscreen wiper system	32
1.2 Moving wipers to service position	34
1.3 Removing and installing wiper blade	34
1.4 Removing and installing wiper arms	36
1.5 Adjusting wiper arms	38
1.6 Removing and installing wiper motor V	40
1.7 Deactivating APP function of wiper motor	41
1.8 Removing and installing rain and light sensor	42
<b>2 Windscreen washer system</b>	<b>46</b>
2.1 Assembly overview - windscreen washer system	46
2.2 Removing and installing washer fluid reservoir	52
2.3 Removing and installing windscreen washer fluid level sender	57
2.4 Removing and installing windscreen washer pump	59



2.5	Removing and installing spray jets	61
2.6	Adjusting spray jets	62
<b>3</b>	<b>Rear window wiper system</b>	<b>63</b>
3.1	Assembly overview - rear window wiper system	63
3.2	Removing and installing wiper blade	63
3.3	Removing and installing wiper arm	64
3.4	Adjusting wiper arm	65
3.5	Removing and installing rear window wiper motor V12	66
<b>4</b>	<b>Rear window washer system</b>	<b>68</b>
4.1	Assembly overview - rear window washer system	68
4.2	Removing and installing washer fluid reservoir	71
4.3	Removing and installing rear window washer pump	71
4.4	Removing and installing spray jet	72
4.5	Adjusting spray jet	73
<b>5</b>	<b>Headlight washer system</b>	<b>74</b>
5.1	Assembly overview - headlight washer system	74
5.2	Removing and installing washer fluid reservoir	75
5.3	Removing and installing headlight washer system pump V11	75
5.4	Removing and installing pop-up cylinder	76
5.5	Adjusting spray jets	78
<b>6</b>	<b>Washer fluid lines</b>	<b>79</b>
6.1	Repairing washer fluid lines	79
<b>94</b>	<b>Lights, bulbs, switches - exterior</b>	<b>80</b>
<b>1</b>	<b>Headlights</b>	<b>80</b>
1.1	Assembly overview – headlight	80
1.2	Removing and installing headlight	88
1.3	Adjusting headlights	92
1.4	Adjusting headlight installation position	92
1.5	Removing and installing front turn signal bulb M5/M7	95
1.6	Installing repair kit for headlight housing	96
1.7	Converting headlights from driving on right to driving on left	98
1.8	Converting headlights from driving on left to driving on right	98
1.9	Removing and installing headlight range control motor V48/V49	99
1.10	Removing and installing dipped-beam headlight bulb	105
1.11	Removing and installing headlight main beam bulb M30/M32	112
1.12	Removing and installing daytime running light	113
1.13	Removing and installing LED modules for daytime running light and side light L176/L177	114
1.14	Removing and installing side light bulb M1/M3	116
1.15	Removing and installing output module for headlight J667/J668	116
1.16	Removing and installing output module 1 for LED headlight A31/A27	117
1.17	Removing and installing control motor sender for VARILIS headlight G695/G696	119
1.18	Removing and installing control motor for VARILIS headlight V446/V447	119
<b>2</b>	<b>Fog lights</b>	<b>120</b>
2.1	Assembly overview - fog lights	120
2.2	Removing and installing fog light	121
2.3	Removing and installing fog light bulb L22/L23	123
<b>3</b>	<b>Lights in exterior mirror</b>	<b>125</b>
3.1	Assembly overview - lights in exterior mirror	125
3.2	Removing and installing turn signal	127
3.3	Removing and installing entry light in exterior mirror	128
<b>4</b>	<b>Tail lights</b>	<b>130</b>
4.1	Assembly overview - tail light cluster in body	130
4.2	Assembly overview - tail lights in rear lid	130
4.3	Removing and installing tail light in rear lid	131



4.4	Adjusting installation position of tail light	133
4.5	Removing and installing tail light cluster	134
<b>5</b>	<b>High-level brake light</b>	<b>135</b>
5.1	Assembly overview – high-level brake light	135
5.2	Removing and installing high-level brake light	136
<b>6</b>	<b>Number plate light</b>	<b>140</b>
6.1	Removing and installing number plate light X4/X5	140
6.2	Removing and installing bulb for number plate light X4/X5	141
<b>7</b>	<b>Entry and start authorisation system</b>	<b>142</b>
7.1	Overview of fitting locations - entry and start authorisation system	142
7.2	Overview of fitting locations - keyless entry system	144
7.3	Removing and installing interface for entry and start system J965	148
7.4	Removing and installing door exterior handle contact sensor G415/G416	149
7.5	Removing and installing interior aerial 1 for entry and start authorisation R138	150
7.6	Removing and installing driver side aerial for entry and start system R134	150
7.7	Removing and installing front passenger side aerial for entry and start system R135	151
7.8	Removing and installing interior aerial 2 for entry and start system R139	151
7.9	Removing and installing rear bumper aerial for entry and start system R136	152
<b>8</b>	<b>Steering column switch module</b>	<b>153</b>
8.1	Assembly overview - steering column switch module	153
8.2	Removing and installing lock cylinder	155
8.3	Removing and installing ignition key withdrawal lock solenoid N376	158
8.4	Removing and installing ignition/starter switch	158
8.5	Removing and installing steering column switch module	160
8.6	Removing and installing steering column electronics control unit J527	165
8.7	Removing and installing turn signal switch E2	171
8.8	Removing and installing cruise control system switch E45	173
8.9	Removing and installing intermittent wiper switch E22	173
8.10	Removing and installing immobiliser reader coil D2	173
8.11	Removing and installing steering lock housing	174
<b>9</b>	<b>Parking aid</b>	<b>176</b>
9.1	Assembly overview – parking aid	176
9.2	Removing and installing parking aid control unit J446	180
9.3	Removing and installing front parking aid warning buzzer H22	182
9.4	Removing and installing rear parking aid warning buzzer H15	183
9.5	Removing and installing front parking aid senders	184
9.6	Removing and installing rear parking aid senders	186
<b>10</b>	<b>Park assist steering</b>	<b>189</b>
10.1	Assembly overview - park assist steering	189
10.2	Removing and installing control unit	190
10.3	Removing and installing front senders	190
10.4	Removing and installing rear senders	191
<b>11</b>	<b>Automatic headlight range control</b>	<b>193</b>
11.1	Assembly overview - automatic headlight range control	193
11.2	Removing and installing cornering light and headlight range control unit J745	194
<b>12</b>	<b>Towing bracket</b>	<b>197</b>
12.1	Assembly overview - towing bracket socket	197
12.2	Trailer socket U10	197
12.3	Removing and installing trailer detector control unit J345	198
<b>13</b>	<b>Blind Spot Monitor</b>	<b>199</b>
13.1	Assembly overview - Blind Spot Monitor	199
13.2	Removing and installing warning lamp for Blind Spot Monitor K303/K304	200
13.3	Removing and installing Blind Spot Monitor control unit J1086/J1087	200
13.4	Calibrating Blind Spot Monitor	201



<b>96 - Lights, bulbs, switches - interior</b>	<b>210</b>
<b>1 Lights</b>	<b>210</b>
1.1 Overview of fitting locations - lights in dash panel	210
1.2 Overview of fitting locations - lights in front doors	211
1.3 Overview of fitting locations - lights in rear doors	212
1.4 Overview of fitting locations - lights in centre console	213
1.5 Overview of fitting locations - lights in luggage compartment	214
1.6 Overview of fitting locations - lights in roof trim	215
1.7 Removing and installing glove compartment light W6	216
1.8 Replacing bulb for glove compartment light W6	217
1.9 Removing and installing front footwell light K268/K269	218
1.10 Removing and installing front footwell illumination bulb L151/L152	219
1.11 Removing and installing Central locking SAFELOCK function warning lamp K133	220
1.12 Removing and installing front entry light W31/W32	221
1.13 Removing and installing door warning lamp W30/W36	223
1.14 Removing and installing door opener illumination bulb L108/L109	223
1.15 Removing and installing light 2 for front door background lighting L203/L204	224
1.16 Removing and installing rear entry light W33/W34	225
1.17 Removing and installing rear door warning lamp W37/W38	225
1.18 Removing and installing selector lever position display Y26	225
1.19 Removing and installing luggage compartment light W3	226
1.20 Removing and installing illuminated vanity mirror W20/W14	227
1.21 Removing and installing bulb for front interior light W1	228
1.22 Removing and installing bulb for rear interior light W43	231
1.23 Removing and installing bulb for rear reading light W11/W12	233
1.24 Removing and installing LED for ambient lighting	233
<b>2 Controls</b>	<b>235</b>
2.1 Overview of fitting locations - controls in dash panel	236
2.2 Overview of fitting locations - controls in front doors	238
2.3 Overview of fitting locations - controls in rear doors	238
2.4 Overview of fitting locations - controls in centre console	239
2.5 Overview of fitting locations - controls in luggage compartment	240
2.6 Overview of fitting locations - controls in roof trim	241
2.7 Removing and installing rotary light switch EX1	243
2.8 Removing and installing headlight range control regulator E102	244
2.9 Removing and installing driving mode selection button E735	244
2.10 Removing and installing Start/Stop operation button E693	245
2.11 Removing and installing TCS and ESP button E256	245
2.12 Removing and installing parking aid button E266	245
2.13 Removing and installing park assist steering button E581	245
2.14 Removing and installing switch module in centre console EX23/EX30	245
2.15 Removing and installing hazard warning light switch EX3	247
2.16 Removing and installing buttons for seat heating E653/E654	248
2.17 Removing and installing glove compartment light switch E26	248
2.18 Removing and installing exterior mirror adjuster EX11	250
2.19 Removing and installing operating unit for window regulator in driver door E512	251
2.20 Removing and installing front passenger side window regulator button E716	252
2.21 Removing and installing driver side interior locking button for central locking system E308	252
2.22 Removing and installing fuel tank flap release button E319	253
2.23 Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616	254
2.24 Removing and installing door contact switch F2/F3	255
2.25 Removing and installing rear window regulator switch in door E52/E54	256
2.26 Removing and installing rear door contact switches F10/F11	256



2.27	Removing and installing electromechanical parking brake button E538/auto-hold button E540	257
2.28	Removing and installing the starter button E378	257
2.29	Removing and installing rear lid contact switch for anti-theft alarm F123	258
2.30	Removing and installing vanity mirror contact switch F147/F148	258
2.31	Removing and installing sunroof button E325	258
2.32	Removing and installing front interior light/reading light	259
2.33	Removing and installing rear interior light/reading light	261
2.34	Removing and installing front right reading light button E634	262
<b>3</b>	<b>Anti-theft alarm</b>	<b>264</b>
3.1	Assembly overview - interior monitor	264
3.2	Removing and installing alarm horn H12	265
3.3	Removing and installing anti-theft alarm sensor G578	267
<b>4</b>	<b>Front camera for assist systems</b>	<b>271</b>
4.1	Removing and installing front camera for driver assist systems	271
<b>5</b>	<b>Cigarette lighter, socket</b>	<b>272</b>
5.1	Removing and installing cigarette lighter U1	272
5.2	Removing and installing socket illumination bulb L42	272
5.3	Removing and installing rear cigarette lighter illumination bulb L32	272
5.4	Removing and installing electric socket U	272
<b>97 - Wiring</b>		<b>273</b>
<b>1</b>	<b>Relay carriers, fuse holders, electronics boxes</b>	<b>273</b>
1.1	Overview of fitting locations - relay carriers, fuse holders, E-boxes	273
1.2	Removing and installing electronics box (E-box)	277
1.3	Removing and installing relay and fuse holder in electronics box	279
1.4	Removing and installing relay and fuse carrier behind dash panel	282
1.5	Removing and installing fuse holder, battery	284
<b>2</b>	<b>Select Control units</b>	<b>285</b>
2.1	Overview of fitting locations - control units	285
2.2	Assembly overview - onboard supply control unit	288
2.3	Assembly overview - data bus diagnostic interface	290
2.4	Removing and installing onboard supply control unit J519	291
2.5	Removing and installing data bus diagnostic interface J533	295
2.6	Removing and installing bracket for onboard supply control unit J519	296
2.7	Renewing bracket for onboard supply control unit J519	298
2.8	Removing and installing bracket for parking aid control unit J446/park assist steering control unit J791, LHD vehicles	299
2.9	Removing and installing engine sound generator control unit J943, vehicles with active sound, Golf GTD	300
<b>3</b>	<b>Connectors</b>	<b>301</b>
3.1	Repairing electrical wiring harnesses and plug-in connections	301
<b>4</b>	<b>Releasing and dismantling connector housings</b>	<b>302</b>
<b>5</b>	<b>Repairing aerial wires</b>	<b>303</b>
<b>6</b>	<b>Fibre optic cables</b>	<b>304</b>
<b>7</b>	<b>Vehicle diagnosis, testing and information systems</b>	<b>305</b>