



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on high-voltage system	1
1.4 Safety precautions when working in vicinity of high-voltage components	2
<b>2 Identification</b>	<b>3</b>
2.1 Allocation of PR number - brakes	3
<b>3 Technical data</b>	<b>5</b>
3.1 Technical data for brakes	5
<b>4 Brake test</b>	<b>9</b>
4.1 General information	9
4.2 Checking vehicles with front-wheel drive	9
4.3 Checking vehicles with all-wheel drive	9
4.4 Checking parking brake	10
<b>45 - Anti-lock brake system</b>	<b>12</b>
<b>1 General information</b>	<b>12</b>
1.1 Repair instructions for repair work on ABS	12
<b>2 Overview of fitting locations</b>	<b>15</b>
2.1 Overview of fitting locations – ABS/ESP	15
<b>3 Control unit and hydraulic unit</b>	<b>18</b>
3.1 Assembly overview - control unit and hydraulic unit	18
3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	22
3.3 Separating control unit from hydraulic unit	37
3.4 Fitting control unit to hydraulic unit	38
3.5 Connecting brake lines to hydraulic unit	40
<b>4 Sensors</b>	<b>43</b>
4.1 Assembly overview - speed sensor on front axle	43
4.2 Assembly overview – speed sensors on rear axle	44
4.3 Removing and installing ESP sensor unit G419	46
4.4 Removing and installing speed sensors on front axle G45/G47	46
4.5 Removing and installing speed sensors on rear axle G44/G46	47
4.6 Checking ABS sensor ring	50
<b>46 - Brakes - mechanism</b>	<b>52</b>
<b>1 Front brake</b>	<b>52</b>
1.1 Assembly overview - front brake	52
1.2 Removing and installing brake pads	54
1.3 Removing and installing brake caliper	60
<b>2 Rear brake</b>	<b>63</b>
2.1 Assembly overview - rear brakes	63
2.2 Removing and installing brake pads	66
2.3 Removing and installing brake caliper	71
<b>3 Parking brake</b>	<b>77</b>
3.1 Overview of fitting locations - parking brake	77
3.2 Removing and installing control unit for electromechanical parking brake J540	79
3.3 Removing and installing parking brake motor V282/V283	79
<b>4 Brake pedal</b>	<b>82</b>
4.1 Assembly overview - brake pedal	82
4.2 Removing and installing mounting bracket	86



4.3	Separating brake pedal from brake servo .....	88
4.4	Connecting brake pedal to brake servo .....	89
4.5	Removing and installing brake pedal .....	90
<b>47</b>	<b>- Brakes - hydraulics .....</b>	<b>94</b>
<b>1</b>	<b>Front brake caliper .....</b>	<b>94</b>
1.1	Assembly overview – front brake caliper .....	94
1.2	Removing and installing brake caliper piston .....	96
<b>2</b>	<b>Rear brake caliper .....</b>	<b>99</b>
2.1	Assembly overview – rear brake caliper .....	99
2.2	Removing and installing protective cap .....	99
<b>3</b>	<b>Brake servo and brake master cylinder .....</b>	<b>104</b>
3.1	Assembly overview - brake servo/brake master cylinder .....	104
3.2	Removing and installing brake servo .....	108
3.3	Removing and installing brake master cylinder .....	116
3.4	Removing and installing brake fluid level warning contact F34 .....	130
<b>4</b>	<b>Brake lines .....</b>	<b>131</b>
4.1	Repairing brake lines .....	131
<b>5</b>	<b>Hydraulic system .....</b>	<b>136</b>
5.1	General notes on brake fluid .....	136
5.2	Bleeding hydraulic system following standard procedure .....	136
5.3	Subsequent bleeding of hydraulic system .....	138
5.4	Testing for leaks .....	138