



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Repair notes</b>	<b>1</b>
1.1 General repair instructions	1
1.2 Routing and attachment of lines	1
1.3 Notes on repair of CAN bus wiring	1
1.4 General information	1
<b>91 - Communication</b>	<b>3</b>
<b>1 Infotainment system</b>	<b>3</b>
1.1 Overview of fitting locations – Infotainment system	3
1.2 Removing and installing infotainment system display	5
1.3 Removing and installing control unit 1 for information electronics J794	6
1.4 Renewing rotary knobs of display unit for front information display and operating unit control unit J685	8
<b>2 Sound system</b>	<b>10</b>
2.1 Overview of fitting locations – sound system	10
2.2 Removing and installing digital sound package control unit/amplifier	11
2.3 Removing and installing front treble loudspeakers R20/R22	13
2.4 Removing and installing front bass loudspeakers R21/R23	13
2.5 Removing and installing rear bass loudspeakers R15/R17	15
2.6 Removing and installing subwoofer R211	16
<b>3 Aerial systems</b>	<b>17</b>
3.1 Overview of fitting locations – aerial systems	17
3.2 Removing and installing aerial module	18
3.3 Removing and installing frequency modulation (FM) frequency filter R178/R179	20
3.4 Removing and installing roof aerial	21
3.5 Removing and installing bumper aerials	22
<b>4 Telephone system</b>	<b>24</b>
4.1 Overview of fitting locations – telephone system	24
4.2 Renewing telephone microphone R38	24
4.3 Removing and installing two-way signal amplifier for mobile telephone/data services J984	25
4.4 Removing and installing telephone bracket R126	26
<b>5 Multifunction steering wheel</b>	<b>27</b>
5.1 Overview of multifunction steering wheel	27
5.2 Assembly overview – multifunction steering wheel	27
5.3 Removing and installing multifunction buttons in steering wheel E441/E440	28
5.4 Removing and installing Tiptronic switch in steering wheel E439/E438	32
<b>6 Connection for external multimedia devices</b>	<b>34</b>
6.1 Removing and installing connection for external multimedia devices	34
<b>7 Car-Net</b>	<b>36</b>
7.1 General information	36
7.2 Overview of fitting locations – mobile online services	36
7.3 Removing and installing emergency call module control unit and communication unit J949	37
7.4 Removing and installing battery of emergency call module control unit and communication unit J949	38
7.5 Removing and installing Telematics button module E734	39
7.6 Removing and installing loudspeaker for emergency call module R335	39
7.7 Internet access control unit J666	40