



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Electrical components</b>	<b>1</b>
1.1 Access to diagnoses	1
<b>2 Repair instructions</b>	<b>2</b>
2.1 General information for use of adhesives	2
2.2 Bonding surfaces for self-adhesive components	3
<b>50 - Body - front</b>	<b>5</b>
<b>1 Safety information and repair notes</b>	<b>5</b>
1.1 Safety information	5
1.2 Repair instructions	5
<b>2 Lock carrier</b>	<b>6</b>
2.1 Assembly overview – lock carrier	6
2.2 Removing and installing lock carrier	7
2.3 Moving to and back from service position	9
2.4 Removing and installing lock carrier strut	10
<b>3 Wings</b>	<b>12</b>
3.1 Assembly overview – wing	12
3.2 Removing and installing wing	12
3.3 Removing and installing end plate	14
3.4 Removing and installing wing bracket	15
3.5 Removing and installing wing bracket	16
3.6 Removing and installing bracket for deformation element	16
<b>4 Bulkhead</b>	<b>18</b>
4.1 Assembly overview – bulkhead	18
4.2 Assembly overview – plenum chamber cover	18
4.3 Removing and installing bulkhead	19
4.4 Removing and installing plenum chamber cover	20
<b>55 - Bonnet, rear lid</b>	<b>22</b>
<b>1 Safety information and repair notes</b>	<b>22</b>
1.1 Safety information	22
1.2 Repair instructions	22
<b>2 Bonnet</b>	<b>23</b>
2.1 Assembly overview – bonnet	23
2.2 Assembly overview – Bowden cable	25
2.3 Removing and installing bonnet	27
2.4 Adjusting bonnet	27
2.5 Adjusting hinges	28
2.6 Adjusting striker pin	29
2.7 Adjusting adjusting buffer	30
2.8 Removing and installing bonnet lock	30
2.9 Removing and installing bonnet lock operating lever	31
2.10 Removing and installing arrester release lever	32
2.11 Removing and installing Bowden cable	33
2.12 Removing and installing Bowden cable for bonnet lock operating lever	34
2.13 Removing and installing Bowden cable coupling	35
2.14 Removing and installing striker pin	36
2.15 Removing and installing hinge	37
2.16 Removing and installing insulation	37
2.17 Removing and installing bonnet stay	38
<b>3 Rear lid</b>	<b>40</b>



3.1	Assembly overview – rear lid	40
3.2	Removing and installing rear lid	42
3.3	Adjusting rear lid	43
3.4	Adjust adjustment buffer at bottom	44
3.5	Adjusting striker pin	45
3.6	Removing and installing hinge	46
3.7	Removing and installing adjusting buffer at bottom	47
3.8	Removing and installing striker pin	47
3.9	Removing and installing rear lid lock unit [VX25]	48
3.10	Removing and installing rear lid seal	49
3.11	Removing and installing rear lid handle [EX37]	50
3.12	Removing and installing gas strut	51
3.13	Preparing gas strut for disposal	52
3.14	Removing and installing ball stud	53
<b>4</b>	<b>Tank flap unit</b>	<b>55</b>
4.1	Assembly overview – tank flap unit	55
4.2	Removing and installing tank flap unit	55
4.3	Removing and installing fuel tank flap	57
<b>5</b>	<b>Charging flap unit</b>	<b>58</b>
5.1	Assembly overview – charging flap unit	58
5.2	Removing and installing charging flap unit	58
5.3	Removing and installing charging flap	59
<b>57</b>	<b>Front doors, door components, central locking</b>	<b>61</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>61</b>
1.1	Safety information	61
1.2	Repair instructions	61
<b>2</b>	<b>Door</b>	<b>62</b>
2.1	Assembly overview – door	62
2.2	Removing and installing inner door seal	64
2.3	Removing and installing outer door seal	66
2.4	Removing and installing door	66
2.5	Adjusting door	69
2.6	Adjusting striker pin	71
2.7	Removing and installing door arrester	71
2.8	Removing and installing door hinge, left-hand drive vehicles	72
2.9	Removing and installing door hinge, right-hand drive vehicles	74
<b>3</b>	<b>Door components</b>	<b>76</b>
3.1	Assembly overview – door components	76
3.2	Assembly overview – assembly carrier	76
3.3	Assembly overview – exterior door handle [EX6]/[EX7] and lock unit [VX21]/[VX22]	77
3.4	Removing and installing striker pin	80
3.5	Removing and installing exterior door handle [EX6]/[EX7]	80
3.6	Removing and installing lock cylinder	82
3.7	Removing and installing mounting bracket	82
3.8	Removing and installing lock unit [VX21]/[VX22]	84
3.9	Assembling exterior door handle [EX6]/[EX7]	84
3.10	Removing and installing Bowden cable for exterior door handle	85
3.11	Removing and installing Bowden cable for interior door handle	86
3.12	Removing and installing assembly carrier	87
3.13	Removing and installing window regulator motor [V147]/[V148]	88
3.14	Removing and installing window channel	89
3.15	Removing and installing outer window slot seal	90
3.16	Removing and installing inner window slot seal	91
3.17	Removing and installing A-pillar trim	93



<b>4</b>	<b>Central locking</b> .....	<b>94</b>
4.1	Overview of fitting locations – central locking system .....	94
4.2	Removing and installing door control unit [J386]/[J387] .....	97
4.3	Removing and installing tank flap release [EX13] .....	97
4.4	Removing and installing actuator for high-voltage charging flap lock 1 [F496] .....	98
4.5	Removing and installing ignition key battery .....	98
<b>58</b>	<b>Rear doors, door components</b> .....	<b>99</b>
<b>1</b>	<b>Safety information and repair notes</b> .....	<b>99</b>
1.1	Safety information .....	99
1.2	Repair instructions .....	99
<b>2</b>	<b>Door</b> .....	<b>100</b>
2.1	Assembly overview – door .....	100
2.2	Removing and installing door .....	102
2.3	Adjusting striker pin .....	104
2.4	Removing and installing door joint seal .....	105
2.5	Removing and installing inner door seal .....	106
2.6	Adjusting door .....	108
2.7	Removing and installing door hinge .....	110
2.8	Removing and installing door arrester .....	111
<b>3</b>	<b>Door components</b> .....	<b>113</b>
3.1	Assembly overview – door components .....	113
3.2	Assembly overview – assembly carrier .....	113
3.3	Assembly overview – rear exterior door handle [EX8]/[EX9] and rear door lock unit [VX83]/[VX84] .....	114
3.4	Removing and installing striker pin .....	116
3.5	Assembling rear exterior door handle [EX8]/[EX9] .....	116
3.6	Removing and installing rear exterior door handle [EX8]/[EX9] .....	117
3.7	Removing and installing mounting bracket .....	118
3.8	Removing and installing rear door lock unit [VX83]/[VX84] .....	120
3.9	Removing and installing Bowden cable for exterior door handle .....	120
3.10	Removing and installing Bowden cable for interior door handle .....	121
3.11	Removing and installing assembly carrier .....	122
3.12	Removing and installing rear window regulator motor [V471]/[V472] .....	123
3.13	Removing and installing window channel .....	124
3.14	Removing and installing window slot inner seal .....	126
3.15	Removing and installing window slot outer seal .....	127
<b>60</b>	<b>Sunroof</b> .....	<b>130</b>
<b>1</b>	<b>Safety information and repair notes</b> .....	<b>130</b>
1.1	Safety information .....	130
1.2	Repair instructions .....	130
<b>2</b>	<b>Sliding sunroof</b> .....	<b>131</b>
2.1	Assembly overview – sliding sunroof .....	131
2.2	Assembly overview - sliding sunroof seals .....	133
2.3	Assembly overview – sun blind .....	134
2.4	Removing and installing sliding sunroof frame .....	136
2.5	Removing and installing wind deflector .....	143
2.6	Removing and installing sunroof panel .....	144
2.7	Adjusting sunroof panel .....	145
2.8	Removing and installing slotted guide .....	147
2.9	Removing and installing front trim for sliding sunroof .....	148
2.10	Removing and installing sliding sunroof adjustment control unit [J245] .....	149
2.11	Adapting sliding sunroof adjustment control unit [J245] .....	149
2.12	Removing and installing sliding sunroof seals .....	150



2.13	Removing and installing sun blind	156
2.14	Removing and installing sunroof sun blind cross strut	157
2.15	Removing and installing sun blind handle	158
2.16	Removing and installing sliding sunroof motor [V1]	159
2.17	Manual operation	159
<b>63</b>	<b>Bumpers</b>	<b>161</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>161</b>
1.1	Safety information	161
1.2	Repair instructions	161
<b>2</b>	<b>Bumper, front</b>	<b>162</b>
2.1	Assembly overview – bumper cover	162
2.2	Assembly overview – bumper carrier	162
2.3	Assembly overview – attachments	163
2.4	Assembly overview – attachments, GTI, GTD, GTE	164
2.5	Assembly overview – attachments, GTI Clubsport	165
2.6	Assembly overview – add-on parts, R-Line	166
2.7	Assembly overview – add-on parts, R model	168
2.8	Removing and installing bumper cover	168
2.9	Repairing bumper cover	170
2.10	Removing and installing bumper carrier	171
2.11	Removing and installing centre air intake grille	172
2.12	Removing and installing centre air intake grille, GTI, GTD, GTE, R-Line	173
2.13	Removing and installing centre air intake grille, GTI Clubsport	174
2.14	Removing and installing centre air intake grille, R model	175
2.15	Removing and installing bumper cover reinforcement, GTI, GTD, GTE, R-Line	175
2.16	Removing and installing bumper cover reinforcement, R model, GTI Clubsport	176
2.17	Removing and installing spoiler strip	177
2.18	Removing and installing trim strip	178
2.19	Removing and installing trim strip, GTI, GTD, GTE, R-Line	179
2.20	Removing and installing trim strip, R model	179
2.21	Removing and installing side air intake grille for front bumper	180
2.22	Removing and installing trim strip for side air intake grille	181
2.23	Removing and installing trim strip for side air intake grille, GTI, GTD, GTE, R-Line	181
2.24	Removing and installing stiffening profile for front bumper	182
2.25	Removing and installing front spoiler bracket	183
2.26	Installing holder for park assist steering sender	183
2.27	Installing holder for park assist steering sender, R model	186
2.28	Removing and installing towing eye cap, one-piece	188
2.29	Removing and installing towing eye cap, two-piece	189
2.30	Removing and installing number plate carrier	189
<b>3</b>	<b>Bumper, rear</b>	<b>191</b>
3.1	Assembly overview – bumper cover	191
3.2	Assembly overview – bumper cover, GTI Clubsport	193
3.3	Assembly overview – bumper cover, R-Line	193
3.4	Assembly overview – bumper cover, R model	195
3.5	Assembly overview – bumper carrier	195
3.6	Removing and installing bumper cover	196
3.7	Repairing bumper cover	198
3.8	Removing and installing bumper carrier	198
3.9	Removing and installing forced ventilation for passenger compartment	198
3.10	Checking forced ventilation for passenger compartment	199
3.11	Removing and installing reflector for rear bumper	199
3.12	Removing and installing bumper cover trim	200
3.13	Removing and installing bumper cover trim, R line	201
3.14	Removing and installing spoiler strip, R-Line, GTI Clubsport	202



3.15	Removing and installing spoiler strip, R model	202
3.16	Removing and installing trim strip for rear bumper	203
3.17	Installing holder for parking aid sender	203
3.18	Installing holder for park assist steering sender	206
3.19	Removing and installing number plate carrier	208
3.20	Removing and installing towing eye cap, one-piece	209
<b>64</b>	<b>- Glazing</b>	<b>211</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>211</b>
1.1	Safety information	211
1.2	Repair instructions	211
<b>2</b>	<b>Repair notes</b>	<b>212</b>
2.1	Minimum drying times for bonded windows	212
2.2	Repairing windows	212
2.3	Installation instructions for bonded windows	212
2.4	Preparing old undamaged windows for installing	214
2.5	Preparing new windows for installing	215
2.6	Preparing body flange for installing	217
2.7	Removing broken window	219
2.8	Cleaning off excess adhesive	219
<b>3</b>	<b>Windscreen</b>	<b>220</b>
3.1	Assembly overview – windscreen	220
3.2	Removing and installing windscreen	220
3.3	Removing broken windscreen	226
<b>4</b>	<b>Rear windscreen</b>	<b>227</b>
4.1	Assembly overview – rear window	227
4.2	Removing and installing rear window	227
4.3	Removing broken rear window	230
<b>5</b>	<b>Side windows</b>	<b>231</b>
5.1	Assembly overview - front side window	231
5.2	Removing and installing front side window	231
5.3	Removing broken front side window	233
<b>6</b>	<b>Door windows</b>	<b>234</b>
6.1	Assembly overview - rear door window	234
6.2	Assembly overview - front door window	234
6.3	Assembly overview – fixed rear door window	235
6.4	Removing and installing front door window	236
6.5	Removing and installing rear door window	239
6.6	Removing and installing fixed rear door window	241
<b>66</b>	<b>- Exterior equipment</b>	<b>242</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>242</b>
1.1	Safety information	242
1.2	Repair instructions	242
<b>2</b>	<b>Radiator grille and front trim</b>	<b>243</b>
2.1	Assembly overview – radiator grille, Golf, R-Line	243
2.2	Assembly overview – radiator grille, GTI, GTD, GTE, R model	243
2.3	Removing and installing radiator grille	244
2.4	Removing and installing front trim	245
2.5	Removing and installing trim strip for radiator grille	246
<b>3</b>	<b>Spoiler</b>	<b>248</b>
3.1	Assembly overview – spoiler	248
3.2	Removing and installing spoiler	248
3.3	Removing and installing spoiler trim	249



<b>4</b>	<b>Mouldings, trims, extensions</b>	<b>251</b>
4.1	Assembly overview - side member trim	251
4.2	Assembly overview – water deflector	251
4.3	Removing and installing side member trim, GTI, GTD, GTE, GTI Clubsport	252
4.4	Removing and installing side member trim, R-Line	253
4.5	Removing and installing side member trim, R model	254
4.6	Removing and installing retaining strip for side member trim, GTI, GTD, GTE, R-Line	256
4.7	Removing and installing retaining strip for side member trim, R model	257
4.8	Removing and installing retaining strip	259
4.9	Removing and installing water deflector	259
4.10	Removing and installing B-pillar trim on door	260
4.11	Removing and installing wheel arch trim	263
<b>5</b>	<b>Noise insulation</b>	<b>265</b>
5.1	Assembly overview - noise insulation	265
5.2	Removing and installing noise insulation	267
<b>6</b>	<b>Underbody cladding</b>	<b>270</b>
6.1	Assembly overview ? underbody cladding	270
6.2	Assembly overview – underbody cladding, GTE	272
6.3	Assembly overview – underbody cladding, GTI Clubsport	273
6.4	Assembly overview – underbody cladding, R model	274
6.5	Assembly overview - bracing on underbody	275
6.6	Removing and installing front underbody cladding	276
6.7	Removing and installing side underbody cladding	277
6.8	Removing and installing underbody cladding, centre	277
6.9	Removing and installing underbody cladding, rear centre	278
6.10	Removing and installing centre rear underbody cladding, R model, GTI Clubsport	279
6.11	Removing and installing rear underbody cladding	279
6.12	Removing and installing rear underbody cladding, GTE	280
6.13	Removing and installing rear underbody cladding, GTI Clubsport	280
6.14	Removing and installing skid plate	281
6.15	Removing and installing front tunnel cross-piece	282
6.16	Removing and installing rear tunnel cross-piece	282
6.17	Removing and installing protective bar for rear axle	283
<b>7</b>	<b>Decorative film and protective film</b>	<b>284</b>
7.1	Renewing decorative film, GTI Clubsport, GTI TCR 45	284
<b>8</b>	<b>Exterior mirror</b>	<b>286</b>
8.1	Assembly overview – exterior mirror	286
8.2	Removing and installing exterior mirror [VX4]/[VX5]	288
8.3	Removing and installing upper mirror cover	289
8.4	Removing and installing mirror frame	290
8.5	Removing and installing mirror adjustment unit	292
8.6	Removing and installing mirror glass	292
<b>9</b>	<b>Wheel housing liner</b>	<b>294</b>
9.1	Assembly overview – front wheel housing liner	294
9.2	Assembly overview – rear wheel housing liner	294
9.3	Removing and installing front wheel housing liner	295
9.4	Removing and installing rear wheel housing liner	297
9.5	Removing and installing side member trim	297
<b>10</b>	<b>Lettering and emblems</b>	<b>299</b>
10.1	Assembly overview – lettering and badges	299
10.2	Removing and installing front badge	299
10.3	Removing and installing badge at rear	300
10.4	Removing and installing lettering at rear	300
10.5	Removing and installing lettering at rear, GTI, GTD, GTE, GTI Clubsport, R model	302
10.6	Removing and installing lettering and badges for radiator grille	303



---

10.7	Renewing lettering and badges on sides, wing .....	304
10.8	Renewing lettering and badges on sides, B-pillar .....	305
<b>11</b>	<b>Towing bracket .....</b>	<b>307</b>
11.1	Removing and installing trailer detector control unit [J345] .....	307
11.2	Hinged towing bracket [VX15] .....	307
<b>12</b>	<b>Heat shields .....</b>	<b>311</b>
12.1	Assembly overview - heat shields .....	311
12.2	Removing and installing front heat shield .....	311
12.3	Removing and installing centre heat shield .....	312
12.4	Removing and installing rear heat shield .....	314
12.5	Removing and installing heat shield for plenum chamber bulkhead .....	315