



Contents

00 - Technical data	1
1 Basic instructions	1
1.1 Original joint	1
1.2 Used joining techniques	1
2 Vehicle identification data	2
2.1 Vehicle identification number	2
2.2 Type plate	3
2.3 Vehicle data sticker	4
3 Safety information	5
4 Body work for which HV electrical system must be de-energised	6
4.1 The following body work requires the HV electrical system to be de-energised.	6
5 Moulded foam inserts	7
6 Galvanized body parts, high- and higher-strength and hot-formed body panels	9
7 Laser welding	12
8 Gaps/shut lines	13
8.1 Body – front	13
8.2 Body, centre	14
8.3 Body, rear	16
9 Body dimensions	18
9.1 Body – front	18
9.2 Body, centre	19
9.3 Body, rear	24
9.4 Floor panel, front	25
9.5 Floor panel, centre	26
9.6 Floor panel, rear	27
10 Straightening bracket set	29
10.1 Overview	29
11 Portal gauge	31
11.1 Setup overview of complete body	31
50 - Body - front	33
1 Overview of parts	33
2 Renewing right bracket	34
2.1 Tools	35
2.2 Removing	35
2.3 Installing	36
3 Repairing threads for securing subframe	40
3.1 Contents of thread repair kit	41
3.2 Repairing threads	42
4 Renewing mounting bracket for subframe	46
4.1 Tools	47
4.2 Removing	47
4.3 Installing	49
5 Renewing front longitudinal member end plate	53
5.1 Tools	54
5.2 Removing	54
5.3 Installing	56
6 Renewing upper wheel housing longitudinal member	59
6.1 Tools	60
6.2 Removing	60



6.3	Installing	62
7	Renewing upper wheel housing longitudinal member - part section	66
7.1	Tools	67
7.2	Removing	67
7.3	Installing	69
8	Renewing upper inner wheel housing longitudinal member	73
8.1	Tools	74
8.2	Removing	74
8.3	Installing	76
9	Renewing front wheel housing	80
9.1	Tools	81
9.2	Removing	81
9.3	Installing	84
10	Renewing front left longitudinal member, ROW models (Rest of the World)	90
10.1	Tools	91
10.2	Removing	91
10.3	Installing	93
11	Renewing front left longitudinal member, NAR models (North America Region)	100
11.1	Tools	101
11.2	Removing	101
11.3	Installing	103
12	Renewing front right longitudinal member, ROW models (Rest of the World)	111
12.1	Tools	112
12.2	Removing	112
12.3	Installing	114
13	Renewing front right longitudinal member, NAR models (North America Region)	122
13.1	Tools	123
13.2	Removing	123
13.3	Installing	125
14	Renewing front left longitudinal member (part section), ROW models (Rest of the World)	133
14.1	Tools	134
14.2	Removing	134
14.3	Installing	137
15	Renewing front right longitudinal member (part section), ROW models (Rest of the World)	143
15.1	Tools	144
15.2	Removing	144
15.3	Installing	147
16	Renewing studs	152
51 - Body - centre		153
1	Overview of parts	153
2	Renewing roof - vehicles with no panorama tilting sunroof	154
2.1	Tools	155
2.2	Removing	156
2.3	Installing	159
3	Renewing roof - vehicles with panorama tilting sunroof	170
3.1	Tools	171
3.2	Removing	172
3.3	Installing	175
4	Renewing A-pillar	185
4.1	Tools	187
4.2	Removing	187
4.3	Installing	189



5	Renewing upper A-pillar reinforcement (part section)	194
5.1	Tools	195
5.2	Removing	195
5.3	Installing	198
6	Renewing A-pillar reinforcement (part section)	206
6.1	Tools	207
6.2	Removing	207
6.3	Installing	209
7	Renewing B-pillar	213
7.1	Tools	215
7.2	Type plate	215
7.3	Removing	216
7.4	Installing	218
8	Renewing B-pillar reinforcement	223
8.1	Tools	224
8.2	Type plate	224
8.3	Removing	225
8.4	Installing	227
9	Renewing inner B-pillar	232
9.1	Tools	233
9.2	Removing	233
9.3	Installing	234
10	Renewing outer side member	238
10.1	Tools	239
10.2	Type plate	239
10.3	Removing	240
10.4	Installing	242
11	Renewing side member reinforcement, ROW models (Rest of the World)	247
11.1	Tools	248
11.2	Removing	248
11.3	Installing	250
12	Renewing side member reinforcement, NAR models (North America Region)	254
12.1	Tools	255
12.2	Removing	255
12.3	Installing	257
13	Renewing side member cover plate	261
13.1	Tools	262
13.2	Removing	262
13.3	Installing	263
53 - Body - rear		267
1	Overview of parts	267
2	Renewing rear cross panel	268
2.1	Tools	269
2.2	Removing	269
2.3	Installing	272
3	Renewing rear cross member	277
3.1	Tools	278
3.2	Removing	278
3.3	Installing	279
4	Renewing corner reinforcing	283
4.1	Tools	284
4.2	Removing	284
4.3	Installing	286



5	Renewing luggage compartment floor (front-wheel drive)	290
5.1	Tools	291
5.2	Removing	291
5.3	Installing	293
6	Renewing luggage compartment floor (all-wheel drive)	298
6.1	Tools	299
6.2	Removing	299
6.3	Installing	301
7	Renewing rear longitudinal member (part section)	306
7.1	Tools	307
7.2	Removing	307
7.3	Installing	309
8	Renewing rear longitudinal member (part section - second part section of torsion beam axle)	312
8.1	Tools	313
8.2	Moulded foam inserts	313
8.3	Removing	313
8.4	Installing	316
9	Renewing rear longitudinal member (part section - second part section of multi-link suspension)	325
9.1	Tools	326
9.2	Moulded foam inserts	326
9.3	Removing	326
9.4	Installing	330
10	Renewing side panel (part section)	340
10.1	Tools	342
10.2	Removing	342
10.3	Installing	344
11	Renewing outer wheel housing liner, ROW models (Rest of the World)	350
11.1	Tools	351
11.2	Removing	351
11.3	Installing	354
12	Renewing outer wheel housing liner, NAR models (North America Region)	360
12.1	Tools	361
12.2	Removing	361
12.3	Installing	364