



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with start/stop system	1
2 Identification	2
2.1 Gearbox identification	2
3 Repair notes	3
3.1 General repair instructions	3
4 Technical data	6
4.1 Allocation gearbox - engine	6
4.2 Capacities	6
5 Overview - power transmission	7
6 Electrical components	9
6.1 Overview of fitting locations - electrical components	9
30 - Clutch	11
1 Clutch mechanism	11
1.1 Assembly overview - pedal cluster	11
1.2 Assembly overview - clutch hydraulics	13
1.3 Removing and installing bearing bush	15
1.4 Checking clutch master cylinder and clutch slave cylinder	16
1.5 Removing and installing clutch position sender G476	17
1.6 Removing and installing return spring	18
1.7 Removing and installing over-centre spring	21
1.8 Removing and installing clutch pedal	24
1.9 Removing and installing mounting bracket	26
1.10 Removing and installing clutch master cylinder	31
1.11 Removing and installing clutch slave cylinder	32
1.12 Removing and installing lines for clutch mechanism	34
1.13 Bleeding clutch mechanism	37
2 Clutch	40
34 - Controls, housing	41
1 Selector mechanism	41
1.1 Installation position - selector mechanism	41
1.2 Assembly overview – gear knob and cover	42
1.3 Assembly overview - selector mechanism	43
1.4 Removing and installing gear knob	46
1.5 Removing and installing selector mechanism	48
1.6 Adjusting selector mechanism	57
1.7 Checking selector mechanism	60
2 Removing and installing gearbox	61
2.1 Removing gearbox	61
2.2 Installing gearbox	72
2.3 Specified torques for gearbox	76
3 Assembly mountings	77
3.1 Assembly overview - assembly mountings	77
4 Gear oil	80
4.1 Checking gear oil level	80
5 Dismantling and assembling gearbox	82
5.1 Assembly overview - selector unit	82
5.2 Removing and installing selector unit with gearbox installed	83



5.3	Repairing selector unit	88
5.4	Renewing selector shaft seal	89
6	Gearbox housing, clutch housing	91
35	Gears, shafts	92
1	Input shaft	92
2	Output shaft	93
39	Final drive - differential	94
1	Oil seals	94
1.1	Overview of fitting locations - seals	94
1.2	Renewing left seal	94
1.3	Renewing right oil seal	97
2	Differential	101