



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
<b>2 Identification</b>	<b>2</b>
<b>3 Technical data</b>	<b>3</b>
3.1 Allocation gearbox - engine	3
3.2 Calculation of gear ratios	3
3.3 Capacities	3
<b>4 Overview - power transmission</b>	<b>4</b>
<b>5 Electrical components</b>	<b>6</b>
<b>6 Repair notes</b>	<b>7</b>
6.1 General repair instructions	7
<b>30 - Clutch</b>	<b>11</b>
<b>1 Clutch mechanism</b>	<b>11</b>
1.1 Assembly overview - clutch release mechanism	11
1.2 Repairing clutch release mechanism	13
<b>2 Clutch</b>	<b>15</b>
2.1 Assembly overview - clutch	15
2.2 Removing and installing clutch	17
<b>34 - Controls, housing</b>	<b>33</b>
<b>1 Selector mechanism</b>	<b>33</b>
<b>2 Removing and installing gearbox</b>	<b>34</b>
<b>3 Transporting gearbox</b>	<b>35</b>
<b>4 Gear oil</b>	<b>36</b>
<b>5 Dismantling and assembling gearbox</b>	<b>37</b>
5.1 Schematic overview - gearbox	37
5.2 Assembly overview - gearbox	38
5.3 Assembly overview - cover for gearbox housing and 5th gear	38
5.4 Assembly overview - clutch housing	40
5.5 Assembly overview - shafts, differential, selector mechanism	40
5.6 Assembly overview - selector forks	42
5.7 Repairing selector forks	43
5.8 Dismantling and assembling gearbox	48
<b>6 Gearbox housing, clutch housing</b>	<b>62</b>
6.1 Assembly overview - gearbox housing and clutch housing	62
6.2 Repairing gearbox housing	64
<b>35 - Gears, shafts</b>	<b>66</b>
<b>1 Input shaft</b>	<b>66</b>
1.1 Assembly overview - input shaft	66
1.2 Dismantling and assembling input shaft	68
1.3 Renewing input shaft seal	83
<b>2 Output shaft</b>	<b>86</b>
2.1 Assembly overview - output shaft	86
2.2 Dismantling and assembling output shaft	88
<b>39 - Final drive - differential</b>	<b>97</b>
<b>1 Oil seals</b>	<b>97</b>
1.1 Overview of fitting locations - seals	97
<b>2 Differential</b>	<b>98</b>



2.1	Assembly overview - differential .....	98
2.2	Dismantling and assembling differential .....	100
2.3	Adjusting differential .....	109