



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
<b>2 Identification</b>	<b>2</b>
2.1 Gearbox identification	2
<b>3 Repair instructions</b>	<b>4</b>
3.1 General repair instructions	4
<b>4 Technical data</b>	<b>7</b>
4.1 Capacities	7
<b>5 Electrical components</b>	<b>8</b>
5.1 Overview of fitting locations - electrical components	8
<b>6 Overview - power transmission</b>	<b>10</b>
<b>30 - Clutch</b>	<b>12</b>
<b>1 Clutch mechanism</b>	<b>12</b>
1.1 Assembly overview - pedal cluster	12
1.2 Assembly overview - clutch hydraulics	14
1.3 Checking clutch master cylinder and clutch slave cylinder	18
1.4 Removing and installing bearing bush	19
1.5 Removing and installing clutch position sender G476	20
1.6 Removing and installing return spring	21
1.7 Removing and installing over-centre spring	24
1.8 Removing and installing clutch pedal	27
1.9 Removing and installing mounting bracket	29
1.10 Removing and installing clutch master cylinder	34
1.11 Removing and installing clutch slave cylinder	35
1.12 Removing and installing lines for clutch mechanism	38
1.13 Bleeding clutch mechanism	42
<b>2 Clutch</b>	<b>45</b>
<b>34 - Controls, housing</b>	<b>46</b>
<b>1 Selector mechanism</b>	<b>46</b>
1.1 Installation position - selector mechanism	46
1.2 Assembly overview – gear knob and cover	47
1.3 Assembly overview - selector mechanism	49
1.4 Removing and installing gear knob	51
1.5 Removing and installing selector mechanism	53
1.6 Repairing selector mechanism	61
1.7 Adjusting selector mechanism	66
1.8 Checking selector mechanism	70
<b>2 Removing and installing gearbox</b>	<b>71</b>
2.1 Removing gearbox	71
2.2 Installing gearbox	83
2.3 Specified torques for gearbox	86
<b>3 Assembly mountings</b>	<b>87</b>
3.1 Assembly overview - assembly mountings	87
<b>4 Transporting gearbox</b>	<b>90</b>
<b>5 Dismantling and assembling gearbox</b>	<b>92</b>
5.1 Assembly overview - selector unit	92
5.2 Removing and installing selector unit with gearbox installed	94
5.3 Repairing selector unit	97



5.4	Renewing selector shaft seal .....	98
<b>6</b>	<b>Gearbox housing, clutch housing</b> .....	<b>100</b>
<b>7</b>	<b>Gear oil</b> .....	<b>101</b>
7.1	Checking gear oil level .....	101
7.2	Draining and filling gear oil .....	101
<b>35 - Gears, shafts</b> .....		<b>105</b>
1	Input shaft .....	105
2	Output shaft .....	106
<b>39 - Final drive - differential</b> .....		<b>107</b>
1	Seals .....	107
1.1	Overview of fitting locations - seals .....	107
1.2	Renewing left seal .....	107
1.3	Renewing right seal .....	110
2	Differential .....	114