



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety precautions when working on vehicles with a start/stop system	1
1.3 All-wheel drive - notes on performance test	1
2 Identification	2
2.1 Gearbox identification	2
3 Technical data	5
3.1 Capacities	5
4 Overview - power transmission	6
4.1 Overview - power transmission - front-wheel drive	6
4.2 Overview - power transmission - all-wheel drive	7
5 Electrical components	10
5.1 Overview of fitting locations - electrical components	10
6 Repair instructions	12
6.1 General repair instructions	12
30 - Clutch	15
1 Clutch mechanism	15
1.1 Overview of fitting locations – clutch mechanism	15
1.2 Assembly overview - pedal cluster	16
1.3 Assembly overview - clutch hydraulics	18
1.4 Removing and installing bearing bush	22
1.5 Checking clutch master cylinder and clutch slave cylinder	23
1.6 Removing and installing clutch position sender G476	24
1.7 Removing and installing return spring	25
1.8 Removing and installing over-centre spring	28
1.9 Removing and installing clutch pedal	32
1.10 Removing and installing mounting bracket	33
1.11 Removing and installing clutch master cylinder	39
1.12 Removing and installing bleeder	40
1.13 Removing and installing lines for clutch mechanism	43
1.14 Bleeding clutch mechanism	47
2 Clutch	50
2.1 Determining make of clutch	50
34 - Controls, housing	52
1 Selector mechanism	52
1.1 Installation position - selector mechanism	52
1.2 Assembly overview – gear knob and cover	53
1.3 Assembly overview - selector mechanism	55
1.4 Removing and installing gear knob	57
1.5 Removing and installing selector mechanism	59
1.6 Repairing selector mechanism	63
1.7 Adjusting selector mechanism	68
1.8 Checking selector mechanism	72
2 Removing and installing gearbox	74
2.1 Removing gearbox	74
2.2 Installing gearbox	111
2.3 Specified torques for gearbox	116
3 Bevel box	118
3.1 Assembly overview - bevel box	118



3.2	Distinguishing between different types of bevel boxes	120
3.3	Removing bevel box	120
3.4	Installing bevel box	128
4	Front differential lock	134
4.1	Assembly overview - front differential lock	134
4.2	Removing front differential lock	134
4.3	Installing front differential lock	138
4.4	Removing and installing differential lock control unit J647	140
5	Transporting gearbox	142
6	Gear oil	143
6.1	Distinguishing between different manual gearbox types when filling oil	143
6.2	Checking gear oil level	143
7	Dismantling and assembling gearbox	148
7.1	Assembly overview - selector unit	148
7.2	Removing and installing selector unit with gearbox installed	149
7.3	Renewing selector shaft seal	153
8	Gearbox housing, clutch housing	156
35 - Gears, shafts		157
1	Input shaft	157
2	Output shaft	158
39 - Final drive - differential		159
1	Oil seals	159
1.1	Overview of fitting locations - oil seals	159
1.2	Renewing left seal	161
1.3	Renewing right seal	164
2	Differential	179
3	Components of bevel box	180
3.1	Renewing bevel box seals	180
3.2	Renewing output flange and redetermining thickness of shim	180
3.3	Renewing needle bearing (polygon bearing) and oil seal for right flange shaft	180
4	Components of front differential lock	185
4.1	Checking function	185
4.2	Removing and installing pump V181	185
4.3	Removing and installing coupling for front differential lock	186
4.4	Renewing seals for front differential lock	187
5	Gear oil	188
5.1	Checking gear oil level	188
6	Oil for front differential lock	194
6.1	Checking oil level for front differential lock	194
6.2	Draining and filling oil for front differential lock	195