



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 Safety precautions when using testing and measuring instruments during a road test	1
1.3 Safety precautions when tow-starting or towing	1
1.4 Rules for safety when working on the gearbox	2
2 Identification	3
2.1 Gearbox identification	3
2.2 Identification of torque converter	3
3 Repair notes	5
3.1 Rules for cleanliness	5
3.2 General information	5
3.3 General repair instructions	6
3.4 Gaskets and seals	7
3.5 Nuts and bolts	7
4 Technical data	8
4.1 Capacities	8
32 - Torque converter	9
1 Torque converter	9
1.1 Assembly overview - torque converter	9
1.2 Removing and installing torque converter	9
1.3 Draining torque converter	10
1.4 Removing and installing torque converter oil seal	11
37 - Controls, housing	13
1 ATF circuit	13
1.1 Assembly overview - ATF circuit	13
1.2 Removing and installing ATF cooler	13
2 ATF	19
2.1 Checking ATF level	19
2.2 Draining and filling ATF	21
3 Removing and installing gearbox	23
3.1 Specified torques for gearbox	23
3.2 Removing gearbox	23
3.3 Installing gearbox	34
4 Assembly mountings	38
4.1 Assembly overview – assembly mountings	38
5 Transporting gearbox	41
6 Securing to engine and gearbox support	42
7 Selector mechanism	44
7.1 Assembly overview - selector mechanism	44
7.2 Checking selector mechanism	47
7.3 Emergency release from position P	51
7.4 Removing and installing selector mechanism	54
7.5 Removing and installing selector lever handle, T-Roc 2018 ▶	60
7.6 Setting push button in handle to installation position, T-Roc 2018 ▶	63
7.7 Adjusting selector lever cable	65
7.8 Renewing selector shaft seal	67
38 - Gears, control	71



1	Dismantling and assembling gearbox	71
1.1	Assembly overview - gearbox	71
2	ATF system	72
2.1	Removing and installing sump	72
3	Valve body	76
3.1	Assembly overview - valve body	76
3.2	Removing and installing wiring harness for senders and solenoid valves	78
3.3	Removing and installing valve body	81
3.4	Removing and installing gearbox input speed sender G182 and gearbox output speed sender G195	87
39	Final drive - differential	89
1	Oil seals	89
1.1	Overview of fitting locations - seals	89
1.2	Renewing left seal	89
1.3	Renewing right oil seal	92
2	Gearbox control system	96
2.1	Removing and installing gearbox control unit	96