



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures for working on vehicles with high-voltage system	1
1.2 General safety provisions	5
1.3 Safety measures when working on vehicles with start/stop system	6
1.4 Safety precautions when using testers and measuring instruments during a road test	6
1.5 Safety precautions when tow-starting or towing	6
<b>2 Identification</b>	<b>7</b>
2.1 Gearbox identification	7
<b>3 Repair instructions</b>	<b>8</b>
3.1 General information	8
3.2 Rules for cleanliness	9
3.3 General repair instructions	9
3.4 Safety functions of gearbox control unit	10
<b>4 Technical data</b>	<b>12</b>
4.1 Capacities	12
<b>30 - Clutch</b>	<b>13</b>
<b>1 Clutch mechanism</b>	<b>13</b>
1.1 Assembly overview - clutch engagement	13
1.2 Removing and installing clutch engagement	13
<b>2 Clutch</b>	<b>16</b>
2.1 Assembly overview - dual clutch	16
2.2 Renewing input shaft seal	16
<b>34 - Controls, housing</b>	<b>18</b>
<b>1 Mechatronic unit</b>	<b>18</b>
1.1 Assembly overview - mechatronic unit	18
1.2 Removing and installing oil pan	20
1.3 Removing and installing mechatronic unit	23
<b>2 Selector mechanism</b>	<b>28</b>
2.1 Assembly overview - selector mechanism	28
2.2 Manual release from position P	29
2.3 Removing and installing selector mechanism	30
2.4 Checking selector mechanism	35
2.5 Adjusting selector lever cable	38
2.6 Renewing selector shaft seal	39
<b>3 Removing and installing gearbox</b>	<b>46</b>
3.1 Removing gearbox	46
3.2 Installing gearbox	46
3.3 Specified torques for gearbox	47
<b>4 Assembly mountings</b>	<b>49</b>
4.1 Assembly overview - assembly mountings	49
<b>5 Transporting gearbox</b>	<b>50</b>
<b>6 Gear oil circuit</b>	<b>52</b>
6.1 Assembly overview - gear oil circuit	52
6.2 Removing and installing gear oil cooler	52
6.3 Removing and installing gear oil filter	55
<b>7 Gear oil</b>	<b>57</b>
7.1 Overview of fitting locations - oil drain and inspection plugs	57
7.2 Checking gear oil level	57



7.3	Draining and filling gear oil .....	63
7.4	Filling with gear oil after mechatronic unit has been renewed .....	67
<b>8</b>	<b>Dismantling and assembling gearbox .....</b>	<b>71</b>
8.1	System overview - gearbox .....	71
8.2	Assembly overview - gearbox .....	71
8.3	Removing hybrid module .....	73
8.4	Renewing hybrid module .....	79
8.5	Installing hybrid module .....	85
8.6	Removing and installing cap .....	88
<b>35</b>	<b>- Gears, shafts .....</b>	<b>91</b>
1	Dismantling and assembling gears and shafts .....	91
<b>39</b>	<b>- Final drive - differential .....</b>	<b>92</b>
1	Seals .....	92
1.1	Overview of fitting locations - seals .....	92
1.2	Renewing left seal .....	92
1.3	Renewing right seal .....	95