



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 General safety provisions	1
1.2 Safety precautions when working on vehicles with a start/stop system	1
1.3 Notes on tow-starting/towing	2
1.4 Safety precautions when using test and measuring equipment during a road test	2
<b>2 Identification</b>	<b>3</b>
2.1 Gearbox identification	3
<b>3 Repair instructions</b>	<b>4</b>
3.1 General information	4
3.2 Rules for cleanliness	4
3.3 General repair instructions	4
3.4 Gaskets and seals	5
3.5 Nuts and bolts	6
<b>4 Technical data</b>	<b>7</b>
4.1 Capacities	7
<b>30 - Clutch</b>	<b>8</b>
<b>1 Clutch</b>	<b>8</b>
1.1 Assembly overview - dual clutch	8
1.2 Removing and installing clutch end cover	8
1.3 Removing dual clutch	13
1.4 Installing dual clutch	17
<b>34 - Controls, housing</b>	<b>27</b>
<b>1 Mechatronic unit</b>	<b>27</b>
1.1 Assembly overview - mechatronic unit	27
1.2 Removing and installing sump	28
1.3 Removing and installing mechatronic unit	31
<b>2 Selector mechanism</b>	<b>34</b>
2.1 Assembly overview - selector mechanism	34
2.2 Emergency release from position P	35
2.3 Removing and installing selector mechanism	36
2.4 Checking selector mechanism	40
2.5 Adjusting selector lever cable	42
2.6 Renewing selector shaft seal	43
<b>3 Removing and installing gearbox</b>	<b>49</b>
3.1 Specified torques for gearbox	49
3.2 Removing gearbox	49
3.3 Installing gearbox	70
<b>4 Assembly mountings</b>	<b>76</b>
4.1 Assembly overview - assembly mountings	76
<b>5 Transporting gearbox</b>	<b>78</b>
5.1 Transporting gearbox	78
5.2 Transporting front differential lock	79
<b>6 Securing to engine and gearbox support</b>	<b>81</b>
6.1 Installing gearbox to engine and gearbox support	81
6.2 Securing front differential lock to engine and gearbox support	82
<b>7 Gear oil circuit</b>	<b>84</b>
7.1 Assembly overview - gear oil circuit	84
7.2 Removing and installing gear oil cooler	84



7.3	Removing and installing gear oil filter	87
7.4	Removing and installing motor for auxiliary hydraulic pump 1 for gearbox oil V475	89
<b>8</b>	<b>Gear oil</b>	<b>92</b>
8.1	Overview of oil drain and inspection plugs	92
8.2	Tools for gear oil change	92
8.3	Checking gear oil level	94
8.4	Draining and filling gear oil	98
<b>9</b>	<b>Front differential lock</b>	<b>101</b>
9.1	Assembly overview - front differential lock	101
9.2	Removing front differential lock	101
9.3	Installing front differential lock	106
9.4	Removing and installing differential lock control unit J647	108
<b>35</b>	<b>Gears, shafts</b>	<b>110</b>
1	Currently, no repairs can be made to gears and shafts	110
<b>39</b>	<b>Final drive - differential</b>	<b>111</b>
<b>1</b>	<b>Oil for front differential lock</b>	<b>111</b>
1.1	Checking oil level for front differential lock	111
1.2	Draining and filling oil for front differential lock	112
<b>2</b>	<b>Oil seals</b>	<b>117</b>
2.1	Overview of fitting locations - seals	117
2.2	Renewing left seal	117
2.3	Renewing right oil seal	120
<b>3</b>	<b>Components of front differential lock</b>	<b>125</b>
3.1	Assembly overview - components of front differential lock	125
3.2	Checking function	127
3.3	Removing and installing pump for front differential lock V181	127
3.4	Removing and installing coupling for front differential lock	129
3.5	Renewing seals for front differential lock	129
3.6	Renewing ball bearing for flange shaft	138