



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on a high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety regulations for working on fuel supply	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
1.5 Safety precautions when working on ignition system	3
1.6 Safety precautions when working on the cooling system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair instructions	6
3.1 Rules for cleanliness	6
3.2 Foreign objects in engine	6
3.3 Contact corrosion	6
3.4 Routing and attachment of lines	7
3.5 Fitting radiator and condensers	7
3.6 Checking vacuum system	7
4 Hazard classification of high-voltage system	8
10 - Removing and installing engine	16
1 Removing and installing engine	16
1.1 Removing engine	16
1.2 Supporting engine and gearbox using scissor-type assembly platform VAS 6131 B	25
1.3 Separating engine and gearbox	31
1.4 Securing engine on engine and gearbox support	35
1.5 Installing engine	37
2 Assembly mountings	42
2.1 Assembly overview – assembly mountings	42
2.2 Removing and installing engine mounting	45
2.3 Removing and installing gearbox mounting	46
2.4 Removing and installing pendulum support	47
2.5 Supporting engine in installation position	48
2.6 Checking adjustment of assembly mountings	68
2.7 Adjusting assembly mountings	69
3 Engine cover panel	72
3.1 Removing and installing engine cover	72
13 - Crankshaft group	73
1 Cylinder block (pulley end)	73
1.1 Assembly overview - sealing flange, vibration-damper end	73
1.2 Removing and installing engine support	75
1.3 Removing and installing vibration damper	76
1.4 Renewing crankshaft oil seal - belt pulley end	78
1.5 Removing and installing sealing flange on pulley end	81
2 Cylinder block, gearbox end	85
2.1 Assembly overview - cylinder block, gearbox end	85
2.2 Removing and installing flywheel	87
2.3 Removing and installing sealing flange on gearbox side	88
3 Crankshaft	101
3.1 Crankshaft dimensions	101
3.2 Measuring axial clearance of crankshaft	101
4 Pistons and conrods	103



4.1	Assembly overview - pistons and conrods	103
4.2	Removing and installing pistons	107
4.3	Checking pistons and cylinder bores	108
4.4	Checking radial clearance of conrods	110
4.5	Removing and installing oil spray jets	111
4.6	Setting piston to TDC position	112
15	Cylinder head, valve gear	118
1	Cylinder head	118
1.1	Assembly overview - cylinder head	118
1.2	Assembly overview - camshaft housing	120
1.3	Removing and installing cylinder head	123
1.4	Removing and installing camshaft housing	129
1.5	Checking compression	141
2	Toothed belt drive	144
2.1	Assembly overview - toothed belt cover	144
2.2	Assembly overview - toothed belt	144
2.3	Removing and installing toothed belt guard	146
2.4	Preassembling and installing valve timing tool	147
2.5	Removing and installing toothed belt	156
2.6	Checking valve timing	162
2.7	Adjusting valve timing	164
2.8	Removing toothed belt from camshaft	175
3	Valve gear	181
3.1	Assembly overview - valve gear	181
3.2	Measuring axial play of camshaft	183
3.3	Removing and installing camshaft oil seal	184
3.4	Removing and installing camshaft adjuster	191
3.5	Removing and installing camshaft control valve 1 N205	201
3.6	Removing and installing exhaust camshaft control valve 1 N318	202
3.7	Removing and installing valve stem seals	203
4	Inlet and exhaust valves	213
4.1	Checking valve guides	213
4.2	Checking valves	214
4.3	Valve dimensions	214
17	Lubrication	215
1	Sump, oil pump	215
1.1	Assembly overview - sump/oil pump	215
1.2	Engine oil:	219
1.3	Removing and installing lower part of sump	219
1.4	Removing and installing upper part of sump	225
1.5	Removing and installing oil pump	230
1.6	Removing and installing oil level and oil temperature sender G266	232
2	Engine oil cooler	233
2.1	Assembly overview - engine oil cooler	233
2.2	Removing and installing engine oil cooler	233
3	Crankcase ventilation	235
3.1	Assembly overview - crankcase breather system	235
3.2	Removing and installing oil separator	236
4	Oil filter, oil pressure switch	240
4.1	Assembly overview - oil filter/oil pressure switch	240
4.2	Removing and installing oil pressure switch F22	242
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	244
4.4	Removing and installing oil pressure regulating valve N428	246



4.5	Checking oil pressure	246
19	Cooling	248
1	Cooling system/coolant	248
1.1	Connection diagram - coolant hoses	248
1.2	Coolant hose schematic diagram, high-voltage system	252
1.3	Checking cooling system for leaks	255
1.4	Checking cooling system of high-voltage system for leaks	259
1.5	Draining and adding coolant	270
1.6	Draining and adding coolant, high-voltage system	277
1.7	Checking filling quality, high-voltage system	286
2	Coolant pump, regulation of cooling system	290
2.1	Assembly overview - coolant pump, thermostat	290
2.2	Overview of fitting locations - electric coolant pumps	293
2.3	Assembly overview - electric coolant pump	294
2.4	Assembly overview - coolant temperature sender	296
2.5	Assembly overview - coolant valves	296
2.6	Removing and installing electric coolant pump	298
2.7	Removing and installing coolant pump	312
2.8	Removing and installing thermostat	315
2.9	Removing and installing toothed belt pulley for coolant pump	319
2.10	Removing and installing coolant temperature sender G62	321
2.11	Removing and installing radiator outlet coolant temperature sender G83	322
2.12	Removing and installing coolant valves	324
2.13	Removing and installing coolant temperature sender for heater G241	331
2.14	Removing and installing engine temperature sender 2 G788	332
3	Coolant pipes	334
3.1	Assembly overview - coolant pipes	334
3.2	Removing and installing coolant pipes	335
4	Radiator, radiator fan	344
4.1	Assembly overview - radiator/radiator fan	344
4.2	Assembly overview - radiator cowl and radiator fan	347
4.3	Removing and installing radiator	348
4.4	Removing and installing radiator cowl	363
4.5	Removing and installing radiator fan V7	370
21	Turbocharging/supercharging	371
1	Turbocharger	371
1.1	Assembly overview - turbocharger	371
1.2	Removing and installing turbocharger	376
1.3	Removing and installing charge pressure positioner V465	382
1.4	Removing and installing connection for turbocharger	385
2	Charge air system	389
2.1	Assembly overview - charge air system	389
2.2	Removing and installing charge pressure sender GX26	391
2.3	Removing and installing charge air cooler	392
2.4	Checking charge air system for leaks	393
2.5	Removing and installing air pipe	395
24	Mixture preparation - injection	398
1	Injection system	398
1.1	Overview of fitting locations - injection system	398
2	Injectors	406
2.1	Assembly overview - fuel rail with injectors	406
2.2	Removing and installing fuel rail	410



2.3	Removing and installing injectors	411
2.4	Cleaning injectors	426
3	Air filter	428
3.1	Assembly overview - air filter housing	428
3.2	Removing and installing air filter housing	430
3.3	Removing and installing resonator for intake air	431
4	Intake manifold	433
4.1	Assembly overview – intake manifold	433
4.2	Removing and installing intake manifold	435
4.3	Removing and installing throttle valve module GX3	438
4.4	Cleaning throttle valve module GX3	439
5	Senders and sensors	441
5.1	Removing and installing fuel pressure sender G247	441
5.2	Checking fuel pressure sender G247	442
5.3	Removing and installing intake manifold sender GX9	446
5.4	Removing and installing pressure differential sender for particulate filter G1037	447
6	Engine control unit	449
6.1	Removing and installing engine control unit J623	449
7	High-pressure pump	454
7.1	Assembly overview - high-pressure pump	454
7.2	Removing and installing high-pressure pump	460
7.3	Removing and installing high-pressure pipe	463
8	Lambda probe	465
8.1	Assembly overview - Lambda probe	465
8.2	Removing and installing Lambda probe 1 before catalytic converter GX10	468
8.3	Removing and installing Lambda probe 1 after catalytic converter GX7	469
26 - Exhaust system		473
1	Exhaust pipes and silencers	473
1.1	Assembly overview - silencers	473
1.2	Separating exhaust pipes from silencers	478
1.3	Removing and installing silencer	479
1.4	Installation position of clamp	482
1.5	Aligning exhaust system free of stress	482
1.6	Checking exhaust system for leaks	483
2	Emission control	484
2.1	Assembly overview – emission control	484
2.2	Assembly overview - bracket and pipes for pressure differential sender for particulate filter G1037	490
2.3	Removing and installing catalytic converter	492
2.4	Removing and installing particulate filter	501
3	Exhaust gas temperature regulation	502
3.1	Assembly overview – exhaust gas temperature regulation	502
3.2	Removing and installing parts of exhaust gas temperature regulation	504
28 - Ignition system		507
1	Ignition system	507
1.1	Assembly overview - ignition system	507
1.2	Removing and installing ignition coils with output stage	509
1.3	Removing and installing knock sensor 1 G61	512
1.4	Removing and installing Hall sender	513
1.5	Removing and installing engine speed sender G28	515
93 - Electric drive systems		517
1	Warning stickers	517



1.1	Checking warning stickers	517
2	High-voltage components	524
2.1	Overview of fitting locations - high-voltage components	524
3	High-voltage battery unit	527
3.1	Assembly overview - high-voltage battery, Golf ▶08.2020, Passat ▶09.2019	527
3.2	Assembly overview - high-voltage battery, Passat 09.2019▶, Golf 08.2020▶, Tiguan, Arteon	528
3.3	Visual inspection of high-voltage battery 1 AX2	529
3.4	Removing and installing high-voltage battery 1 AX2	530
3.5	Leakage test of high-voltage battery 1 AX2	537
3.6	Searching for leaks from high-voltage battery	538
3.7	Raising high-voltage battery 1 AX2	538
3.8	Removing and installing battery regulation control unit J840	540
4	Repairing high-voltage battery unit	550
4.1	Overview of fitting locations - high-voltage battery 1 AX2	550
4.2	Overview of fitting locations - battery modules	553
4.3	Overview of fitting locations - high-voltage connector	556
4.4	Assembly overview - battery housing	561
4.5	Assembly overview - switching unit for high-voltage battery SX6	564
4.6	Assembly overview - battery module assembly	567
4.7	Assembly overview - battery modules	570
4.8	Assembly overview - high voltage system connection	571
4.9	Assembly overview - cooling system high-voltage battery 1 AX2	573
4.10	Assembly overview - wiring harnesses	574
4.11	Diagnosis of high-voltage battery 1 AX2	576
4.12	Leakage test in cooling system of high-voltage battery 1 AX2	576
4.13	Charging and discharging battery modules	578
4.14	Opening high-voltage battery 1 AX2	580
4.15	Voltage and insulation measurement	585
4.16	Removing and installing switching unit for high-voltage battery SX6	587
4.17	Removing and installing wiring harness for high-voltage battery 1 AX2	597
4.18	Removing and installing coolant pipe	602
4.19	Removing and installing battery module assembly	605
4.20	Removing and installing battery module assembly wiring harness	625
4.21	Removing and installing high voltage system connection	626
4.22	Removing and installing coolant temperature sender 1 for high-voltage battery G898 and coolant temperature sender 2 for high-voltage battery G899	629
4.23	Closing high-voltage battery 1 AX2	630
4.24	Removing and installing battery modules J1068/J991	638
4.25	Removing and installing battery modules J992/J993	647
4.26	Removing and installing battery modules J994/J995	655
4.27	Removing and installing battery modules J996/J997	664
5	Power and control electronics for electric drive	672
5.1	Assembly overview - power and control electronics for electric drive	672
5.2	Assembly overview - mounting for power and control electronics for electric drive	676
5.3	Removing and installing power and control electronics for electric drive	679
5.4	Removing and installing base retainer for power and control electronics for electric drive JX1	691
5.5	Removing and installing high-voltage system fuse 3 S353	694
6	Charging unit for high-voltage battery	700
6.1	Assembly overview – charging unit for high-voltage battery	700
6.2	Removing and installing charging unit 1 for high-voltage battery AX4	702
6.3	Removing and installing bracket for charging unit 1 for high-voltage battery AX4	708
7	Electric drive motor	711
7.1	Removing and installing three-phase current drive VX54	711



7.2	Removing and installing drive motor temperature sender G712	711
7.3	Removing and installing drive motor rotor position sender 1 G713	711
8	High-voltage cables	712
8.1	Overview of fitting locations - high-voltage cables	712
8.2	Removing and installing high-voltage wiring harness for high-voltage battery	716
8.3	Removing and installing high-voltage wiring harness for drive motor	727
8.4	Removing and installing high-voltage cable for power and control electronics for electric drive	734
8.5	Removing and installing high-voltage cable for high-voltage heater (PTC)	736
8.6	Removing and installing high-voltage cable for electrical air conditioner compressor	738
9	Charging socket	741
9.1	Assembly overview – charging socket	741
9.2	Removing and installing high-voltage battery charging socket 1 UX4	746
9.3	Manual release mechanism for charging socket	756
9.4	Removing and installing module for battery charge selector buttons EX32	762
10	De-energising high-voltage system	765
11	Re-energising high-voltage system	767
12	Potential equalisation lines	768
12.1	General notes - potential equalisation lines	768
12.2	Overview of fitting locations - potential equalisation lines	768
12.3	Removing and installing potential equalisation line for high-voltage battery 1 AX2	773