



## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b>   | <b>1</b>  |
| <b>1 Safety information</b>  | <b>1</b>  |
| 1.1 Safety regulations for working on fuel supply                                      | 1         |
| 1.2 Safety precautions when working on vehicles with a gas system                      | 1         |
| 1.3 Safety measures when working on vehicles with a start/stop system                  | 3         |
| 1.4 Safety precautions when using testers and measuring instruments during a road test | 3         |
| 1.5 Safety precautions when working on the cooling system                              | 4         |
| 1.6 Safety precautions when working on ignition system                                 | 4         |
| <b>2 Identification</b>  | <b>5</b>  |
| 2.1 Engine number/engine data  | 5         |
| <b>3 Repair notes</b>  | <b>8</b>  |
| 3.1 Rules for cleanliness  | 8         |
| 3.2 General information  | 8         |
| 3.3 General repair instructions  | 8         |
| 3.4 Foreign objects in engine  | 10        |
| 3.5 Contact corrosion  | 10        |
| 3.6 Routing and attachment of lines  | 10        |
| 3.7 Fitting radiator and condensers  | 10        |
| 3.8 Checking vacuum system   | 10        |
| <b>10 - Removing and installing engine</b>   | <b>12</b> |
| <b>1 Removing and installing motor</b>   | <b>12</b> |
| 1.1 Removing motor   | 12        |
| 1.2 Separating engine and gearbox  | 22        |
| 1.3 Securing engine on engine and gearbox support                                      | 24        |
| 1.4 Installing engine  | 26        |
| <b>2 Assembly mountings</b>  | <b>33</b> |
| 2.1 Assembly overview - assembly mountings   | 33        |
| 2.2 Removing and installing engine mounting  | 38        |
| 2.3 Removing and installing gearbox mountings  | 39        |
| 2.4 Removing and installing pendulum support   | 41        |
| 2.5 Checking adjustment of assembly mountings (engine and gearbox mountings)           | 42        |
| 2.6 Adjusting assembly mountings   | 43        |
| 2.7 Supporting engine in installation position   | 45        |
| <b>3 Engine cover panel</b>  | <b>55</b> |
| 3.1 Removing and installing engine cover   | 55        |
| <b>13 - Crankshaft group</b>   | <b>56</b> |
| <b>1 Cylinder block (pulley end)</b>   | <b>56</b> |
| 1.1 Assembly overview - poly V-belt drive  | 56        |
| 1.2 Removing and installing poly-V belt  | 60        |
| 1.3 Removing and installing tensioner for poly V-belt                                  | 64        |
| 1.4 Removing and installing vibration damper   | 65        |
| 1.5 Removing and installing engine support   | 68        |
| 1.6 Renewing crankshaft oil seal - belt pulley end                                     | 70        |
| <b>2 Cylinder block, gearbox end</b>   | <b>74</b> |
| 2.1 Assembly overview - cylinder block, gearbox end                                    | 74        |
| 2.2 Removing and installing flywheel   | 77        |
| 2.3 Removing and installing sealing flange on gearbox side                             | 78        |
| <b>3 Crankshaft</b>  | <b>91</b> |
| 3.1 Crankshaft dimensions  | 91        |
| 3.2 Measuring axial clearance of crankshaft  | 91        |



|           |   |            |
|-----------|---|------------|
| 3.3       | Renewing needle bearing in crankshaft                             | 92         |
| <b>4</b>  | <b>Pistons and conrods</b>  | <b>96</b>  |
| 4.1       | Assembly overview - pistons and conrods                           | 96         |
| 4.2       | Removing and installing pistons                                   | 98         |
| 4.3       | Removing and installing oil spray jets                            | 100        |
| 4.4       | Separating new conrod   | 101        |
| 4.5       | Checking pistons and cylinder bores                               | 102        |
| 4.6       | Checking radial clearance of conrods                              | 104        |
| 4.7       | Setting piston to TDC position                                    | 104        |
| <b>15</b> | <b>- Cylinder head, valve gear</b>                                | <b>108</b> |
| <b>1</b>  | <b>Cylinder head</b>  | <b>108</b> |
| 1.1       | Assembly overview - cylinder head                                 | 108        |
| 1.2       | Assembly overview - camshaft housing                              | 110        |
| 1.3       | Removing and installing cylinder head                             | 113        |
| 1.4       | Removing and installing camshaft housing                          | 117        |
| 1.5       | Checking compression  | 123        |
| <b>2</b>  | <b>Toothed belt drive</b>   | <b>126</b> |
| 2.1       | Assembly overview - toothed belt cover                            | 126        |
| 2.2       | Assembly overview - toothed belt                                  | 127        |
| 2.3       | Removing and installing toothed belt guard                        | 130        |
| 2.4       | Preassembling and installing valve timing tool                    | 131        |
| 2.5       | Checking valve timing   | 139        |
| 2.6       | Adjusting valve timing  | 141        |
| 2.7       | Removing toothed belt from camshaft                               | 153        |
| 2.8       | Removing and installing toothed belt                              | 156        |
| <b>3</b>  | <b>Valve gear</b>   | <b>164</b> |
| 3.1       | Assembly overview - valve gear                                    | 164        |
| 3.2       | Removing and installing camshaft oil seal                         | 167        |
| 3.3       | Removing and installing camshaft adjuster                         | 177        |
| 3.4       | Removing and installing inlet camshaft control valve 1 N727       | 192        |
| 3.5       | Removing and installing exhaust camshaft control valve 1 N318     | 193        |
| 3.6       | Removing and installing valve stem seals                          | 194        |
| 3.7       | Removing and installing holder for oil seal                       | 209        |
| <b>4</b>  | <b>Inlet and exhaust valves</b>                                   | <b>213</b> |
| 4.1       | Checking valve guides   | 213        |
| 4.2       | Checking valves   | 214        |
| 4.3       | Valve dimensions  | 214        |
| <b>17</b> | <b>- Lubrication</b>  | <b>215</b> |
| <b>1</b>  | <b>Sump, oil pump</b>   | <b>215</b> |
| 1.1       | Assembly overview - sump/oil pump                                 | 215        |
| 1.2       | Engine oil:   | 220        |
| 1.3       | Removing and installing sump                                      | 220        |
| 1.4       | Removing and installing oil level and oil temperature sender G266 | 226        |
| 1.5       | Removing and installing oil pump                                  | 226        |
| <b>2</b>  | <b>Engine oil cooler</b>  | <b>229</b> |
| 2.1       | Assembly overview - engine oil cooler                             | 229        |
| 2.2       | Removing and installing engine oil cooler                         | 230        |
| <b>3</b>  | <b>Crankcase ventilation</b>                                      | <b>232</b> |
| 3.1       | Assembly overview - crankcase breather system                     | 232        |
| 3.2       | Removing and installing oil separator                             | 233        |
| <b>4</b>  | <b>Oil filter, oil pressure switch</b>                            | <b>238</b> |
| 4.1       | Assembly overview - oil filter/oil pressure switch                | 238        |
| 4.2       | Removing and installing oil filter housing                        | 238        |



|           |  |            |
|-----------|--|------------|
| 4.3       | Removing and installing oil pressure regulating valve N428             | 239        |
| 4.4       | Checking oil pressure and oil pressure switch                          | 240        |
| 4.5       | Removing and installing oil pressure sender G10                        | 240        |
| <b>19</b> | <b>- Cooling</b>   | <b>243</b> |
| <b>1</b>  | <b>Cooling system/coolant</b>  | <b>243</b> |
| 1.1       | Connection diagram - coolant hoses                                     | 243        |
| 1.2       | Draining and adding coolant  | 245        |
| 1.3       | Checking cooling system for leaks                                      | 254        |
| <b>2</b>  | <b>Coolant pump, regulation of cooling system</b>                      | <b>261</b> |
| 2.1       | Assembly overview - coolant pump, thermostat                           | 261        |
| 2.2       | Assembly overview - electric coolant pump                              | 263        |
| 2.3       | Assembly overview - coolant temperature sender                         | 263        |
| 2.4       | Removing and installing coolant pump                                   | 264        |
| 2.5       | Removing and installing toothed belt pulley for coolant pump           | 270        |
| 2.6       | Removing and installing electric coolant pump V188                     | 274        |
| 2.7       | Removing and installing coolant temperature sender G62                 | 276        |
| 2.8       | Removing and installing radiator outlet coolant temperature sender G83 | 278        |
| 2.9       | Removing and installing engine outlet coolant temperature sender G82   | 280        |
| 2.10      | Removing and installing engine temperature regulation module GX33      | 282        |
| 2.11      | Checking coolant pump  | 286        |
| <b>3</b>  | <b>Coolant pipes</b>   | <b>292</b> |
| 3.1       | Assembly overview - coolant pipes                                      | 292        |
| 3.2       | Removing and installing coolant pipes                                  | 294        |
| <b>4</b>  | <b>Radiator, radiator fan</b>  | <b>305</b> |
| 4.1       | Assembly overview - radiator   | 305        |
| 4.2       | Assembly overview - radiator cowl and radiator fan                     | 309        |
| 4.3       | Removing and installing radiator                                       | 310        |
| 4.4       | Removing and installing water radiator for charge air cooling circuit  | 313        |
| 4.5       | Removing and installing radiator cowl                                  | 318        |
| 4.6       | Removing and installing radiator fan V7                                | 319        |
| <b>21</b> | <b>- Turbocharging/supercharging</b>                                   | <b>321</b> |
| <b>1</b>  | <b>Turbocharger</b>  | <b>321</b> |
| 1.1       | Assembly overview - turbocharger                                       | 321        |
| 1.2       | Assembly overview - lines on turbocharger                              | 323        |
| 1.3       | Removing and installing turbocharger                                   | 325        |
| 1.4       | Removing and installing connection for turbocharger                    | 331        |
| 1.5       | Removing and installing charge pressure control module GX34            | 332        |
| <b>2</b>  | <b>Charge air system</b>   | <b>335</b> |
| 2.1       | Assembly overview - charge air system                                  | 335        |
| 2.2       | Removing and installing air pipe                                       | 338        |
| 2.3       | Removing and installing charge pressure sender GX26                    | 344        |
| 2.4       | Removing and installing charge air cooler                              | 345        |
| 2.5       | Checking charge air system for leaks                                   | 347        |
| 2.6       | Checking charge air cooler for leaks                                   | 351        |
| <b>24</b> | <b>- Mixture preparation - injection</b>                               | <b>357</b> |
| <b>1</b>  | <b>Injection system</b>  | <b>357</b> |
| 1.1       | Overview of fitting locations - injection system                       | 357        |
| <b>2</b>  | <b>Air filter</b>  | <b>366</b> |
| 2.1       | Assembly overview - air filter housing                                 | 366        |
| 2.2       | Removing and installing air filter housing                             | 368        |
| 2.3       | Removing and installing air guide on lock carrier                      | 370        |
| <b>3</b>  | <b>Intake manifold</b>   | <b>372</b> |



|                             |   |            |
|-----------------------------|---|------------|
| 3.1                         | Assembly overview - intake manifold   | 372        |
| 3.2                         | Removing and installing intake manifold   | 375        |
| 3.3                         | Removing and installing throttle valve module GX3   | 382        |
| 3.4                         | Cleaning throttle valve module GX3  | 384        |
| <b>4</b>                    | <b>Checking natural gas supply system for leaks</b>   | <b>386</b> |
| 4.1                         | Distinguishing between pressure sections of natural gas supply system   | 386        |
| 4.2                         | Determining pressure in gas system  | 390        |
| 4.3                         | Determining operating mode of natural gas vehicles  | 390        |
| 4.4                         | Activating and deactivating natural gas mode  | 390        |
| 4.5                         | Checking gas system for leaks   | 392        |
| <b>5</b>                    | <b>Gas pressure regulator</b>   | <b>397</b> |
| 5.1                         | Assembly overview - gas pressure regulator  | 397        |
| 5.2                         | Removing and installing gas pressure regulator  | 399        |
| 5.3                         | Removing and installing tank pressure sensor G400   | 404        |
| <b>6</b>                    | <b>Gas injectors</b>  | <b>407</b> |
| 6.1                         | Assembly overview - gas rail  | 407        |
| 6.2                         | Removing and installing gas rail with gas injector N366/N367/N368/N369  | 409        |
| 6.3                         | Removing and installing gas rail temperature and pressure sensor GX21   | 413        |
| <b>7</b>                    | <b>Injectors</b>  | <b>416</b> |
| 7.1                         | Assembly overview - fuel rail with injectors  | 416        |
| 7.2                         | Removing and installing fuel rail   | 418        |
| 7.3                         | Removing and installing injectors   | 420        |
| <b>8</b>                    | <b>Senders and sensors</b>  | <b>430</b> |
| 8.1                         | Removing and installing intake manifold sender GX9  | 430        |
| 8.2                         | Removing and installing fuel pressure sender G247   | 431        |
| 8.3                         | Checking fuel pressure sender G247  | 433        |
| 8.4                         | Removing and installing air mass measurement module GX35  | 437        |
| <b>9</b>                    | <b>High-pressure pump</b>   | <b>438</b> |
| 9.1                         | Assembly overview - high-pressure pump  | 438        |
| 9.2                         | Removing and installing high-pressure pump  | 439        |
| 9.3                         | Removing and installing high-pressure pipe  | 441        |
| <b>10</b>                   | <b>Lambda probe</b>   | <b>444</b> |
| 10.1                        | Assembly overview - Lambda probe  | 444        |
| 10.2                        | Removing and installing lambda probe 1 before catalytic converter GX10/lambda probe 1 after catalytic converter GX7 | 445        |
| <b>11</b>                   | <b>Engine control unit</b>  | <b>448</b> |
| 11.1                        | Removing and installing engine control unit J623  | 448        |
| <b>26 - Exhaust system</b>  |   | <b>456</b> |
| <b>1</b>                    | <b>Exhaust pipes and silencers</b>  | <b>456</b> |
| 1.1                         | Assembly overview - silencers   | 456        |
| 1.2                         | Removing and installing front silencer  | 457        |
| 1.3                         | Removing and installing exhaust tailpipe  | 458        |
| 1.4                         | Aligning exhaust system free of stress  | 459        |
| 1.5                         | Checking exhaust system for leaks   | 459        |
| <b>2</b>                    | <b>Emission control</b>   | <b>460</b> |
| 2.1                         | Assembly overview - emission control  | 460        |
| 2.2                         | Removing and installing catalytic converter   | 463        |
| <b>28 - Ignition system</b> |   | <b>466</b> |
| <b>1</b>                    | <b>Ignition system</b>  | <b>466</b> |
| 1.1                         | Assembly overview - ignition system   | 466        |
| 1.2                         | Removing and installing ignition coils with output stage  | 468        |
| 1.3                         | Removing and installing knock sensor 1 G61  | 472        |



|     |  |     |
|-----|--|-----|
| 1.4 | Removing and installing engine speed sender G28 .....                | 473 |
| 1.5 | Removing and installing inlet camshaft position sender G1002 .....   | 475 |
| 1.6 | Removing and installing exhaust camshaft position sender G1003 ..... | 476 |