



Contents

| | |
|--|------------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety regulations for working on fuel supply | 1 |
| 1.2 Safety measures when working on vehicles with a start/stop system | 1 |
| 1.3 Safety precautions when using testers and measuring instruments during a road test | 2 |
| 1.4 Safety precautions when working on ignition system | 2 |
| 1.5 Safety precautions when working on exhaust system | 2 |
| 1.6 Safety precautions when working on the cooling system | 3 |
| 2 Identification | 4 |
| 2.1 Engine number/engine data | 4 |
| 3 Repair instructions | 6 |
| 3.1 Rules for cleanliness | 6 |
| 3.2 General information | 6 |
| 3.3 General repair notes | 6 |
| 3.4 Foreign objects in engine | 7 |
| 3.5 Contact corrosion | 7 |
| 3.6 Routing and attachment of lines | 7 |
| 3.7 Fitting radiator and condensers | 7 |
| 3.8 Checking vacuum system | 7 |
| 10 - Removing and installing engine | 9 |
| 1 Removing and installing engine | 9 |
| 1.1 Removing engine | 9 |
| 1.2 Separating engine and gearbox | 46 |
| 1.3 Securing engine on engine and gearbox support | 50 |
| 1.4 Installing engine | 52 |
| 2 Assembly mountings | 62 |
| 2.1 Assembly overview – assembly mountings | 62 |
| 2.2 Supporting engine in installation position | 74 |
| 2.3 Removing and installing engine mounting | 85 |
| 2.4 Removing and installing gearbox mounting | 90 |
| 2.5 Removing and installing pendulum support | 95 |
| 2.6 Checking adjustment of assembly mountings | 99 |
| 2.7 Adjusting assembly mountings | 101 |
| 13 - Crankshaft group | 107 |
| 1 Cylinder block (pulley end) | 107 |
| 1.1 Assembly overview - poly V-belt drive | 107 |
| 1.2 Removing and installing poly-V belt | 114 |
| 1.3 Removing and installing tensioner for poly V-belt | 122 |
| 1.4 Removing and installing vibration damper | 123 |
| 1.5 Removing and installing engine support | 125 |
| 1.6 Renewing crankshaft oil seal - belt pulley end | 132 |
| 2 Cylinder block, gearbox end | 135 |
| 2.1 Assembly overview - cylinder block, gearbox end | 135 |
| 2.2 Removing and installing flywheel | 139 |
| 2.3 Removing and installing drive plate | 140 |
| 2.4 Removing and installing sealing flange on gearbox side | 143 |
| 3 Crankshaft | 155 |
| 3.1 Measuring axial clearance of crankshaft | 155 |
| 4 Pistons and conrods | 157 |
| 4.1 Assembly overview - pistons and conrods | 157 |



| | | |
|-----------|---|------------|
| 4.2 | Removing and installing pistons | 161 |
| 4.3 | Checking pistons and cylinder bores | 162 |
| 4.4 | Separating new conrod | 164 |
| 4.5 | Checking radial clearance of conrods | 165 |
| 4.6 | Removing and installing oil spray jets | 166 |
| 4.7 | Setting piston to TDC position | 167 |
| 15 | Cylinder head, valve gear | 170 |
| 1 | Cylinder head | 170 |
| 1.1 | Assembly overview - cylinder head | 170 |
| 1.2 | Assembly overview - camshaft housing | 172 |
| 1.3 | Removing and installing cylinder head | 174 |
| 1.4 | Removing and installing camshaft housing | 178 |
| 1.5 | Checking compression | 181 |
| 2 | Toothed belt drive | 184 |
| 2.1 | Assembly overview - toothed belt cover | 184 |
| 2.2 | Assembly overview - toothed belt | 184 |
| 2.3 | Removing and installing toothed belt guard | 186 |
| 2.4 | Removing and installing toothed belt | 187 |
| 2.5 | Preassembling and installing valve timing tool | 194 |
| 2.6 | Checking valve timing | 203 |
| 2.7 | Adjusting valve timing | 207 |
| 2.8 | Removing toothed belt from camshaft | 218 |
| 3 | Valve gear | 224 |
| 3.1 | Assembly overview - valve gear | 224 |
| 3.2 | Removing and installing camshaft adjuster | 226 |
| 3.3 | Removing and installing toothed belt pulley | 231 |
| 3.4 | Measuring axial play of camshaft | 236 |
| 3.5 | Removing and installing camshaft oil seal | 237 |
| 3.6 | Removing and installing camshaft control valve 1 N205 | 243 |
| 3.7 | Removing and installing valve stem seals | 244 |
| 4 | Inlet and exhaust valves | 254 |
| 4.1 | Checking valve guides | 254 |
| 4.2 | Checking valves | 255 |
| 4.3 | Valve dimensions | 255 |
| 17 | Lubrication | 256 |
| 1 | Sump, oil pump | 256 |
| 1.1 | Assembly overview - sump/oil pump | 256 |
| 1.2 | Removing and installing lower part of sump | 259 |
| 1.3 | Removing and installing oil pump | 265 |
| 1.4 | Removing and installing upper part of sump | 267 |
| 1.5 | Engine oil: | 272 |
| 2 | Engine oil cooler | 273 |
| 2.1 | Assembly overview - engine oil cooler | 273 |
| 2.2 | Removing and installing engine oil cooler | 273 |
| 3 | Crankcase ventilation | 275 |
| 3.1 | Assembly overview - crankcase breather system | 275 |
| 3.2 | Removing and installing oil separator | 276 |
| 4 | Oil filter, oil pressure switch | 279 |
| 4.1 | Assembly overview - oil filter/oil pressure switch | 279 |
| 4.2 | Removing and installing oil pressure switch F1 | 279 |
| 4.3 | Checking oil pressure | 281 |
| 4.4 | Removing and installing oil filter housing | 282 |



| | |
|--|------------|
| 19 - Cooling | 284 |
| 1 Cooling system/coolant | 284 |
| 1.1 Connection diagram - coolant hoses | 284 |
| 1.2 Draining and adding coolant | 287 |
| 1.3 Checking cooling system for leaks | 296 |
| 2 Coolant pump, regulation of cooling system | 300 |
| 2.1 Assembly overview - coolant pump, thermostat | 300 |
| 2.2 Assembly overview - coolant temperature sender | 303 |
| 2.3 Removing and installing coolant pump | 304 |
| 2.4 Removing and installing toothed belt pulley for coolant pump | 308 |
| 2.5 Removing and installing thermostat | 309 |
| 2.6 Removing and installing coolant temperature sender G62 | 313 |
| 2.7 Removing and installing radiator outlet coolant temperature sender G83 | 315 |
| 3 Coolant pipes | 317 |
| 3.1 Assembly overview - coolant pipes | 317 |
| 3.2 Removing and installing coolant pipes | 317 |
| 4 Radiator, radiator fan | 320 |
| 4.1 Assembly overview – radiator/radiator fan | 320 |
| 4.2 Assembly overview – radiator cowl and radiator fan | 324 |
| 4.3 Removing and installing radiator | 326 |
| 4.4 Removing and installing radiator cowl | 339 |
| 4.5 Removing and installing radiator fan V7 | 342 |
| 24 - Mixture preparation - injection | 345 |
| 1 Injection system | 345 |
| 1.1 Overview of fitting locations - injection system | 345 |
| 1.2 Assembly overview - fuel system | 351 |
| 2 Injectors | 354 |
| 2.1 Assembly overview - fuel rail with injectors | 354 |
| 2.2 Removing and installing fuel rail | 354 |
| 2.3 Removing and installing injectors | 357 |
| 2.4 Checking injectors | 358 |
| 2.5 Cleaning injectors | 362 |
| 3 Air filter | 364 |
| 3.1 Assembly overview - air filter housing | 364 |
| 3.2 Removing and installing air filter housing | 366 |
| 4 Intake manifold | 369 |
| 4.1 Assembly overview – intake manifold | 369 |
| 4.2 Removing and installing intake manifold | 373 |
| 4.3 Removing and installing throttle valve module GX3 | 376 |
| 4.4 Cleaning throttle valve module GX3 | 376 |
| 5 Senders and sensors | 378 |
| 5.1 Removing and installing intake manifold sender GX9 | 378 |
| 6 Engine control unit | 379 |
| 6.1 Removing and installing engine control unit J623 | 379 |
| 7 Lambda probe | 391 |
| 7.1 Assembly overview - Lambda probe | 391 |
| 7.2 Removing and installing Lambda probe | 392 |
| 26 - Exhaust system | 395 |
| 1 Exhaust pipes and silencers | 395 |
| 1.1 Assembly overview – silencers | 395 |
| 1.2 Separating exhaust pipes from silencers | 405 |



| | | |
|-----------|--|------------|
| 1.3 | Removing and installing silencer | 407 |
| 1.4 | Aligning exhaust system free of stress | 414 |
| 1.5 | Checking exhaust system for leaks | 415 |
| 2 | Emission control | 416 |
| 2.1 | Assembly overview – emission control | 416 |
| 2.2 | Removing and installing catalytic converter | 420 |
| 28 | - Ignition system | 424 |
| 1 | Ignition system | 424 |
| 1.1 | Assembly overview - ignition system | 424 |
| 1.2 | Removing and installing ignition coils with output stage | 426 |
| 1.3 | Removing and installing knock sensor 1 G61 | 428 |
| 1.4 | Removing and installing Hall sender | 430 |
| 1.5 | Removing and installing engine speed sender G28 | 430 |