



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety measures when working on vehicles with a start/stop system	2
<b>2 Identification</b>	<b>3</b>
2.1 Engine number/engine data	3
<b>3 General information</b>	<b>5</b>
3.1 Rules for cleanliness when working on auxiliary heater and fuel system	5
<b>4 Repair notes</b>	<b>6</b>
4.1 Routing and attachment of lines	6
4.2 General repair instructions	6
<b>20 - Fuel supply system</b>	<b>7</b>
<b>1 Fuel</b>	<b>7</b>
1.1 Assembly overview - fuel tank	7
1.2 Removing and installing fuel tank	19
1.3 Emptying fuel tank	56
<b>2 Fuel delivery unit, fuel gauge sender</b>	<b>69</b>
2.1 Assembly overview - fuel delivery unit/fuel gauge sender	69
2.2 Removing and installing fuel delivery unit, fuel gauge sender	75
2.3 Removing and installing fuel gauge sender G	83
2.4 Removing and installing fuel gauge sender 2 G169	85
2.5 Removing and installing assembly opening cover	88
<b>3 Plug-in connectors</b>	<b>91</b>
3.1 Separating plug-in connectors	91
<b>4 Fuel filter</b>	<b>98</b>
<b>5 Activated charcoal filter with fuel tank leak detection</b>	<b>99</b>
5.1 Connection diagram – activated charcoal filter system	99
5.2 Assembly overview – activated charcoal filter system	101
5.3 Removing and installing activated charcoal filter	104
5.4 Removing and installing air filter for activated charcoal filter	106
5.5 Removing and installing fuel system diagnosis pump, as of 10/2018	107
5.6 Removing and installing control unit for fuel tank leak detection J909, up to 10/2018	108
5.7 Checking fuel system for leaks	109
<b>6 Activated charcoal filter without fuel tank leak detection</b>	<b>122</b>
6.1 Connection diagram – activated charcoal filter system	122
6.2 Assembly overview – activated charcoal filter system	125
6.3 Removing and installing activated charcoal filter	127
6.4 Checking fuel tank breather	128
<b>7 Accelerator pedal</b>	<b>137</b>
7.1 Assembly overview - accelerator module	137
7.2 Removing and installing accelerator pedal module GX2	137
<b>8 Fuel supply</b>	<b>139</b>
8.1 Checking fuel system pressurisation pump G6, EA888evo	139
8.2 Checking fuel system pressurisation pump G6, EA211, EA888	147
8.3 Removing and installing fuel pump control unit J538	163
8.4 Removing and installing suction-jet pump	165
<b>9 Fuel lines</b>	<b>167</b>
9.1 Removing and installing fuel lines	167
9.2 Removing and installing fuel line for auxiliary/supplementary heater	172



<b>10</b>	<b>Senders and sensors</b> .....	<b>175</b>
10.1	Assembly overview - fuel quality sender G446 .....	175
10.2	Removing and installing fuel quality sender G446 .....	176
10.3	Removing and installing tank pressure sensor G400, up to 10/2018 .....	177