



## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b> .....   | <b>1</b>  |
| <b>1 Safety information</b> .....  | <b>1</b>  |
| 1.1 Safety precautions when working on fuel system .....                                     | 1         |
| 1.2 Safety precautions when using testers and measuring instruments during a road test ..... | 2         |
| 1.3 Safety precautions when working on vehicles with a start/stop system .....               | 2         |
| 1.4 Safety precautions when working on vehicles with high-voltage system .....               | 2         |
| 1.5 Safety precautions when working in the vicinity of high-voltage components .....         | 4         |
| <b>2 Identification</b> .....  | <b>5</b>  |
| 2.1 Engine number/engine data .....  | 5         |
| <b>3 General information</b> .....   | <b>6</b>  |
| 3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system ..  | 6         |
| <b>4 Repair instructions</b> .....   | <b>7</b>  |
| 4.1 Routing and attachment of lines .....  | 7         |
| 4.2 General repair notes .....   | 7         |
| <b>20 - Fuel supply system</b> .....   | <b>8</b>  |
| <b>1 Fuel</b> .....  | <b>8</b>  |
| 1.1 Assembly overview - fuel tank .....  | 8         |
| 1.2 Removing and installing fuel tank .....  | 10        |
| 1.3 Emptying fuel tank .....   | 15        |
| <b>2 Fuel delivery unit, fuel gauge sender</b> .....   | <b>24</b> |
| 2.1 Assembly overview - fuel delivery unit/fuel gauge sender .....                           | 24        |
| 2.2 Removing and installing fuel delivery unit, fuel gauge sender .....                      | 27        |
| 2.3 Removing and installing fuel gauge sender G .....  | 32        |
| 2.4 Removing and installing assembly opening cover .....                                     | 33        |
| <b>3 Plug-in connectors</b> .....  | <b>35</b> |
| 3.1 Separating plug-in connectors .....  | 35        |
| <b>4 Activated charcoal filter system</b> .....  | <b>42</b> |
| 4.1 Connection diagram - activated charcoal filter system .....                              | 42        |
| 4.2 Assembly overview – activated charcoal filter system .....                               | 43        |
| 4.3 Removing and installing activated charcoal filter .....                                  | 47        |
| 4.4 Removing and installing air filter for activated charcoal filter system .....            | 49        |
| 4.5 Removing and installing fresh air connection for activated charcoal filter .....         | 49        |
| 4.6 Removing and installing tank shut-off valve N288 .....                                   | 50        |
| 4.7 Checking fuel tank breather .....  | 50        |
| <b>5 Accelerator pedal</b> .....   | <b>58</b> |
| 5.1 Assembly overview - accelerator module .....   | 58        |
| 5.2 Removing and installing accelerator pedal module GX2 .....                               | 58        |
| <b>6 Fuel pump</b> .....   | <b>60</b> |
| 6.1 Checking fuel system pressurisation pump G6 .....  | 60        |
| 6.2 Removing and installing fuel pump control unit J538 .....                                | 74        |
| <b>7 Senders and sensors</b> .....   | <b>76</b> |
| 7.1 Removing and installing tank pressure sensor G400 .....                                  | 76        |
| <b>8 Lines</b> .....   | <b>78</b> |
| 8.1 Removing and installing fuel lines .....   | 78        |
| 8.2 Removing and installing fuel line for auxiliary/supplementary heater .....               | 84        |