



Contents

1	Engine list	1
2	Service work	8
2.1	Information about flexible or fixed service	8
2.2	Service tables	10
3	General information	20
3.1	General warnings for working on high-voltage system	20
3.2	Raising vehicle with lifting platform or trolley jack	20
3.3	Entries in service schedule	21
3.4	Severe operating conditions	21
3.5	Vehicle data sticker	22
3.6	Connecting vehicle diagnostic tester	23
3.7	Vehicle identification number	24
3.8	Countries with hot climate	25
3.9	Country overview for diesel not compliant with EN 590/EN 15940	26
3.10	Country overview for petrol not compliant with EN 228	27
3.11	Engine code and engine number	28
3.12	Countries with high levels of dust	28
3.13	Identification plate	29
3.14	Shortened intervals for spark plug replacement	30
4	Descriptions of work	35
4.1	Swivel joints and suspension link mountings: inspecting	37
4.2	All-wheel drive coupling: changing oil	39
4.3	Automatic headlight control and static cornering light: checking function	43
4.4	Automatic gearbox 09S: changing ATF	44
4.5	Battery (12V): checking battery terminal clamps for secure seating	44
4.6	Battery (12V): checking with battery tester (always refer to workshop manual)	48
4.7	Battery (12V): checking (only applies for Golf GTE)	48
4.8	Status of battery (12V): reading - sending diagnosis protocol via online connection	49
4.9	Front passenger front airbag: checking key switch and "ON/OFF function"	50
4.10	Tyres: checking condition, wear pattern, tyre pressure and tread depth	51
4.11	Brake and clutch system: changing brake fluid	65
4.12	Brake system and shock absorbers: inspecting for leaks and damage	71
4.13	Brake fluid level: checking	72
4.14	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	73
4.15	Diesel fuel filter: draining	76
4.16	Diesel fuel filter: renewing	77
4.17	Diesel particulate filter: checking	79
4.18	Dual clutch gearbox 0DD: changing gear oil	79
4.19	Dual clutch gearbox 0GC: changing gear oil	79
4.20	Electric windows: checking positioning (open and close functions)	79
4.21	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	80
4.22	Natural gas system: resetting interval display if a check in line with ECE ruling 110 has been carried out	80
4.23	Natural gas system: visually inspecting natural gas tank for corrosion and leakage	81
4.24	Natural gas system: checking wax layer between natural gas fuel tank and fuel tank shut-off valve	87
4.25	Natural gas tank: renewing	87
4.26	Natural gas filler connection and sealing cap: checking condition, if necessary cleaning and checking seal	88
4.27	Boots: inspecting	88
4.28	High-voltage battery: checking charge level	88
4.29	Maintenance of high-voltage battery	89
4.30	High-voltage battery: charging	89



4.31	Hybrid components: inspect for damage to high-voltage components and wires.	89
4.32	Interior and exterior body: inspecting for corrosion with doors and flaps open	90
4.33	Poly V-belt: renewing	90
4.34	Poly V-belt: checking condition	90
4.35	Poly V-belt and tensioning roller for belt-driven starter-alternator: renew	91
4.36	Poly V-belt and tensioning roller for belt-driven starter-alternator: check	91
4.37	Cooling system: checking frost protection and coolant level	94
4.38	Cooling system for high-voltage system: checking coolant additive and coolant level	97
4.39	Air filter: cleaning housing and renewing filter element	100
4.40	Multi-purpose additive for diesel fuel: adding	108
4.41	Multi-purpose additive for petrol fuel: adding	110
4.42	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	111
4.43	Engine cover panel "top": removing and installing	112
4.44	Engine data plate with Certification Test Group code: checking if fitted and for condition, also checking CTG code against the code in the engine control unit	115
4.45	Motor compartment cover (noise insulation) "bottom": removing and installing	116
4.46	Engine oil level: checking	116
4.47	Engine oil: draining, renewing oil filter and filling engine oil	117
4.48	Engine oil: capacities and specifications	127
4.49	Panoramic sliding sunroof	130
4.50	Panorama sliding roof with rear panorama roof	135
4.51	Road test: performing (driving behaviour, noises, air conditioner etc.)	137
4.52	Wheel securing bolts: tightening to specified torque	138
4.53	Reducing agent (AdBlue®/DEF): replenishing	139
4.54	Reducing agent (AdBlue®/DEF): changing	143
4.55	Tyre Pressure Loss Indicator: calibrating	143
4.56	Tyre repair set: checking	144
4.57	Window wash/wipe system: functional check	146
4.58	Headlight adjustment: checking LED headlights	149
4.59	Headlight adjustment: checking matrix LED headlights	153
4.60	Headlight adjustment: checking fog lights	159
4.61	Sliding sunroof drains at front: check for blockage, clean if necessary	160
4.62	Service interval display: resetting	161
4.63	Service interval display: recoding	161
4.64	Track rods: checking clearance, attachment and boots	163
4.65	Interior filter: cleaning housing and renewing filter element	163
4.66	Selective wheel torque control: changing oil in left and right clutch chambers	164
4.67	Selective wheel torque control: interrogating oil wear on left and right-hand side using vehicle diagnostic tester	164
4.68	Transportation mode: switching off	164
4.69	Transportation devices: removing blocking pieces	165
4.70	Clock and date: setting	166
4.71	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	167
4.72	Front differential lock: changing oil	167
4.73	Warning stickers, Golf GTE: checking	167
4.74	Toothed belt (petrol engines): renewing	167
4.75	Camshaft drive toothed belt (diesel engines): renewing	167
4.76	Spark plugs: renewing	168
5	Exhaust emissions test	183
5.1	Exhaust emissions test for petrol engines	183
5.2	Exhaust emissions test for diesel engines	185
6	00 Periodic Technical Inspection (PTI)	189
7	Glossary	193
8	---Change history---	196