



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on high-voltage system	1
1.4 Safety precautions when working in vicinity of high-voltage components	2
2 Identification	3
2.1 Allocation of PR number - brakes	3
3 Technical data	5
3.1 Technical data for brakes	5
4 Brake test	9
4.1 General information	9
4.2 Checking vehicles with front-wheel drive	9
4.3 Checking vehicles with all-wheel drive	9
4.4 Checking parking brake	10
45 - Anti-lock brake system	12
1 General information	12
1.1 Repair instructions for repair work on ABS	12
2 Overview of fitting locations	15
2.1 Overview of fitting locations – ABS/ESP	15
3 Control unit and hydraulic unit	18
3.1 Assembly overview - control unit and hydraulic unit	18
3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	22
3.3 Separating control unit from hydraulic unit	37
3.4 Fitting control unit to hydraulic unit	38
3.5 Connecting brake lines to hydraulic unit	40
4 Sensors	43
4.1 Assembly overview - speed sensor on front axle	43
4.2 Assembly overview – speed sensors on rear axle	44
4.3 Removing and installing ESP sensor unit G419	46
4.4 Removing and installing speed sensors on front axle G45/G47	46
4.5 Removing and installing speed sensors on rear axle G44/G46	47
4.6 Checking ABS sensor ring	50
46 - Brakes - mechanism	52
1 Front brake	52
1.1 Assembly overview - front brake	52
1.2 Removing and installing brake pads	54
1.3 Removing and installing brake caliper	60
2 Rear brake	63
2.1 Assembly overview - rear brakes	63
2.2 Removing and installing brake pads	66
2.3 Removing and installing brake caliper	71
3 Parking brake	77
3.1 Overview of fitting locations - parking brake	77
3.2 Removing and installing control unit for electromechanical parking brake J540	79
3.3 Removing and installing parking brake motor V282/V283	79
4 Brake pedal	82
4.1 Assembly overview - brake pedal	82
4.2 Removing and installing mounting bracket	86



4.3	Separating brake pedal from brake servo	88
4.4	Connecting brake pedal to brake servo	89
4.5	Removing and installing brake pedal	90
47	- Brakes - hydraulics	94
1	Front brake caliper	94
1.1	Assembly overview – front brake caliper	94
1.2	Removing and installing brake caliper piston	96
2	Rear brake caliper	99
2.1	Assembly overview – rear brake caliper	99
2.2	Removing and installing protective cap	99
3	Brake servo and brake master cylinder	104
3.1	Assembly overview - brake servo/brake master cylinder	104
3.2	Removing and installing brake servo	108
3.3	Removing and installing brake master cylinder	116
3.4	Removing and installing brake fluid level warning contact F34	130
4	Brake lines	131
4.1	Repairing brake lines	131
5	Hydraulic system	136
5.1	General notes on brake fluid	136
5.2	Bleeding hydraulic system following standard procedure	136
5.3	Subsequent bleeding of hydraulic system	138
5.4	Testing for leaks	138