



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
<b>2 Repair instructions</b>	<b>2</b>
2.1 Bonding surfaces for self-adhesive components	2
2.2 Secured threaded connections	2
<b>50 - Body - front</b>	<b>3</b>
<b>1 Lock carrier</b>	<b>3</b>
1.1 Assembly overview – lock carrier	3
1.2 Removing and installing lock carrier	4
1.3 Moving to and back from service position	8
<b>2 Wings</b>	<b>13</b>
2.1 Assembly overview - wing	13
2.2 Removing and installing wing	14
2.3 Removing and installing wing bracket	18
<b>3 Plenum chamber bulkhead</b>	<b>21</b>
3.1 Assembly overview - plenum chamber bulkhead	21
3.2 Assembly overview - plenum chamber cover	21
3.3 Removing and installing bulkhead	22
3.4 Removing and installing plenum chamber cover	23
<b>55 - Bonnet, rear lid</b>	<b>28</b>
<b>1 Bonnet</b>	<b>28</b>
1.1 Assembly overview - bonnet	28
1.2 Assembly overview - Bowden cable	30
1.3 Removing and installing bonnet	32
1.4 Adjusting bonnet	34
1.5 Removing and installing rear lid lock	37
1.6 Removing and installing bonnet release lever	41
1.7 Removing and installing striker pin	44
1.8 Removing and installing hinges	45
1.9 Renewing hinges	47
1.10 Removing and installing insulation	48
1.11 Removing and installing bonnet stay	50
1.12 Removing and installing Bowden cable	52
<b>2 Rear lid</b>	<b>60</b>
2.1 Assembly overview - rear lid	60
2.2 Removing and installing rear lid	62
2.3 Adjusting rear lid	64
2.4 Removing and installing rear lid lock	70
2.5 Removing and installing operating mechanism	77
2.6 Removing and installing hinges	78
2.7 Removing and installing striker pin	79
2.8 Removing and installing rear lid seal	80
2.9 Removing and installing gas strut	81
2.10 Releasing gas from gas strut	83
2.11 Removing and installing motor 1 for rear lid V444	86
2.12 Removing and installing rear lid control unit J605	87
<b>3 Tank flap unit</b>	<b>89</b>
3.1 Assembly overview - tank flap unit	89
3.2 Removing and installing tank flap unit	89



3.3	Removing and installing fuel tank flap	93
<b>57</b>	<b>- Front doors, door components, central locking</b>	<b>96</b>
<b>1</b>	<b>Door</b>	<b>96</b>
1.1	Assembly overview - door	96
1.2	Removing and installing inner door seal	99
1.3	Removing and installing outer door seal	101
1.4	Removing and installing door	102
1.5	Adjusting door	106
1.6	Adjusting striker pin	110
1.7	Removing and installing door arrester	112
<b>2</b>	<b>Door components</b>	<b>114</b>
2.1	Assembly overview - door components	114
2.2	Assembly overview – assembly carrier	115
2.3	Assembly overview - door handle and door lock	116
2.4	Removing and installing window regulator motor	118
2.5	Removing and installing striker pin	120
2.6	Removing and installing lock cylinder	122
2.7	Removing and installing door handle	124
2.8	Removing and installing door handle trim	126
2.9	Removing and installing mounting bracket	129
2.10	Removing and installing door lock	132
2.11	Removing and installing assembly carrier	135
2.12	Removing and installing window channel	138
2.13	Removing and installing window slot outer seal	140
2.14	Removing and installing window slot inner seal	142
<b>3</b>	<b>Central locking</b>	<b>144</b>
3.1	Overview of fitting locations - central locking	144
3.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	146
3.3	Removing and installing tank filler flap locking motor V155	147
3.4	Removing and installing ignition key battery	148
<b>58</b>	<b>- Rear doors, door components</b>	<b>149</b>
<b>1</b>	<b>Door</b>	<b>149</b>
1.1	Assembly overview - door	149
1.2	Removing and installing door	152
1.3	Adjusting door	155
1.4	Adjusting striker pin	159
1.5	Removing and installing door arrester	160
1.6	Removing and installing inner door seal	162
<b>2</b>	<b>Door components</b>	<b>165</b>
2.1	Assembly overview - door components	165
2.2	Assembly overview – assembly carrier	166
2.3	Assembly overview - door handle and door lock	167
2.4	Removing and installing window regulator motor	168
2.5	Removing and installing striker pin	171
2.6	Removing and installing door handle	172
2.7	Removing and installing door handle trim	174
2.8	Removing and installing mounting bracket	176
2.9	Removing and installing door lock	179
2.10	Removing and installing assembly carrier	182
2.11	Removing and installing window channel	185
2.12	Removing and installing window slot outer seal	187
2.13	Removing and installing window slot inner seal	188



<b>60 - Sunroof</b>	<b>190</b>
<b>1 Sliding sunroof</b>	<b>190</b>
1.1 Assembly overview - sliding sunroof	190
1.2 Assembly overview – sunroof roller blind	192
1.3 Removing and installing sunroof panel	193
1.4 Removing and installing rear sunroof panel	197
1.5 Adjusting sunroof panel	201
1.6 Removing and installing sliding sunroof frame	205
1.7 Removing and installing wind deflector	207
1.8 Removing and installing sunroof motor V1	209
1.9 Removing and installing sunroof roller blind motor V260	211
1.10 Removing and installing sunroof roller blind control unit J394	213
1.11 Removing and installing sliding sunroof adjustment control unit J245	214
1.12 Removing and installing sliding sunroof seals	216
1.13 Removing and installing sunroof roller blind	221
1.14 Programming sliding sunroof adjustment control unit J245	224
1.15 Adapting sunroof roller blind control unit J394	224
1.16 Removing and installing rear part	224
1.17 Removing and installing tilt mechanism for sliding sunroof	229
1.18 Removing and installing sunroof roller blind cable	231
1.19 Operating without current	233
<b>2 Water drain hoses</b>	<b>234</b>
2.1 Assembly overview - water drain hoses	234
2.2 Cleaning water drain hoses	234
2.3 Removing and installing water drain hoses	236
<b>63 - Bumpers</b>	<b>238</b>
<b>1 Bumper, front</b>	<b>238</b>
1.1 Assembly overview - bumper cover	238
1.2 Assembly overview - add-on parts	239
1.3 Assembly overview - impact bar	243
1.4 Removing and installing bumper cover	244
1.5 Repairing bumper cover	247
1.6 Removing and installing add-on parts	247
1.7 Installing sender retainer for park assist steering	254
<b>2 Bumper, rear</b>	<b>258</b>
2.1 Assembly overview - bumper cover	258
2.2 Assembly overview - guides for bumper cover	259
2.3 Assembly overview - impact bar	260
2.4 Assembly overview - add-on parts	261
2.5 Removing and installing bumper cover	265
2.6 Removing and installing add-on parts	267
2.7 Removing and installing impact bar	269
2.8 Removing and installing forced ventilation in passenger compartment	270
2.9 Checking forced ventilation in passenger compartment	271
2.10 Repairing bumper cover	272
2.11 Installing sender retainer for parking aid	272
2.12 Installing sender retainer for park assist steering	277
<b>64 - Glazing</b>	<b>281</b>
<b>1 Repair instructions</b>	<b>281</b>
1.1 Minimum curing periods for bonded windows	281
1.2 Window repair	281
1.3 Installation instructions for bonded windows	282
1.4 Preparing old undamaged windows for fitting	283



1.5	Preparing new windows for installing	285
1.6	Preparing body flange for fitting	286
1.7	Cleaning off excess adhesive	288
<b>2</b>	<b>Windscreen</b>	<b>289</b>
2.1	Assembly overview - windscreen	289
2.2	Removing and installing windscreen	290
<b>3</b>	<b>Rear windscreen</b>	<b>299</b>
3.1	Assembly overview - rear window	299
3.2	Removing and installing rear window	299
<b>4</b>	<b>Side window</b>	<b>304</b>
4.1	Assembly overview - front side window	304
4.2	Removing and installing front side window	304
4.3	Assembly overview - rear side windows	307
4.4	Removing and installing rear side window	308
<b>5</b>	<b>Door windows</b>	<b>311</b>
5.1	Assembly overview - front door window	311
5.2	Assembly overview - rear door window	312
5.3	Removing and installing front door window	313
5.4	Removing and installing rear door window	317
5.5	Removing and installing fixed rear door window	321
<b>66</b>	<b>Exterior equipment</b>	<b>324</b>
<b>1</b>	<b>Radiator grille and front trim</b>	<b>324</b>
1.1	Assembly overview – radiator grille	324
1.2	Removing and installing radiator grille	324
<b>2</b>	<b>Spoiler</b>	<b>327</b>
2.1	Assembly overview – spoiler	327
2.2	Removing and installing spoiler	327
2.3	Removing and installing side spoiler	329
<b>3</b>	<b>Mouldings, trims, extensions</b>	<b>332</b>
3.1	Assembly overview – water deflector	332
3.2	Assembly overview – side member trim	333
3.3	Removing and installing water deflector	335
3.4	Removing and installing wheel arch trim	337
3.5	Removing and installing door cover	342
3.6	Removing and installing side member trim	345
3.7	Removing and installing B-pillar trim on door	351
3.8	Removing and installing trim strip	355
<b>4</b>	<b>Noise insulation</b>	<b>358</b>
4.1	Assembly overview - noise insulation	358
<b>5</b>	<b>Underbody cladding</b>	<b>362</b>
5.1	Overview of fitting locations - underbody cladding	362
5.2	Assembly overview - bracing on underbody	364
5.3	Removing and installing underbody cladding	365
5.4	Removing and installing tunnel cross-piece	371
<b>6</b>	<b>Roof moulding and roof railing</b>	<b>374</b>
6.1	Assembly overview - roof railing	374
6.2	Removing and installing roof railing	374
<b>7</b>	<b>Exterior mirror</b>	<b>376</b>
7.1	Assembly overview - exterior mirror	376
7.2	Removing and installing exterior mirror	377
7.3	Removing and installing mirror glass	379
7.4	Removing and installing mirror adjustment unit	381
7.5	Removing and installing mirror cover	382



7.6	Removing and installing mirror frame .....	383
<b>8</b>	<b>Wheel housing liner .....</b>	<b>385</b>
8.1	Assembly overview - front wheel housing liner .....	385
8.2	Assembly overview - rear wheel housing liner .....	386
8.3	Removing and installing front wheel housing liner .....	388
8.4	Removing and installing rear wheel housing liner .....	390
<b>9</b>	<b>Lettering and emblems .....</b>	<b>392</b>
9.1	General information on renewal of badges and lettering .....	392
9.2	Dimensions - lettering and emblems on rear .....	393
9.3	Dimensions - lettering and emblems on sides .....	397
9.4	Removing and installing badges at front .....	399
9.5	Renewing lettering and badges at rear .....	402
<b>10</b>	<b>Special add-on parts .....</b>	<b>404</b>
10.1	Assembly overview – special add-on parts .....	404
<b>11</b>	<b>Towing bracket .....</b>	<b>408</b>
11.1	Assembly overview - towing bracket .....	408
11.2	Removing and installing towing bracket .....	408
11.3	Removing and installing trigger unit .....	409
<b>12</b>	<b>Heat shields .....</b>	<b>411</b>
12.1	Overview of fitting locations - heat shields .....	411
12.2	Removing and installing underbody heat shield .....	413
12.3	Removing and installing propshaft heat shield .....	414
12.4	Removing and installing rear heat shield .....	415
12.5	Removing and installing rear right heat shield .....	416
12.6	Removing and installing spare wheel well heat shield .....	417
12.7	Removing and installing rear left heat shield .....	418