



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 General information	2
2.1 Starting conditions for auxiliary/supplementary heater	2
2.2 Type plates	2
3 Electrical components	4
3.1 Access to diagnoses	4
82 - Supplementary heating	6
1 Safety and repair instructions	6
1.1 Safety information	6
1.2 Repair instructions	6
2 Fitting locations	7
2.1 Overview of fitting locations – auxiliary/supplementary heater	7
3 Auxiliary/supplementary heater	9
3.1 Assembly overview - auxiliary/supplementary heater attachments	9
3.2 Assembly overview – auxiliary/supplementary heater, interior	10
3.3 Removing and installing auxiliary/supplementary heater	12
3.4 Dismantling and assembling auxiliary/supplementary heater	14
3.5 Removing and installing air intake silencer	15
3.6 Removing and installing circulation pump [V55]	16
3.7 Removing and installing exhaust system	17
3.8 Removing and installing bracket for auxiliary/supplementary heater	17
3.9 Removing and installing cover	19
3.10 Removing and installing glow plug with flame monitoring [Q8]	21
3.11 Removing and installing temperature sensor [G18] and overheating sensor [G189]	21
3.12 Dismantling and assembling combustion chamber insert	22
3.13 Removing and installing auxiliary heater control unit [J364] with combustion air blower [V6]	23
4 Coolant circuit with auxiliary/supplementary heater	24
4.1 Connection diagram - coolant hoses	24
4.2 Removing and installing coolant pipes for auxiliary heater	24
5 Fuel supply system	27
5.1 Overview of fitting locations - fuel supply system	27
5.2 Checking fuel delivery rate	28
5.3 Removing and installing metering pump [V54]	28
5.4 Bleeding fuel line to metering pump [V54] (filling with fuel)	30
6 Other controlling and regulating components	31
6.1 Removing and installing remote control receiver for auxiliary coolant heater [R64]	31
6.2 Removing and installing remote control receiver for auxiliary coolant heater [R64], Golf Estate	32
6.3 Adapting remote control for auxiliary/supplementary heater	32