



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
2 Identification	3
2.1 Engine number/engine data	3
3 Repair instructions	7
3.1 Rules for cleanliness	7
3.2 General information	7
3.3 General repair instructions	8
3.4 Foreign objects in engine	8
3.5 Contact corrosion	8
3.6 Routing and attachment of lines	8
3.7 Fitting radiator and condensers	8
3.8 Checking vacuum system	8
10 - Removing and installing engine	10
1 Removing and installing engine	10
1.1 Removing engine	10
1.2 Separating engine and gearbox	20
1.3 Securing engine on engine and gearbox support	23
1.4 Installing engine	24
2 Assembly mountings	29
2.1 Assembly overview – assembly mountings	29
2.2 Removing and installing engine mounting	41
2.3 Removing and installing gearbox mounting	42
2.4 Removing and installing pendulum support	44
2.5 Supporting engine in installation position	45
2.6 Adjusting assembly mountings	78
2.7 Checking adjustment of assembly mountings	80
3 Engine cover panel	82
3.1 Removing and installing engine cover	82
13 - Crankshaft group	83
1 Cylinder block (pulley end)	83
1.1 Assembly overview - poly V-belt drive	83
1.2 Removing and installing poly-V belt	89
1.3 Removing and installing tensioner for poly V-belt	94
1.4 Removing and installing vibration damper	96
1.5 Removing and installing engine support	99
1.6 Renewing crankshaft oil seal - belt pulley end	101
2 Cylinder block, gearbox end	105
2.1 Assembly overview - cylinder block, gearbox end	105
2.2 Removing and installing flywheel	108
2.3 Removing and installing sealing flange on gearbox side	110
3 Crankshaft	123
3.1 Renewing needle bearing in crankshaft	123
3.2 Crankshaft dimensions	125
3.3 Measuring axial clearance of crankshaft	125



4	Pistons and conrods	127
4.1	Assembly overview - pistons and conrods	127
4.2	Removing and installing pistons	129
4.3	Checking pistons and cylinder bores	131
4.4	Separating new conrod	133
4.5	Checking radial clearance of conrods	133
4.6	Removing and installing oil spray jets	134
4.7	Setting piston to TDC position	135
15	Cylinder head, valve gear	138
1	Cylinder head	138
1.1	Assembly overview - cylinder head	138
1.2	Assembly overview - camshaft housing	140
1.3	Removing and installing cylinder head	143
1.4	Removing and installing camshaft housing	147
1.5	Checking compression	153
2	Toothed belt drive	156
2.1	Assembly overview - toothed belt cover	156
2.2	Assembly overview - toothed belt	157
2.3	Assembly overview - valve timing tool	160
2.4	Removing and installing toothed belt guard	160
2.5	Removing and installing toothed belt	161
2.6	Preassembling and installing valve timing tool	168
2.7	Checking valve timing	178
2.8	Adjusting valve timing	181
2.9	Removing toothed belt from camshaft	192
3	Valve gear	197
3.1	Assembly overview - valve gear	197
3.2	Removing and installing camshaft oil seal	200
3.3	Removing and installing camshaft adjuster	212
3.4	Removing and installing cam actuators	224
3.5	Removing and installing inlet camshaft control valve 1 N727	226
3.6	Removing and installing exhaust camshaft control valve 1 N318	227
3.7	Removing and installing valve stem seals	228
3.8	Removing and installing holder for oil seal	243
4	Inlet and exhaust valves	247
4.1	Checking valve guides	247
4.2	Checking valves	248
4.3	Valve dimensions	248
17	Lubrication	249
1	Sump, oil pump	249
1.1	Assembly overview - sump/oil pump	249
1.2	Engine oil:	254
1.3	Removing and installing sump	254
1.4	Removing and installing oil pump	259
1.5	Removing and installing oil level and oil temperature sender G266	262
2	Engine oil cooler	263
2.1	Assembly overview - engine oil cooler	263
2.2	Removing and installing engine oil cooler	263
3	Crankcase ventilation	265
3.1	Assembly overview - crankcase breather system	265
3.2	Removing and installing oil separator	267
4	Oil filter, oil pressure switch	271
4.1	Assembly overview - oil pressure switches/oil pressure control	271



4.2	Removing and installing oil pressure sender G10	271
4.3	Checking oil pressure and oil pressure switch	273
4.4	Removing and installing oil filter housing	273
4.5	Removing and installing oil pressure regulating valve N428	274
19	- Cooling	276
1	Cooling system/coolant	276
1.1	Connection diagram - coolant hoses	276
1.2	Checking cooling system for leaks	278
1.3	Draining and adding coolant	282
1.4	Flushing cooling system	290
2	Coolant pump, regulation of cooling system	305
2.1	Assembly overview - coolant pump, thermostat	305
2.2	Assembly overview - electric coolant pump	307
2.3	Assembly overview - coolant temperature sender	307
2.4	Removing and installing electric coolant pump	308
2.5	Removing and installing coolant pump	311
2.6	Removing and installing toothed belt pulley for coolant pump	316
2.7	Removing and installing coolant temperature sender G62	320
2.8	Removing and installing radiator outlet coolant temperature sender G83	322
2.9	Removing and installing engine outlet coolant temperature sender G82	324
2.10	Removing and installing engine temperature regulation module GX33	326
2.11	Checking coolant pump	330
3	Coolant pipes	336
3.1	Assembly overview - coolant pipes	336
3.2	Removing and installing coolant pipes	338
4	Radiator, radiator fan	347
4.1	Assembly overview - radiator/radiator fan	347
4.2	Assembly overview - radiator cowl and radiator fan	349
4.3	Assembly overview - radiator blind	351
4.4	Removing and installing radiator	354
4.5	Removing and installing water radiator for charge air cooling circuit	357
4.6	Removing and installing radiator cowl	362
4.7	Removing and installing radiator fan	363
4.8	Removing and installing radiator blind	365
4.9	Removing and installing radiator blind control motor V544	367
21	- Turbocharging/supercharging	373
1	Turbocharger	373
1.1	Assembly overview - turbocharger	373
1.2	Removing and installing turbocharger	379
1.3	Removing and installing connection for turbocharger	384
1.4	Removing and installing charge pressure control module GX34	386
2	Charge air system	391
2.1	Assembly overview - charge air system	391
2.2	Removing and installing charge air cooler	394
2.3	Removing and installing charge pressure sender GX26	397
2.4	Checking charge air system for leaks	398
2.5	Removing and installing air pipe	402
2.6	Checking charge air cooler for leaks	409
24	- Mixture preparation - injection	415
1	Injection system	415
1.1	Overview of fitting locations - injection system	415
2	Air filter	425



2.1	Assembly overview - air filter housing	425
2.2	Removing and installing air filter housing	427
2.3	Removing and installing air guide on lock carrier	429
3	Intake manifold	433
3.1	Assembly overview – intake manifold	433
3.2	Removing and installing intake manifold	436
3.3	Removing and installing throttle valve module GX3	442
3.4	Cleaning throttle valve module GX3	444
4	Injectors	446
4.1	Assembly overview - fuel rail with injectors	446
4.2	Removing and installing fuel rail	448
4.3	Removing and installing injectors	449
4.4	Cleaning injectors	457
5	Senders and sensors	459
5.1	Removing and installing intake manifold sender GX9	459
5.2	Removing and installing fuel pressure sender G247	460
5.3	Checking fuel pressure sender G247	462
5.4	Removing and installing exhaust gas pressure sensor 1 G450	466
5.5	Removing and installing air mass measurement module GX35	467
6	High-pressure pump	469
6.1	Assembly overview - high-pressure pump	469
6.2	Removing and installing high-pressure pump	470
6.3	Removing and installing high-pressure pipe	472
7	Lambda probe	474
7.1	Assembly overview - Lambda probe	474
7.2	Removing and installing Lambda probe	475
8	Engine control unit	477
8.1	Removing and installing engine control unit J623	477
26	- Exhaust system	485
1	Exhaust pipes and silencers	485
1.1	Assembly overview – silencers	485
1.2	Removing and installing silencer	501
1.3	Separating exhaust pipes from silencers	516
1.4	Aligning exhaust system free of stress	518
1.5	Checking exhaust system for leaks	518
1.6	Installation position of clamp	519
1.7	Assembly overview - front exhaust pipe	520
1.8	Removing and installing bracket for front exhaust pipe	521
2	Emission control	523
2.1	Assembly overview – emission control	523
2.2	Removing and installing catalytic converter	526
2.3	Removing and installing particulate filter	531
2.4	Removing and installing exhaust flap control unit J883	532
28	- Ignition system	533
1	Ignition system	533
1.1	Assembly overview - ignition system	533
1.2	Removing and installing ignition coils with output stage	535
1.3	Removing and installing knock sensor 1 G61	539
1.4	Removing and installing engine speed sender G28	540
1.5	Removing and installing inlet camshaft position sender G1002	542
1.6	Removing and installing exhaust camshaft position sender G1003	543