



---

2.3	Removing and installing catalytic converter	475
2.4	Removing and installing holder of pressure differential sender for particulate filter G1037	484
2.5	Removing and installing exhaust flap control unit	485
<b>3</b>	<b>Exhaust gas temperature regulation</b>	<b>486</b>
3.1	Assembly overview – exhaust gas temperature regulation	486
3.2	Removing and installing parts of exhaust gas temperature regulation	487
<b>28</b>	<b>Ignition system</b>	<b>492</b>
<b>1</b>	<b>Ignition system</b>	<b>492</b>
1.1	Assembly overview - ignition system	492
1.2	Removing and installing ignition coils	494
1.3	Removing and installing knock sensor 1 G61	496
1.4	Removing and installing Hall sender	497
1.5	Removing and installing engine speed sender G28	499