



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on SCR system	2
1.6 Safety precautions when working on exhaust system	3
<b>2 Identification</b>	<b>5</b>
2.1 Engine number/engine data	5
<b>3 Repair instructions</b>	<b>7</b>
3.1 Rules for cleanliness	7
3.2 Foreign objects in engine	7
3.3 Contact corrosion	7
3.4 Routing and attachment of lines	8
3.5 Fitting radiator and condensers	8
<b>10 - Removing and installing engine</b>	<b>9</b>
<b>1 Removing and installing engine</b>	<b>9</b>
1.1 Removing engine	9
1.2 Separating engine and gearbox	22
1.3 Securing engine on engine and gearbox support	27
1.4 Installing engine	29
<b>2 Assembly mountings</b>	<b>35</b>
2.1 Assembly overview - assembly mountings	35
2.2 Removing and installing engine mounting	37
2.3 Removing and installing gearbox mounting	38
2.4 Removing and installing pendulum support	40
2.5 Supporting engine in installation position	42
2.6 Adjusting assembly mountings	61
2.7 Checking adjustment of assembly mountings	63
<b>3 Engine cover panel</b>	<b>64</b>
3.1 Removing and installing engine cover	64
<b>13 - Crankshaft group</b>	<b>65</b>
<b>1 Cylinder block (pulley end)</b>	<b>65</b>
1.1 Assembly overview - cylinder block (pulley end)	65
1.2 Assembly overview - sealing flange, belt pulley end	68
1.3 Removing and installing poly-V belt	69
1.4 Removing and installing tensioner for poly V-belt	70
1.5 Removing and installing vibration damper	71
1.6 Removing and installing bracket for ancillaries	72
1.7 Removing and installing engine support	74
1.8 Removing and installing sealing flange on pulley end	75
1.9 Renewing caps in cylinder block (pulley end)	78
<b>2 Cylinder block, gearbox end</b>	<b>80</b>
2.1 Assembly overview - cylinder block, gearbox end	80
2.2 Removing and installing flywheel	83
2.3 Removing and installing sealing flange on gearbox side	85
2.4 Renewing caps in cylinder block (gearbox end)	110
<b>3 Crankshaft</b>	<b>112</b>
3.1 Assembly overview - crankshaft	112



3.2	Crankshaft dimensions	114
3.3	Renewing needle bearing in crankshaft	115
3.4	Measuring axial clearance of crankshaft	117
3.5	Measuring radial clearance of crankshaft	118
<b>4</b>	<b>Pistons and conrods</b>	<b>119</b>
4.1	Assembly overview - pistons and conrods	119
4.2	Removing and installing pistons	124
4.3	Measuring piston projection at TDC	126
4.4	Checking pistons and cylinder bores	128
4.5	Checking radial clearance of conrods	131
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>132</b>
<b>1</b>	<b>Cylinder head</b>	<b>132</b>
1.1	Assembly overview - cylinder head	132
1.2	Assembly overview - cylinder head cover	136
1.3	Removing and installing cylinder head	138
1.4	Removing and installing cylinder head cover	150
1.5	Removing and installing injector seals	151
1.6	Removing and installing camshaft housing	152
1.7	Checking compression	159
<b>2</b>	<b>Toothed belt drive</b>	<b>163</b>
2.1	Assembly overview - toothed belt cover	163
2.2	Assembly overview - toothed belt	164
2.3	Removing and installing toothed belt guard	166
2.4	Removing and installing toothed belt	170
2.5	Removing toothed belt from camshaft	183
<b>3</b>	<b>Valve gear</b>	<b>193</b>
3.1	Assembly overview - valve gear	193
3.2	Measuring axial play of camshaft	195
3.3	Removing and installing camshaft oil seal	196
3.4	Checking hydraulic compensation elements	199
3.5	Removing and installing valve stem oil seals	200
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>216</b>
4.1	Checking valve guides	216
4.2	Checking valves	217
4.3	Valve dimensions	217
<b>17</b>	<b>Lubrication</b>	<b>219</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>219</b>
1.1	Assembly overview - sump/oil pump	219
1.2	Engine oil:	223
1.3	Removing and installing lower part of sump	223
1.4	Removing and installing upper part of sump	228
1.5	Removing and installing oil pump	231
1.6	Removing and installing oil level and oil temperature sender G266	232
<b>2</b>	<b>Engine oil cooler</b>	<b>234</b>
<b>3</b>	<b>Oil filter, oil pressure switch</b>	<b>235</b>
3.1	Assembly overview - oil filter housing, oil pressure switch	235
3.2	Assembly overview - oil pressure switches/oil pressure control	237
3.3	Removing and installing oil pressure sender G10	238
3.4	Checking oil pressure	239
3.5	Removing and installing oil filter housing	240
3.6	Removing and installing oil pressure regulating valve N428	242
3.7	Removing and installing piston cooling jet control valve N522	243
<b>4</b>	<b>Oil circuit</b>	<b>244</b>



4.1	Removing and installing oil supply line	244
4.2	Removing and installing oil return line for turbocharger	245
<b>19</b>	<b>- Cooling</b>	<b>247</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>247</b>
1.1	Connection diagram - coolant hoses	247
1.2	Checking cooling system for leaks	251
1.3	Draining coolant	254
1.4	Filling with coolant	256
1.5	Checking filling quality of cooling system	276
1.6	Flushing cooling system	278
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>300</b>
2.1	Assembly overview - coolant pump, thermostat	300
2.2	Assembly overview - electric coolant pump	303
2.3	Assembly overview - coolant temperature sender	305
2.4	Removing and installing electric coolant pump	307
2.5	Removing and installing coolant pump	315
2.6	Removing and installing coolant distribution module	317
2.7	Removing and installing coolant regulating valve N515	320
2.8	Removing and installing coolant temperature sender G62	321
2.9	Removing and installing engine outlet coolant temperature sender G82	323
2.10	Removing and installing coolant temperature sender for charge air cooler G1130	325
<b>3</b>	<b>Coolant pipes</b>	<b>328</b>
3.1	Assembly overview - coolant pipes	328
3.2	Removing and installing coolant pipes	329
<b>4</b>	<b>Radiator, radiator fan</b>	<b>337</b>
4.1	Assembly overview - radiator	337
4.2	Assembly overview - radiator cowl and radiator fan	342
4.3	Removing and installing radiator	343
4.4	Removing and installing water radiator for charge air cooling circuit	349
4.5	Removing and installing radiator cowl	355
4.6	Removing and installing radiator fan	356
<b>21</b>	<b>- Turbocharging/supercharging</b>	<b>358</b>
<b>1</b>	<b>Turbocharger</b>	<b>358</b>
1.1	Assembly overview - turbocharger	358
1.2	Removing and installing turbocharger	361
1.3	Removing and installing connection for turbocharger	366
<b>2</b>	<b>Charge air system</b>	<b>368</b>
2.1	Assembly overview - charge air system	368
2.2	Removing and installing charge pressure sender GX26	368
2.3	Checking charge air system for leaks	368
2.4	Removing and installing air intake pipe	371
2.5	Checking charge air cooler for leaks	373
2.6	Assembly overview - charge-air hose connections	377
<b>23</b>	<b>- Mixture preparation - injection</b>	<b>379</b>
<b>1</b>	<b>Injection system</b>	<b>379</b>
1.1	Schematic overview - fuel system	379
1.2	Overview of fitting locations - injection system	381
1.3	Filling/bleeding fuel system	393
1.4	Checking fuel system for leaks	393
<b>2</b>	<b>Injectors/high-pressure accumulator (rail)</b>	<b>395</b>
2.1	Assembly overview - injectors	395
2.2	Assembly overview - fuel rail	397



2.3	Adapting correction values for injectors	398
2.4	Testing injectors	399
2.5	Checking return flow rate of injectors with engine running	400
2.6	Checking return flow rate of injectors at starter speed	403
2.7	Checking open injectors	405
2.8	Removing and installing injectors	406
2.9	Removing and installing high-pressure lines	410
2.10	Removing and installing fuel rail	416
<b>3</b>	<b>Air filter</b>	<b>421</b>
3.1	Assembly overview - air filter housing	421
3.2	Removing and installing air filter housing	423
3.3	Removing and installing air guide on lock carrier	425
<b>4</b>	<b>Intake manifold</b>	<b>427</b>
4.1	Assembly overview – intake manifold	427
4.2	Removing and installing intake manifold	432
4.3	Removing and installing throttle valve module GX3	439
<b>5</b>	<b>Senders and sensors</b>	<b>442</b>
5.1	Removing and installing fuel pressure regulating valve N276	442
5.2	Checking fuel pressure regulating valve N276	444
5.3	Removing and installing fuel pressure sender G247	445
5.4	Removing and installing air mass measurement module GX35	447
5.5	Removing and installing pressure differential sender G505	449
5.6	Removing and installing NOx sender 2 G687	451
5.7	Removing and installing NOx sender 3 G932	453
5.8	Removing and installing charge air temperature sender ahead of charge air cooler G810	455
5.9	Removing and installing charge air temperature sender after charge air cooler G811	455
5.10	Removing and installing NOx sender G295	456
5.11	Removing and installing particle sensor G784	458
5.12	Removing and installing temperature and pressure sender for low-pressure fuel system GX20	460
<b>6</b>	<b>Engine/motor control unit</b>	<b>462</b>
6.1	Removing and installing engine control unit J623	462
6.2	Removing and installing engine control unit J623 (with protective housing)	463
<b>7</b>	<b>High-pressure pump</b>	<b>470</b>
7.1	Assembly overview - high-pressure pump	470
7.2	Removing and installing high-pressure pump	471
<b>8</b>	<b>Lambda probe</b>	<b>475</b>
8.1	Assembly overview - Lambda probe	475
8.2	Removing and installing lambda probe	476
<b>26</b>	<b>Exhaust system</b>	<b>478</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>478</b>
1.1	Assembly overview – silencers	478
1.2	Assembly overview - front exhaust pipe	483
1.3	Separating exhaust pipes from silencers	487
1.4	Removing and installing silencer	488
1.5	Aligning exhaust system free of stress	495
1.6	Checking exhaust system for leaks	496
1.7	Installation position of clamp	496
1.8	Align end exhaust pipes	498
<b>2</b>	<b>Emission control</b>	<b>499</b>
2.1	Assembly overview – emission control	499
2.2	Removing and installing emission control module	501
2.3	Removing and installing exhaust flap control unit J883	509
2.4	Removing and installing ammonia traps	511



<b>3</b>	<b>SCR system (selective catalytic reduction)</b>	<b>514</b>
3.1	Overview of fitting locations – SCR system (selective catalytic reduction)	514
3.2	Assembly overview – reducing agent tank	520
3.3	Assembly overview – filler tube for reducing agent tank	532
3.4	Assembly overview - reducing agent supply line	538
3.5	Assembly overview - delivery unit for reducing agent metering system GX19	548
3.6	Removing and installing reducing agent tank	549
3.7	Removing and installing front section of reducing agent supply line	568
3.8	Removing and installing delivery module of delivery unit for reducing agent metering system GX19	572
3.9	Removing and installing injector for reduction agent N474	574
3.10	Removing and installing injector 2 for reducing agent N758	576
3.11	Removing and installing control unit for reducing-agent heater J891	578
3.12	Assembly overview - injector for reducing agent N474	595
3.13	Assembly overview – injector 2 for reducing agent N758	596
3.14	Draining reducing agent tank	597
3.15	Removing and installing middle section of reducing agent supply line	601
3.16	Removing and installing rear section of reducing agent supply line	603
3.17	Removing and installing filler pipe for reducing agent tank	616
3.18	Disconnecting reducing agent supply line	632
3.19	SCR - resetting learnt values	637
<b>4</b>	<b>Exhaust gas temperature regulation</b>	<b>638</b>
4.1	Assembly overview – exhaust gas temperature regulation	638
4.2	Removing and installing exhaust gas temperature sender 1 G235	639
4.3	Removing and installing exhaust gas temperature sender 2 G448	641
4.4	Removing and installing exhaust gas temperature sender 3 G495	643
4.5	Removing and installing exhaust gas temperature sender 4 G648	645
<b>5</b>	<b>Exhaust gas recirculation</b>	<b>649</b>
5.1	Assembly overview – exhaust gas recirculation	649
5.2	Removing and installing exhaust gas recirculation cooler	652
5.3	Removing and installing exhaust gas recirculation valve 1 GX5	655
5.4	Removing and installing exhaust gas recirculation valve 2 GX6	655
5.5	Removing and installing exhaust gas recirculation temperature sensor G98	657
5.6	Checking exhaust gas recirculation cooler for leaks	658
<b>28</b>	<b>Glow plug system</b>	<b>663</b>
<b>1</b>	<b>Glow plug system</b>	<b>663</b>
1.1	Assembly overview – glow plug system	663
1.2	Removing and installing glow plug	665
1.3	Removing and installing automatic glow period control unit J179	669
1.4	Removing and installing Hall sender G40	670
1.5	Removing and installing engine speed sender G28	670