



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety measures when working on vehicles with a start/stop system	2
1.4 Safety precautions when working on vehicles with a gas system	2
<b>2 Identification</b>	<b>5</b>
2.1 Engine number/engine data	5
<b>3 General information</b>	<b>6</b>
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	6
<b>4 Repair instructions</b>	<b>7</b>
4.1 Routing and attachment of lines	7
4.2 General repair instructions	7
<b>20 - Fuel supply system</b>	<b>8</b>
<b>1 Fuel system</b>	<b>8</b>
1.1 Overview of fitting locations - fuel system	8
<b>2 Fuel</b>	<b>15</b>
2.1 Assembly overview - fuel tank	15
2.2 Assembly overview - natural gas fuel tank	21
2.3 Assembly overview - securing straps	31
2.4 Assembly overview - fuel tank shut-off valve	37
2.5 Assembly overview - filler neck	41
2.6 Assembly overview - mounting for natural gas fuel tanks	44
2.7 Assembly overview - high-pressure natural gas line	56
2.8 Assembly overview - trims for natural gas fuel tanks	59
2.9 Removing and installing fuel tank	61
2.10 Emptying fuel tank	86
2.11 Removing and installing solenoid of fuel tank shut-off valve	95
2.12 Removing and installing fuel tank shut-off valve	111
2.13 Removing and installing filling connection	118
2.14 Removing and installing natural gas fuel tanks	134
2.15 Determining residual pressure in natural gas fuel tank	216
2.16 Emptying natural gas fuel tanks	228
2.17 Aligning securing strap pads	239
2.18 Closing fuel tank shut-off valves by mechanical means	241
2.19 Releasing pressure in high-pressure natural gas line	250
2.20 Preparing high-pressure natural gas line for installation	252
2.21 Removing and installing high-pressure natural gas line	253
<b>3 Fuel delivery unit, fuel gauge sender</b>	<b>270</b>
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	270
3.2 Removing and installing fuel delivery unit, fuel gauge sender	275
3.3 Removing and installing fuel gauge sender G	280
3.4 Removing and installing assembly opening cover	282
<b>4 Plug-in connectors</b>	<b>283</b>
4.1 Separating plug-in connectors	283
<b>5 Fuel filter</b>	<b>290</b>
<b>6 Activated charcoal filter system</b>	<b>291</b>
6.1 Connection diagram - activated charcoal filter system	291
6.2 Assembly overview – activated charcoal filter system	293
6.3 Removing and installing activated charcoal filter	295
6.4 Checking fuel tank breather	297



<b>7</b>	<b>Accelerator pedal</b> .....	<b>305</b>
7.1	Assembly overview - accelerator module .....	305
7.2	Removing and installing accelerator pedal module GX2 .....	305
<b>8</b>	<b>Fuel supply</b> .....	<b>307</b>
8.1	Checking fuel system pressurisation pump G6 .....	307
8.2	Removing and installing fuel pump control unit J538 .....	323
<b>9</b>	<b>Wiring</b> .....	<b>326</b>
9.1	Removing and installing fuel lines .....	326
9.2	Removing and installing fuel line for auxiliary/supplementary heater .....	332