

001 - 1.0l petrol engine , DLAA,DLAB	1-19
1. 1.0l petrol engine , DLAA,DLAB	1
2. Fuse holder B	2
3. Fuse holder B	3
4. Engine/motor control unit, Fuse holder C	4
5. Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Radiator fan	5
6. Accelerator pedal module, Engine/motor control unit, Brake servo	6
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	7
8. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit	8
9. Oil level and oil temperature sender, Onboard supply control unit, Engine/motor control unit	9
10. Engine/motor control unit	10
11. Starter-alternator, Throttle valve module, Engine/motor control unit	11
12. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	12
13. Engine speed sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	13
14. Intake manifold sender, Pressure sensor for activated charcoal filter air flushing, Inlet camshaft position sender, Engine/motor control unit	14
15. Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Exhaust camshaft position sender, Engine/motor control unit	15
16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve, Inlet camshaft control valve 1	16
17. Engine temperature regulation module, Engine/motor control unit, Fuel metering valve	17
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Charge air cooling pump	18
19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1	19
002 - 1.4l petrol engine , DJKA	20-37
1. 1.4l petrol engine , DJKA	20
2. Fuse holder B	21
3. Fuse holder B	22
4. Engine/motor control unit, Fuse holder C	23
5. Radiator outlet coolant temperature sender, Automatic gearbox control unit, Engine/motor control unit, Brake servo	24
6. Accelerator pedal module, Engine/motor control unit, Radiator fan	25
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	26
8. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit	27
9. Oil level and oil temperature sender, Onboard supply control unit, Engine/motor control unit	28
10. Oil pressure switch for reduced oil pressure, Engine/motor control unit	29
11. Charge pressure sender, Charge pressure control module, Engine/motor control unit	30
12. Throttle valve module, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	31
13. Engine speed sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit	32
14. Oil pressure switch, Intake manifold sender, Hall sender, Engine/motor control unit, Fuel pressure regulating valve	33
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	34
16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Charge air cooling pump	35
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	36
18. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug 4	37
003 - 1.5l petrol engine , DFYA,DPBA,DPCA	38-59
1. 1.5l petrol engine , DFYA,DPBA,DPCA	38
2. Fuse holder B	39
3. Fuse holder B	40
4. Engine/motor control unit, Fuse holder C	41
5. Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	42
6. Radiator outlet coolant temperature sender, Engine/motor control unit, Brake servo, Radiator fan	43
7. Accelerator pedal module. Engine/motor control unit	44

8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	45
9. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit	46
10. Starter-alternator, Onboard supply control unit, Engine/motor control unit	47
11. Oil level and oil temperature sender, Engine/motor control unit	48
12. Engine/motor control unit	49
13. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	50
14. Throttle valve module, Engine/motor control unit	51
15. Engine speed sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	52
16. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	53
17. Engine temperature regulation module, Pressure sensor for activated charcoal filter air flushing, Engine/motor control unit	54
18. Engine/motor control unit, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	55
19. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1	56
20. Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit, Charge air cooling pump	57
21. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2	58
22. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	59
004 - 1.5l petrol engine , DHFA	60-83
1. 1.5l petrol engine , DHFA	60
2. Fuse holder B	61
3. Fuse holder B	62
4. Engine/motor control unit, Fuse holder B, Fuse holder C	63
5. Tank pressure sensor, Engine/motor control unit	64
6. Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit, Gas tank valve	65
7. Radiator outlet coolant temperature sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Brake servo	66
8. Accelerator pedal module, Engine/motor control unit, Radiator fan	67
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	68
10. Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit	69
11. Fuel pump control unit, Engine/motor control unit, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2, Fuel tank shut-off valve 3	70
12. Oil level and oil temperature sender, Onboard supply control unit, Engine/motor control unit	71
13. Engine/motor control unit	72
14. Oil pressure sender, Charge pressure control module, Engine/motor control unit	73
15. Throttle valve module, Charge pressure sender, Engine/motor control unit	74
16. Engine speed sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	75
17. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	76
18. Gas rail temperature and pressure sensor, Engine temperature regulation module, Engine/motor control unit	77
19. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1	78
20. Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit, Fuel metering valve	79
21. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	80
22. Engine/motor control unit, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3, Gas injection valve 4	81
23. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2, Charge air cooling pump	82
24. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	83
005 - 2.0l diesel engine . DSRB.DTRB.DTRD.DTSA.DTSB.DTTC.DTUA	84-113

1. 2.0l diesel engine , DSRB,DTRB,DTRD,DTSA,DTSB,DTTC,DTUA	84
2. Fuse holder B	85
3. Fuse holder B	86
4. Fuse holder B, Fuse holder C, Relay and fuse carrier 2	87
5. Relay and fuse carrier 1	88
6. Engine/motor control unit	89
7. Clutch position sender, ABS control unit, Engine/motor control unit, Brake servo, Radiator fan	90
8. Air mass measurement module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Heater element for crankcase breather	91
9. Water separator sender, Exhaust gas temperature sender 4, Gearbox neutral position sender, Engine/motor control unit	92
10. Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 3 for NOx sender, Engine/motor control unit	93
11. Lambda probe 1 before catalytic converter, Particulate sensor, Engine/motor control unit	94
12. Oil level and oil temperature sender, Engine/motor control unit, Injector for reducing agent, Injector 2 for reducing agent	95
13. Accelerator pedal module, Engine/motor control unit	96
14. Engine/motor control unit, Valve for oil pressure control, Charge air cooling pump, Auxiliary pump for heating	97
15. Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	98
16. Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Heater and air conditioning system control unit	99
17. Engine/motor control unit, Exhaust flap control unit	100
18. Engine/motor control unit	101
19. Engine/motor control unit	102
20. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater	103
21. Engine/motor control unit, Fuel pressure regulating valve, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	104
22. Fuel pressure sender, Engine/motor control unit, Actuator for engine temperature regulation, Coolant regulating valve, Piston cooling jet control valve	105
23. Oil pressure sender, Charge pressure sender, Pressure differential sender, Engine/motor control unit	106
24. Coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Charge air temperature sender before charge air cooler, Coolant temperature sender for charge air cooler, Engine/motor control unit	107
25. Engine outlet coolant temperature sender, Exhaust gas temperature sender 3, Temperature sensor 2 for exhaust recirculation, Charge air temperature sender after charge air cooler, Inlet camshaft position sender, Engine/motor control unit	108
26. Temperature and pressure sender for low-pressure fuel system, Engine speed sender, Engine/motor control unit	109
27. Throttle valve module, Exhaust gas recirculation valve 1, Engine/motor control unit	110
28. Exhaust gas recirculation valve 2, Engine/motor control unit, Charge pressure positioner	111
29. Engine temperature regulation module, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4	112
30. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3	113
006 - Dual clutch gearbox 0CW , (0EG)	114-118
1. Dual clutch gearbox 0CW , (0EG)	114
2. Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	115
3. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	116
4. Selector mechanism, Onboard supply control unit, Mechatronic unit for dual clutch gearbox, Interface for entry and start system, Selector lever position display	117
5. Selector mechanism, Parking lock actuator	118
007 - Dual clutch gearbox 0GC , (0IJ)	119-123
1. Dual clutch gearbox 0GC , (0IJ)	119
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	120
3. Mechatronic unit for dual clutch gearbox, Auxiliary hydraulic pump 1 for gearbox oil	121
4. Selector mechanism, Onboard supply control unit, Mechatronic unit for dual clutch gearbox, Interface for entry and start system, Selector lever position display	122
5. Selector mechanism, Data bus diagnostic interface, Parking lock actuator	123
008 - Battery, starter and alternator , (9G3)	124-127
1. Battery, starter and alternator , (9G3)	124
2. Fuse holder A, Fuse holder B, Fuse carrier 4	125
3. Starter, Alternator with voltage regulator, Data bus diagnostic interface, Fuse holder B	126
4. Batterv. Batterv monitor control unit	127

009 - Battery, starter and alternator , (9G8)	128-133
1. Battery, starter and alternator , (9G8)	128
2. Starter, Fuse holder A, Fuse holder B, Fuse carrier 4	129
3. Voltage converter (48 V/12 V), Fuse for voltage converter, Fuse holder B	130
4. Battery, 48 V, Voltage converter (48 V/12 V), Airbag control unit, Data bus diagnostic interface	131
5. Battery, 48 V, Starter-alternator, Engine/motor control unit	132
6. Battery, Starter-alternator, Battery monitor control unit	133
010 - Dynamic Chassis Control , (2I0)	134-138
1. Dynamic Chassis Control , (2I0)	134
2. Electronically controlled damping control unit, Data bus diagnostic interface, Fuse holder C	135
3. Front right vehicle level sender, Front right body acceleration sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve	136
4. Rear left vehicle level sender, Front left vehicle level sender, Front left body acceleration sender, Rear body acceleration sender, Electronically controlled damping control unit	137
5. Centre switch module in dash panel, Electronically controlled damping control unit, Display unit for front information display and operating unit control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	138
011 - 12 V sockets , (7B2),(9JB)	139-140
1. 12 V sockets , (7B2),(9JB)	139
2. Fuse holder C, 12 V socket, 12 V socket 3	140
012 - DC/AC converter with socket , (9Z3)	141-142
1. DC/AC converter with socket , (9Z3)	141
2. Data bus diagnostic interface, Fuse holder C, DC/AC converter with socket, 12 V - 230 V	142
013 - Airbag systems , (L0L)	143-155
1. Airbag systems , (L0L)	143
2. Airbag control unit, Onboard supply control unit, Fuse holder C	144
3. Airbag control unit, Front left seat belt, Front right seat belt	145
4. Key-operated switch to deactivate airbag on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Rear belt tensioner igniter on driver side	146
5. Airbag control unit, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	147
6. Airbag control unit, Airbag igniter 1 on front passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	148
7. Airbag control unit, Side airbag igniter on driver side, Igniter for central airbag for occupant collision protection, driver side	149
8. Airbag control unit, Side airbag igniter on front passenger side, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	150
9. Rear belt switch, passenger side, Twin belt buckle, Airbag control unit	151
10. Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre, Airbag control unit	152
11. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor on front passenger side, Driver side seat position sensor, Airbag control unit	153
12. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for front airbag, Front passenger side seat position sensor, Airbag control unit, Diagnostic connection	154
13. Battery, 48 V, Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Airbag igniter on driver side	155
014 - Airbag systems , (L0R)	156-170
1. Airbag systems , (L0R)	156
2. Airbag control unit, Onboard supply control unit, Fuse holder C	157
3. Airbag control unit, Front left seat belt, Front right seat belt	158
4. Key-operated switch to deactivate airbag on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Rear belt tensioner igniter on driver side	159
5. Airbag control unit, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	160
6. Airbag control unit, Airbag igniter 1 on front passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	161
7. Airbag control unit, Side airbag igniter on driver side, Igniter for central airbag for occupant collision protection, driver side	162
8. Twin belt buckle, Airbag control unit, Side airbag igniter on front passenger side, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	163
9. Rear belt switch. driver side. Twin belt buckle. Rear seat occupied sensor on driver side. Airbaa	164

control unit	
10. Driver side belt switch, Rear seat occupied sensor on passenger side, Driver side seat position sensor, Rear seat occupied sensor, centre, Airbag control unit	165
11. Front passenger side belt switch, Seat occupied sensor on front passenger side, Side airbag crash sensor on driver side, Front passenger side seat position sensor, Airbag control unit	166
12. Battery, 48 V, Side airbag crash sensor on front passenger side, Crash sensor for front airbag, Airbag control unit, Emergency call module control unit and communication unit, Diagnostic connection	167
13. Trigger 1 for pedestrian protection, Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Airbag igniter on driver side	168
14. Front pressure hose sensor for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit	169
15. Driver side crash sensor for pedestrian protection, Front passenger side crash sensor for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit	170
015 - Brake system	171-184
1. Brake system	171
2. ABS control unit, Fuse holder B, Fuse holder C	172
3. Clutch position sender, ABS control unit, Data bus diagnostic interface	173
4. ABS control unit	174
5. Front right speed sensor, Front left speed sensor, ABS control unit	175
6. Rear right speed sensor, Rear left speed sensor, ABS control unit, Right parking brake motor	176
7. ABS control unit	177
8. ABS control unit, Left parking brake motor	178
9. ABS control unit	179
10. Engine/motor control unit, Brake servo	180
11. Brake servo	181
12. Parking brake button	182
13. Parking brake button	183
14. Centre switch module in dash panel, Front right brake pad wear sender, Onboard supply control unit	184
016 - Rear lid remote release , (4E0)	185-186
1. Rear lid remote release , (4E0)	185
2. Rear lid handle, Onboard supply control unit, Rear lid lock unit	186
017 - Door control units, driver side , (L0L)	187-198
1. Door control units, driver side , (L0L)	187
2. Driver door control unit, Fuse holder C	188
3. Driver exterior door handle, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side window regulator motor	189
4. Operating unit for window regulator in driver door, Driver door control unit	190
5. Rear lid remote release button, Central locking button, Driver door control unit	191
6. Exterior mirror adjuster, Driver door control unit	192
7. Driver door control unit, Driver door lock unit	193
8. Driver door control unit, Driver side exterior mirror	194
9. Driver door control unit, Driver side exterior mirror	195
10. Rear driver side window regulator button, Onboard supply control unit, Rear driver side window regulator motor	196
11. Onboard supply control unit, Rear door lock unit, driver side	197
12. Data bus diagnostic interface	198
018 - Door control units, driver side , (L0R)	199-210
1. Door control units, driver side , (L0R)	199
2. Driver door control unit, Fuse holder C	200
3. Driver exterior door handle, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side window regulator motor	201
4. Operating unit for window regulator in driver door, Driver door control unit	202
5. Rear lid remote release button, Driver door control unit	203
6. Exterior mirror adjuster, Driver door control unit	204
7. Driver door control unit, Driver door lock unit	205
8. Driver door control unit, Driver side exterior mirror	206
9. Driver door control unit, Driver side exterior mirror	207
10. Rear driver side window regulator button, Onboard supply control unit, Rear driver side window regulator motor	208
11. Onboard supply control unit, Rear door lock unit, driver side	209
12. Data bus diagnostic interface	210
019 - Door control units, passenger side , (L0L)	211-219
1. Door control units, passenger side , (L0L)	211
2. Front passenger door control unit. Fuse holder C	212

3. Front passenger exterior door handle, Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	213
4. Front passenger door control unit, Front passenger door lock unit	214
5. Front passenger door control unit, Passenger side exterior mirror	215
6. Front passenger door control unit, Passenger side exterior mirror	216
7. Rear passenger side window regulator button, Onboard supply control unit, Rear passenger side window regulator motor	217
8. Onboard supply control unit, Rear door lock unit, passenger side	218
9. Data bus diagnostic interface	219
020 - Door control units, passenger side , (L0R)	220-228
1. Door control units, passenger side , (L0R)	220
2. Front passenger door control unit, Fuse holder C	221
3. Front passenger exterior door handle, Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	222
4. Front passenger door control unit, Front passenger door lock unit	223
5. Front passenger door control unit, Passenger side exterior mirror	224
6. Front passenger door control unit, Passenger side exterior mirror	225
7. Rear passenger side window regulator button, Onboard supply control unit, Rear passenger side window regulator motor	226
8. Onboard supply control unit, Rear door lock unit, passenger side	227
9. Data bus diagnostic interface	228
021 - Interior lights , (QQ4),(QQ8),(QQ9)	229-243
1. Interior lights , (QQ4),(QQ8),(QQ9)	229
2. Fuse holder C, Rear interior light, Front roof module	230
3. Driver vanity mirror contact switch, Rear interior light, Front roof module, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Automatic anti-dazzle interior mirror	231
4. Front passenger vanity mirror contact switch, Front roof module, Rear interior light 2, Rear interior light 4	232
5. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Front roof module	233
6. Onboard supply control unit, Front roof module	234
7. Left footwell light, Rear left footwell light	235
8. Light for front left door contour lighting, Light for left door storage compartment illumination	236
9. Rear left door storage compartment illumination bulb, Light for rear left door contour lighting, Coupling point for rear left door	237
10. Right footwell light, Rear right footwell light	238
11. Light for front right door contour lighting	239
12. Rear right door storage compartment illumination bulb, Light for rear right door contour lighting	240
13. Light 2 for dash panel contour lighting, Light 3 for dash panel contour lighting	241
14. Light 1 for front centre console background lighting, Light for cup holder background lighting, Light 1 for dash panel contour lighting	242
15. Glove compartment light switch, Luggage compartment light, Glove compartment light	243
022 - Steering column electronics , (2FM),(2FT),(2PS),(2PT)	244-246
1. Steering column electronics , (2FM),(2FT),(2PS),(2PT)	244
2. Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Fuse holder C	245
3. Onboard supply control unit, Steering column electronics control unit	246
023 - Steering column electronics , (2FB),(2FD),(2FE),(2PD),(2PE)	247-249
1. Steering column electronics , (2FB),(2FD),(2FE),(2PD),(2PE)	247
2. Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Fuse holder C	248
3. Onboard supply control unit, Steering column electronics control unit	249
024 - Multifunction steering wheel , (2FB),(2FD),(2FE),(2FM),(2FT),(2PD),(2PE),(2PS),(2PT)	250-253
1. Multifunction steering wheel , (2FB),(2FD),(2FE),(2FM),(2FT),(2PD),(2PE),(2PS),(2PT)	250
2. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit	251
3. Tiptronic switch in steering wheel to shift down, Multifunction steering wheel control unit, Steering column electronics control unit, Control unit for steering wheel contact detection, Heated steering wheel	252
4. Tiptronic switch in steering wheel to shift up, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	253
025 - Radiator fan	254-255
1. Radiator fan	254
2. Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit, Fuse holder A. Fuse holder B. Radiator fan	255

026 - Light switch	256-258
1. Light switch	256
2. Centre switch module in dash panel, Onboard supply control unit, Display unit for front information display and operating unit control unit, Fuse holder C	257
3. Operating unit for lighting	258
027 - Dash panel insert	259-262
1. Dash panel insert	259
2. Data bus diagnostic interface, Dash panel insert, Fuse holder C	260
3. Fuel delivery unit, Fuel gauge sender 2, Dash panel insert	261
4. Fuel delivery unit, Ambient temperature sensor, Onboard supply control unit, Dash panel insert	262
028 - Trailer coupling , (1M5),(1M6)	263-269
1. Trailer coupling , (1M5),(1M6)	263
2. Trailer detector control unit, Fuse holder C	264
3. Trailer detector control unit, Onboard supply control unit	265
4. Electric hinged tow coupling attachment button, Trailer detector control unit, Data bus diagnostic interface	266
5. Trailer detector control unit, Trailer towing coupling	267
6. Trailer detector control unit, Trailer socket	268
7. Trailer detector control unit, Trailer socket	269
029 - Adaptive cruise control , (8T2),(8T3),(8T6),(8T8),(8T9),(QK1)	270-272
1. Adaptive cruise control , (8T2),(8T3),(8T6),(8T8),(8T9),(QK1)	270
2. Adaptive cruise control unit, Data bus diagnostic interface, Fuse holder C	271
3. Adaptive cruise control unit, Front camera for driver assist systems	272
030 - Air conditioning system , (KC0),(KH7)	273-286
1. Air conditioning system , (KC0),(KH7)	273
2. Fuse holder C	274
3. Rain and light sensor, Vehicle interior temperature sensor, Onboard supply control unit, Heater and air conditioning system control unit	275
4. Fresh air blower control unit, Heater and air conditioning system control unit	276
5. Operating and display unit for rear air conditioning system, Left vent temperature sender, Right vent temperature sender, Rear vent temperature sender, Heater and air conditioning system control unit	277
6. Sunlight penetration photosensor, Data bus diagnostic interface, Heater and air conditioning system control unit	278
7. Heater and air conditioning system control unit, Defroster flap	279
8. Heater and air conditioning system control unit, Front left temperature flap, Rear temperature flap	280
9. Heater and air conditioning system control unit, Front right temperature flap, Fresh air and air recirculation flap	281
10. Footwell vent temperature sender, Evaporator temperature sensor, Heater and air conditioning system control unit, Air distribution flap	282
11. Heater and air conditioning system control unit, Air recirculation flap control motor	283
12. Air quality sensor, Pressure sender for refrigerant circuit, Heater and air conditioning system control unit	284
13. Heater and air conditioning system control unit, Air conditioner compressor	285
14. Heater and air conditioning system control unit, Air conditioner compressor	286
031 - Anti-theft alarm system , (7AG),(7AL)	287-289
1. Anti-theft alarm system , (7AG),(7AL)	287
2. Anti-theft alarm system horn, Alarm horn, Onboard supply control unit, Fuse holder C	288
3. Anti-theft alarm sensor, Onboard supply control unit	289
032 - Dual tone horn , (8Y1)	290-291
1. Dual tone horn , (8Y1)	290
2. Left horn, Right horn, Onboard supply control unit, Fuse holder B	291
033 - Parking aid (PDC) , (7X2),(7X5)	292-297
1. Parking aid (PDC) , (7X2),(7X5)	292
2. Centre switch module in dash panel, Parking aid control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	293
3. Front centre left parking aid sender, Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Parking aid control unit	294
4. Front right parking aid sender, Front centre right parking aid sender, Front right sender for park assist steering on right side of vehicle, Parking aid control unit	295
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear left park assist steering sender, Parking aid control unit	296
6. Rear centre right parking aid sender, Rear right parking aid sender, Rear right park assist steering sender, Parking aid control unit	297
034 - Electrically operated rear lid . (5I6)	298-303

1. Electrically operated rear lid , (5I6)	298
2. Onboard supply control unit, Data bus diagnostic interface, Rear lid control unit, Fuse holder C	299
3. Rear lid control unit, Motor 1 for rear lid	300
4. Rear lid warning buzzer, Rear lid control unit, Power latching for rear lid	301
5. Rear lid closure button, Rear lid control unit	302
6. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit	303
035 - Electromechanical steering , (1N3),(1N5),(1N7)	304-306
1. Electromechanical steering , (1N3),(1N5),(1N7)	304
2. Power steering control unit, Fuse holder B	305
3. Data bus diagnostic interface	306
036 - Front camera for driver assist systems , (6I1),(6I2),(6I6),(QK1)	307-310
1. Front camera for driver assist systems , (6I1),(6I2),(6I6),(QK1)	307
2. Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	308
3. Adaptive cruise control unit, Front camera for driver assist systems	309
4. Data bus diagnostic interface	310
037 - Head-up display , (KS1)	311-312
1. Head-up display , (KS1)	311
2. Data bus diagnostic interface, Control unit for head-up display, Fuse holder C	312
038 - Fuel system , DFYA,DJKA,DLAA,DLAB,DNNA,DPBA,DPCA	313-316
1. Fuel system , DFYA,DJKA,DLAA,DLAB,DNNA,DPBA,DPCA	313
2. Fuel pump control unit, Engine/motor control unit, Fuse holder B	314
3. Fuel delivery unit, Fuel pump control unit, Dash panel insert	315
4. Tank flap release, Fuel delivery unit, Onboard supply control unit, Dash panel insert	316
039 - Fuel system , DHFA	317-320
1. Fuel system , DHFA	317
2. Engine/motor control unit, Fuse holder B	318
3. Fuel delivery unit, Fuel pump control unit, Dash panel insert	319
4. Tank flap release, Onboard supply control unit, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2, Fuel tank shut-off valve 3	320
040 - Fuel system , DSRB,DTRB,DTRD,DTSA,DTSB,DTTC,DTUA	321-324
1. Fuel system , DSRB,DTRB,DTRD,DTSA,DTSB,DTTC,DTUA	321
2. Fuel pump control unit, Engine/motor control unit, Fuse holder B	322
3. Fuel delivery unit, Fuel pump control unit, Dash panel insert	323
4. Tank flap release, Fuel gauge sender 2, Onboard supply control unit, Dash panel insert	324
041 - Reducing agent metering system , DSRB,DTRB,DTRD,DTSA,DTSB,DTTC,DTUA	325-331
1. Reducing agent metering system , DSRB,DTRB,DTRD,DTSA,DTSB,DTTC,DTUA	325
2. Fuse holder B, Fuse holder C, Relay and fuse carrier 2	326
3. Engine/motor control unit, Injector for reducing agent, Injector 2 for reducing agent	327
4. Engine/motor control unit	328
5. Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	329
6. Delivery unit for reducing agent metering system, Control unit for reducing agent heater	330
7. Delivery unit for reducing agent metering system	331
042 - Mobile telephone systems , (9IJ),(9WJ),(9ZX)	332-336
1. Mobile telephone systems , (9IJ),(9WJ),(9ZX)	332
2. Chip card reader control unit, Transmission and reception stabilisation control unit, Fuse holder C	333
3. Left aerial module, Telephone bracket, Transmission and reception stabilisation control unit	334
4. Onboard supply control unit, Telephone bracket	335
5. Interface for entry and start system	336
043 - Communication , (EL1),(EL2),(EL5),(EL6),(NZ2),(NZ3),(NZ4)	337-342
1. Communication , (EL1),(EL2),(EL5),(EL6),(NZ2),(NZ3),(NZ4)	337
2. Airbag control unit, Emergency call module control unit and communication unit, Loudspeaker for emergency call module, Fuse holder C	338
3. Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit	339
4. Emergency call module control unit and communication unit, Front roof module	340
5. Emergency call module control unit and communication unit, Roof aerial, LTE aerial 2	341
6. Onboard supply control unit, Internet access control unit, Emergency call module control unit and communication unit, Data transmission aerial	342
044 - Multimedia system	343-351
1. Multimedia system	343
2. Data bus diagnostic interface, Control unit 1 for information electronics, Fuse holder C	344
3. Rear lid handle, Data bus diagnostic interface, Control unit 1 for information electronics	345
4. Centre switch module in dash panel, Display unit for front information display and operating unit control unit. Control unit 1 for information electronics	346



5. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, USB connection 1	347
6. Control unit 1 for information electronics, Emergency call module control unit and communication unit, USB charging socket 1, Front roof module	348
7. Control unit 1 for information electronics, Roof aerial, Telephone bracket	349
8. Control unit 1 for information electronics, Aerial, Radio aerial 2, Rear window	350
9. Control unit 1 for information electronics, Digital radio aerial, Rear window	351
045 - Auxiliary air heater (PTC) , (7E6)	352-354
1. Auxiliary air heater (PTC) , (7E6)	352
2. Fuse holder B, Relay and fuse carrier 1	353
3. Heater and air conditioning system control unit, Auxiliary air heater element	354
046 - Reversing camera (Rear Assist) , (KA2)	355-357
1. Reversing camera (Rear Assist) , (KA2)	355
2. Rear lid handle, Data bus diagnostic interface, Control unit 1 for information electronics, Fuse holder C	356
3. Rear lid handle, Data bus diagnostic interface	357
047 - Window wash/wipe system , (8N6),(8N8),(9T1)	358-361
1. Window wash/wipe system , (8N6),(8N8),(9T1)	358
2. Windscreen washer fluid level sender, Onboard supply control unit, Fuse holder B, Fuse holder C, Windscreen and rear window washer pump	359
3. Wiper motor control unit, Onboard supply control unit, Rear window wiper motor	360
4. Heater and air conditioning system control unit, Left washer jet heater element, Right washer jet heater element	361
048 - Headlights , (8IT),(8IU),(8IY)	362-370
1. Headlights , (8IT),(8IU),(8IY)	362
2. Onboard supply control unit, Left fog light bulb, Fuse holder B, Fuse holder C	363
3. Onboard supply control unit, Front left headlight	364
4. Onboard supply control unit, Front right headlight	365
5. Rear left vehicle level sender, Front left vehicle level sender, Onboard supply control unit	366
6. Control unit for cornering light and headlight range control	367
7. Control unit for cornering light and headlight range control	368
8. Data bus diagnostic interface, Control unit for cornering light and headlight range control	369
9. Data bus diagnostic interface	370
049 - Headlights , (8IR)	371-375
1. Headlights , (8IR)	371
2. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Fuse holder B	372
3. Onboard supply control unit, Front left headlight	373
4. Onboard supply control unit, Front right headlight	374
5. Rear left vehicle level sender, Front left vehicle level sender, Onboard supply control unit	375
050 - Sliding sunroof , (3FU)	376-380
1. Sliding sunroof , (3FU)	376
2. Sliding sunroof adjustment control unit, Data bus diagnostic interface, Fuse holder C	377
3. Sliding sunroof adjustment control unit, Sliding sunroof motor	378
4. Sliding sunroof adjustment control unit, Sunroof roller blind motor	379
5. Sliding sunroof adjustment control unit, Front roof module	380
051 - Tail light clusters , (8VG)	381-386
1. Tail light clusters , (8VG)	381
2. Reversing light switch, Onboard supply control unit, Left tail light cluster, Fuse holder C	382
3. Onboard supply control unit, Right tail light cluster, High-level brake light bulb	383
4. Onboard supply control unit, Left tail light cluster 2	384
5. Onboard supply control unit, Right tail light cluster 2	385
6. Onboard supply control unit, Right tail light cluster 2, Left number plate light, Right number plate light	386
052 - Tail light clusters , (8VM)	387-393
1. Tail light clusters , (8VM)	387
2. Reversing light switch, Onboard supply control unit, Fuse holder C	388
3. Onboard supply control unit, Left tail light cluster, Right tail light cluster	389
4. Onboard supply control unit, Right tail light cluster, High-level brake light bulb	390
5. Onboard supply control unit, Left tail light cluster 2	391
6. Onboard supply control unit, Right tail light cluster 2	392
7. Onboard supply control unit, Left number plate light, Right number plate light	393
053 - Seat heating , (4A3),(4A4)	394-400
1. Seat heating , (4A3),(4A4)	394
2. Heater and air conditioning system control unit, Fuse holder C	395
3. Operating and display unit for rear air conditioning system	396
4. Front left seat heating. Heated backrest for front left seat	397

5. Front right seat heating, Heated backrest for front right seat	398
6. Rear left seat heating	399
7. Heated backrest for rear left seat, Rear right seat heating, Heated backrest for rear right seat	400
054 - Seat backrest and electric lumbar support, driver seat , (8I2),(1R0)	401-406
1. Seat backrest and electric lumbar support, driver seat , (8I2),(1R0)	401
2. Data bus diagnostic interface, Driver seat adjustment control unit, Fuse holder C, Fuse carrier 1	402
3. Operating unit for front left seat adjustment, Driver seat lumbar support adjustment switch, Driver seat adjustment control unit	403
4. Driver operating unit for memory settings, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor	404
5. Driver seat adjustment control unit, Driver seat rake adjustment motor, Driver seat height adjustment motor	405
6. Driver seat adjustment control unit, Driver seat backrest adjustment motor	406
055 - All-wheel drive , (1X1)	407-410
1. All-wheel drive , (1X1)	407
2. All-wheel drive control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	408
3. All-wheel drive control unit	409
4. Torque vectoring control unit 1, Torque vectoring control unit 2	410
056 - TV tuner, card reader unit (Japan) , (ER5),(Q0C)	411-415
1. TV tuner, card reader unit (Japan) , (ER5),(Q0C)	411
2. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial, Fuse holder C	412
3. Toll collection sender, Chip card reader control unit, Control unit 1 for information electronics, TV tuner	413
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, TV aerial 1, TV tuner	414
5. TV aerial 2, TV aerial 3, TV tuner, Rear window	415
057 - Seat backrest and electric lumbar support, driver seat , (8I3),(1R1)	416-421
1. Seat backrest and electric lumbar support, driver seat , (8I3),(1R1)	416
2. Data bus diagnostic interface, Driver seat adjustment control unit, Fuse holder C, Fuse carrier 2	417
3. Operating unit for front right seat adjustment, Driver seat lumbar support adjustment switch, Driver seat adjustment control unit	418
4. Driver operating unit for memory settings, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor	419
5. Driver seat adjustment control unit, Driver seat rake adjustment motor, Driver seat height adjustment motor	420
6. Driver seat adjustment control unit, Lumbar support for driver seat, Driver seat backrest adjustment motor	421
058 - 2.0l petrol engine , DNNA	422-444
1. 2.0l petrol engine , DNNA	422
2. Fuse holder B	423
3. Fuse holder B	424
4. Engine/motor control unit, Fuse holder B, Fuse holder C	425
5. Engine/motor control unit, Brake servo, Radiator fan	426
6. Dual exhaust gas temperature sensor 1, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	427
7. Accelerator pedal module, Engine/motor control unit	428
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	429
9. Charge pressure sender, Onboard supply control unit, Engine/motor control unit	430
10. Radiator outlet coolant temperature sender, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	431
11. Data bus diagnostic interface, Engine/motor control unit	432
12. Engine/motor control unit	433
13. Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Knock sensor 1, Coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit	434
14. Oil pressure switch, Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Engine/motor control unit	435
15. Cam adjustment actuator 7, Cam adjustment actuator 8, Hall sender 3, Engine/motor control unit, Fuel metering valve	436
16. Engine speed sender, Pressure differential sender for particulate filter, Engine/motor control unit, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1	437
17. Throttle valve module. Engine/motor control unit. Activated charcoal filter solenoid valve 1.	438

Coolant valve for gearbox	
18. Intake manifold sender, Charge pressure control module, Engine/motor control unit	439
19. Engine temperature regulation module, Engine/motor control unit, Ignition coil 1 with output stage, Spark plug 1	440
20. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 2, Spark plug 3, Spark plug 4	441
21. Hall sender, Fuel pressure sender, Engine/motor control unit, Coolant circulation pump	442
22. Intake manifold flap potentiometer, Engine/motor control unit, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	443
23. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	444
059 - Background lighting , (UD1),(UD2)	445-454
1. Background lighting , (UD1),(UD2)	445
2. Driver door control unit	446
3. Front passenger door control unit	447
4. Driver exterior door handle	448
5. Front passenger exterior door handle	449
6. Front passenger exterior door handle, Coupling point on front left exterior door handle	450
7. Coupling point on front left exterior door handle, Coupling point on front right exterior door handle	451
8. Coupling point on front right exterior door handle	452
9. Rear left exterior door handle, Rear right exterior door handle	453
10. Onboard supply control unit, Light conductor for contour lighting in radiator grille, front right, Light conductor for contour lighting in radiator grille, front left	454
060 - Sound system , (9VG)	455-460
1. Sound system , (9VG)	455
2. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Fuse holder C	456
3. Digital sound package control unit, Front left treble loudspeaker, Subwoofer	457
4. Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker	458
5. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	459
6. Digital sound package control unit, Emergency call module control unit and communication unit, Loudspeaker for emergency call module	460
061 - Sound system , (8RE),(8RL),(8RS),(8RT)	461-464
1. Sound system , (8RE),(8RL),(8RS),(8RT)	461
2. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Centre loudspeaker	462
3. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	463
4. Control unit 1 for information electronics, Rear left wide band loudspeaker, Rear right wide band loudspeaker	464
062 - Assist systems , (6I6),(79H),(7Y1)	465-468
1. Assist systems , (6I6),(79H),(7Y1)	465
2. Data bus diagnostic interface, Lane change assist control unit, Fuse holder C	466
3. Lane change assist control unit, Lane change assist control unit 2	467
4. Driver side exterior mirror, Passenger side exterior mirror	468
063 - Entry and start authorisation , (4I6),(4I7),(4I8),(4K5),(4K6)	469-488
1. Entry and start authorisation , (4I6),(4I7),(4I8),(4K5),(4K6)	469
2. Interface for entry and start system, Fuse holder C	470
3. Starter button, Interface for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Selector lever position display	471
4. Onboard supply control unit, Interface for entry and start system, Telephone bracket, Left aerial for entry and start authorisation, Right aerial for entry and start authorisation	472
5. Onboard supply control unit, Interface for entry and start system	473
6. Data bus diagnostic interface, Control unit for electronic steering column lock, Dash panel insert	474
7. Driver door control unit	475
8. Driver door control unit	476
9. Front passenger door control unit	477
10. Front passenger door control unit	478
11. Driver exterior door handle	479
12. Driver exterior door handle	480
13. Front passenger exterior door handle	481
14. Front passenger exterior door handle	482
15. Coupling point on front left exterior door handle	483

16. Coupling point on front left exterior door handle	484
17. Coupling point on front right exterior door handle	485
18. Coupling point on front right exterior door handle	486
19. Control unit 2 for break-in protection, Control unit 3 for break-in protection	487
20. Control unit 3 for break-in protection, Control unit 4 for break-in protection, Control unit 5 for break-in protection	488
064 - Auxiliary heater , (9M9)	489-492
1. Auxiliary heater , (9M9)	489
2. Roof aerial, Remote control receiver for auxiliary heater, Fuse holder B, Fuse holder C, Metering pump	490
3. Auxiliary heater control unit, Data bus diagnostic interface	491
4. Auxiliary heater control unit	492
065 - Interior mirror	493-494
1. Interior mirror	493
2. Onboard supply control unit, Fuse holder C, Front roof module, Automatic anti-dazzle interior mirror	494
066 - Earthing concept in engine compartment	495-510
1. Earthing concept in engine compartment	495
2. ABS control unit, Brake servo	496
3. Battery, Battery monitor control unit, Power steering control unit, Engine/motor control unit, Radiator fan	497
4. Automatic gearbox control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Left fog light bulb	498
5. Front left headlight, Fuse holder B, Relay and fuse carrier 1, Auxiliary hydraulic pump 1 for gearbox oil	499
6. Bonnet contact switch 2, Adaptive cruise control unit, Control unit 2 for break-in protection, Light conductor for contour lighting in radiator grille, front right, Light conductor for contour lighting in radiator grille, front left, Charge air cooling pump	500
7. Starter-alternator, Air conditioner compressor, Auxiliary pump for heating	501
8. Starter-alternator, Air quality sensor, Oil level and oil temperature sender, Axle differential lock control unit, Control unit for structure-borne sound	502
9. Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 3 for NOx sender, Clutch position sender, Particulate sensor, Alarm horn	503
10. Anti-theft alarm system horn, Left horn, Control unit for cornering light and headlight range control, Left washer jet heater element, Right washer jet heater element	504
11. Ignition coil 1 with output stage, Ignition coil 2 with output stage	505
12. Ignition coil 2 with output stage, Ignition coil 3 with output stage	506
13. Right horn, Auxiliary heater control unit, Front right headlight, Ignition coil 4 with output stage, Coolant circulation pump	507
14. Bonnet contact switch, Front right brake pad wear sender, Pressure sender for refrigerant circuit, Wiper motor control unit, Control unit 3 for break-in protection, Right fog light bulb	508
15. Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1, Coolant valve for gearbox	509
16. Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	510
067 - Earthing concept in interior	511-533
1. Earthing concept in interior	511
2. Rear lid handle, Chip card reader control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, TV tuner, Front roof module	512
3. Internet access control unit, Emergency call module control unit and communication unit, Telephone bracket, Transmission and reception stabilisation control unit, USB connection 1	513
4. Selector mechanism, Parking brake button, 12 V socket, Parking lock actuator, Selector lever position display, Auxiliary air heater element	514
5. Centre switch module in dash panel, Operating unit for lighting, Interface for entry and start system, Heater and air conditioning system control unit, Light 1 for front centre console background lighting, Light for cup holder background lighting	515
6. Operating and display unit for rear air conditioning system, Starter button, Vehicle interior temperature sensor, Control unit for head-up display, Light 1 for dash panel contour lighting, USB charging socket 1	516
7. Control unit for steering wheel contact detection, Light 2 for dash panel contour lighting, Light 3 for dash panel contour lighting, Rear left seat heating, Heated backrest for rear left seat, Rear right seat heating	517
8. Battery, 48 V, Voltage converter (48 V/12 V), Fresh air blower control unit, Sliding sunroof adjustment control unit	518
9. Light for front right door contour lighting, Light for right door storage compartment illumination, Passenger side exterior mirror, Driver door lock unit, Glove compartment light, Right footwell light	519

10. Driver door control unit, Front passenger door control unit, Light for front left door contour lighting, Light for left door storage compartment illumination, Driver side exterior mirror, Front passenger door lock unit	520
11. Coupling point on front left exterior door handle	521
12. Coupling point on front right exterior door handle	522
13. Driver exterior door handle	523
14. Front passenger exterior door handle	524
15. Rear left door storage compartment illumination bulb, Rear right door storage compartment illumination bulb, Light for rear left door contour lighting, Rear door lock unit, driver side, Rear door lock unit, passenger side, Rear driver side window regulator motor, Rear passenger side window regulator motor	525
16. Rear left exterior door handle, Rear right exterior door handle, Driver seat adjustment control unit, Light for rear right door contour lighting	526
17. Driver seat adjustment control unit, Front passenger seat backrest fan, Front passenger seat cushion fan, Rear right footwell light, Heated backrest for front right seat	527
18. Driver seat adjustment control unit, Driver seat cushion fan, Front right seat heating, Heated backrest for front left seat	528
19. Driver seat backrest fan, Rear left footwell light, Front left seat heating	529
20. Onboard supply control unit	530
21. Steering column electronics control unit, Data bus diagnostic interface, Control unit for electronic steering column lock, Diagnostic connection, Left footwell light	531
22. Anti-theft alarm sensor, Parking aid control unit, Dash panel insert, Front camera for driver assist systems, Fuse holder C	532
23. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Rain and light sensor, Rear interior light, Rear interior light 2, Rear interior light 4, Automatic anti-dazzle interior mirror	533
068 - Earthing concept in luggage compartment	534-543
1. Earthing concept in luggage compartment	534
2. Trailer detector control unit, Trailer socket	535
3. Front left seat belt, Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Left number plate light, Rear window	536
4. Rear lid handle, Rear lid closure button, Left tail light cluster 2, Rear window wiper motor, Power latching for rear lid, Rear lid lock unit, Right number plate light	537
5. Right tail light cluster 2, DC/AC converter with socket, 12 V - 230 V, 12 V socket 3, Heated backrest for rear right seat	538
6. Fuel pump control unit, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2, Fuel tank shut-off valve 3, Metering pump	539
7. Fuel delivery unit, Delivery unit for reducing agent metering system, Fuel pump control unit, Heater for reducing agent line (heater circuit 2)	540
8. Electronically controlled damping control unit, All-wheel drive control unit, Digital sound package control unit, Control unit 4 for break-in protection, Left tail light cluster	541
9. Lane change assist control unit, Lane change assist control unit 2, Rear lid power opening control unit, Right tail light cluster, Remote control receiver for auxiliary heater, Luggage compartment light	542
10. Control unit 5 for break-in protection, Torque vectoring control unit 1, Torque vectoring control unit 2, High-level brake light bulb	543
069 - Fuses in interior	544-567
1. Fuses in interior	544
2. Fuse holder A, Fuse holder B, Fuse holder C	545
3. Delivery unit for reducing agent metering system, Trailer detector control unit, Control unit for reducing agent heater, Torque vectoring control unit 1, Torque vectoring control unit 2, Fuse holder C	546
4. Sliding sunroof adjustment control unit, Onboard supply control unit, Heater and air conditioning system control unit, Fuse holder C, Parking lock actuator	547
5. Driver door control unit, Front passenger door control unit, Fuse holder C, Driver side exterior mirror, Rear driver side window regulator motor, Rear passenger side window regulator motor	548
6. Driver exterior door handle, Front passenger exterior door handle, Fuse holder C	549
7. Airbag control unit, Digital sound package control unit, Fuse holder C	550
8. Control unit for electronic steering column lock, Interface for entry and start system, Control unit 2 for break-in protection, Control unit 3 for break-in protection, Control unit 4 for break-in protection, Control unit 5 for break-in protection, Fuse holder C	551
9. Internet access control unit, Emergency call module control unit and communication unit, Dash panel insert, Telephone bracket, Transmission and reception stabilisation control unit, Fuse holder C	552
10. Rear lid handle, Lane change assist control unit, Rear lid power opening control unit, Fuse holder C. USB connection 1	553

11. All-wheel drive control unit, Lane change assist control unit 2, Front left seat belt, Front right seat belt, Fuse holder C, Passenger side exterior mirror	554
12. Operating and display unit for rear air conditioning system, Control unit 1 for information electronics, Fuse holder C, DC/AC converter with socket, 12 V - 230 V, USB charging socket 1	555
13. Alarm horn, Fresh air blower control unit, Adaptive cruise control unit, Steering column electronics control unit, Rear lid control unit, Control unit for cornering light and headlight range control, Fuse holder C	556
14. Selector mechanism, Vehicle interior temperature sensor, Data bus diagnostic interface, Remote control receiver for auxiliary heater, Fuse holder C, Selector lever position display	557
15. Centre switch module in dash panel, Operating unit for lighting, Rain and light sensor, Anti-theft alarm sensor, Fuse holder C, Front roof module	558
16. Parking brake button, Fuse holder C, 12 V socket, Diagnostic connection	559
17. Electronically controlled damping control unit, Display unit for front information display and operating unit control unit, Control unit for head-up display, Fuse holder C	560
18. Fuse holder C, 12 V socket 3	561
19. Parking aid control unit, Front camera for driver assist systems, Fuse holder C	562
20. Reversing light switch, Air quality sensor, Pressure sender for refrigerant circuit, Control unit for structure-borne sound, Fuse holder C, Automatic anti-dazzle interior mirror	563
21. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in positive wire, Fuse holder C, Rear window wiper motor, Rear window	564
22. Engine/motor control unit, Relay and fuse carrier 2	565
23. Driver seat adjustment control unit, Fuse carrier 1, Fuse carrier 2	566
24. Relay and fuse carrier C for special vehicles, Relay and fuse carrier E for special vehicles, Driver seat backrest fan, Front passenger seat backrest fan, Driver seat cushion fan, Front passenger seat cushion fan	567
070 - Fuses in engine compartment	568-595
1. Fuses in engine compartment	568
2. Power steering control unit, Fuse holder A, Fuse holder B	569
3. ABS control unit, Front left headlight, Front right headlight, Brake servo, Fuse holder B, Auxiliary hydraulic pump 1 for gearbox oil	570
4. Left horn, Right horn, Wiper motor control unit, Onboard supply control unit, Fuse holder B	571
5. Automatic gearbox control unit, Auxiliary heater control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	572
6. Fuse holder B, Auxiliary air heater element	573
7. Clutch position sender, Fuse holder B	574
8. Gas tank valve, Fuse holder B	575
9. Oil level and oil temperature sender, Axle differential lock control unit, Fuse holder B, Radiator fan	576
10. Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Piston cooling jet control valve, Glow plug 3, Fuse holder B	577
11. Camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve, Inlet camshaft control valve 1, Fuse holder B	578
12. Turbocharger air recirculation valve, Intake manifold flap valve, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Fuse holder B	579
13. Fuel pressure regulating valve, Glow plug 1, Fuse holder B, Charge air cooling pump, Auxiliary pump for heating	580
14. Gas injection valve 1, Gas injection valve 2, Gas injection valve 3, Gas injection valve 4, Glow plug 2, Fuse holder B, Coolant circulation pump	581
15. Heater element for crankcase breather, Actuator for engine temperature regulation, Coolant regulating valve, Fuse holder B	582
16. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Glow plug 4, Fuse holder B	583
17. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Fuse holder B	584
18. Cam adjustment actuator 8, Coolant valve for gearbox, Fuse holder B	585
19. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Control unit for NOx sender, Control unit 2 for NOx sender, Fuse holder B	586
20. Control unit 3 for NOx sender, Particulate sensor, Fuel pump control unit, Fuse holder B	587
21. Heater and air conditioning system control unit, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2	588
22. Fuel tank shut-off valve 3	589
23. Fuse holder C, Relay and fuse carrier 2	590
24. Relay and fuse carrier 1	591
25. Batterv. Voltage converter (48 V/12 V). Starter. Alternator with voltage regulator. Batterv	592

monitor control unit, Fuse carrier 4, Relay and fuse carrier J for special vehicles	
26. Battery, 48 V, Voltage converter (48 V/12 V), Starter-alternator, Engine/motor control unit, Fuse for voltage converter	593
27. Engine/motor control unit	594
28. Engine/motor control unit	595
071 - Data bus diagnostic interface and diagnostic connector	596-598
1. Data bus diagnostic interface and diagnostic connector	596
2. Airbag control unit, Data bus diagnostic interface, Fuse holder C, Diagnostic connection	597
3. Data bus diagnostic interface, Diagnostic connection	598
073 - Data bus network for powertrain CAN bus	599-600
1. Data bus network for powertrain CAN bus	599
2. Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 3 for NOx sender, Particulate sensor, Airbag control unit, Data bus diagnostic interface, Engine/motor control unit	600
074 - Data bus network for running gear CAN bus	601-604
1. Data bus network for running gear CAN bus	601
2. Electronically controlled damping control unit, All-wheel drive control unit, Data bus diagnostic interface, Torque vectoring control unit 1, Torque vectoring control unit 2	602
3. ABS control unit, Parking aid control unit, Brake servo	603
4. Power steering control unit, Axle differential lock control unit	604
075 - Data bus network for extended CAN bus	605-606
1. Data bus network for extended CAN bus	605
2. Control unit for cornering light and headlight range control, Front left headlight, Front right headlight	606
076 - Data bus network for convenience CAN bus	607-611
1. Data bus network for convenience CAN bus	607
2. Sliding sunroof adjustment control unit, Data bus diagnostic interface, Rear lid control unit, Driver seat adjustment control unit	608
3. Driver door control unit, Front passenger door control unit	609
4. Trailer detector control unit, Onboard supply control unit, Control unit for electronic steering column lock, Dash panel insert	610
5. Control unit for head-up display, Heater and air conditioning system control unit	611
077 - Data bus network for driver assist systems CAN bus	612-615
1. Data bus network for driver assist systems CAN bus	612
2. Adaptive cruise control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	613
3. Rear lid handle, Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2	614
4. Front left headlight, Front right headlight, Front camera for driver assist systems	615
078 - Data bus network for ethernet	616-618
1. Data bus network for ethernet	616
2. Rear lid handle, Data bus diagnostic interface, Internet access control unit, Control unit for head-up display, Emergency call module control unit and communication unit, Dash panel insert	617
3. Adaptive cruise control unit, Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, TV tuner, Front camera for driver assist systems	618
079 - Data bus network for communication CAN bus	619-623
1. Data bus network for communication CAN bus	619
2. Onboard supply control unit, Interface for entry and start system, Control unit 2 for break-in protection, Control unit 3 for break-in protection, Control unit 4 for break-in protection, Control unit 5 for break-in protection, Front left headlight, Front right headlight	620
3. Internet access control unit, Telephone bracket	621
4. Driver exterior door handle	622
5. Front passenger exterior door handle	623
080 - Data bus network for infotainment CAN bus	624-625
1. Data bus network for infotainment CAN bus	624
2. Auxiliary heater control unit, Digital sound package control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, TV tuner	625
081 - Special vehicle , (F6B),(F6E),(F6K)	626-652
1. Special vehicle , (F6B),(F6E),(F6K)	626
2. Fuse holder C, Relay and fuse carrier C for special vehicles, Relay and fuse carrier E for special vehicles	627
3. Onboard supply control unit, Data bus diagnostic interface, Relay and fuse carrier H for special vehicles, 12 V socket 4 for special vehicles	628
4. Relay and fuse carrier H for special vehicles	629
5. Relay and fuse carrier H for special vehicles	630
6. Voltage converter (48 V/12 V), Relay and fuse carrier J for special vehicles, Relay and fuse carrier K for special vehicles. Fuse carrier 4	631

7. Second battery, Special vehicle control unit, Battery monitor control unit 2, Relay and fuse carrier N for special vehicles	632
8. Special vehicle control unit	633
9. Button for tonal sequence standby, Special vehicle control unit, Coupling point for sun visor in special vehicle	634
10. Special vehicle control unit, 2-way radio unit microphone, Coupling point for two-way radio in special vehicle	635
11. Switch to trip alarm, Two-way radio loudspeaker volume control 1, Special vehicle control unit, Two-way radio loudspeaker, Two-way radio loudspeaker 3, Coupling point for two-way radio in special vehicle	636
12. Two-way radio button, Two-way radio loudspeaker volume control 2, Special vehicle control unit, Two-way radio loudspeaker 2, Two-way radio loudspeaker 4, Coupling point for two-way radio in special vehicle	637
13. Interior lighting central switch button, Hands-free system button, Ignition bypass button, Special vehicle control unit	638
14. Button for daytime running light switch-off, Main switch for 2-way radio, Special vehicle control unit	639
15. Special vehicle control unit, Coupling point for operating unit for special signals	640
16. Special vehicle control unit, Flashing light in windscreen for blue flashing light, Coupling point for interface control unit in special vehicle	641
17. Special vehicle control unit, Coupling point for front flashing lights in special vehicle, Coupling point for special signals siren, Charging station for torch, Charging station for hand-held 2-way radio	642
18. Special vehicle control unit, Charging station 2 for hand-held 2-way radio, Charging station 3	643
19. Rotating light and siren system control unit, Special vehicle control unit	644
20. Rotating light and siren system control unit, Coupling point 2 for operating unit for special signals, Coupling point for front left door	645
21. Socket for blue flashing light, Socket 2 for blue flashing light, Socket 3 for blue flashing light, Socket 4 for blue flashing light	646
22. Coupling point for front right door, Coupling point for accident data memory	647
23. Front stop command light, Rear stop command light, Diagnostic connection 2	648
24. Rear stop command light, Coupling point for spare wiring on special vehicles, Coupling point 3 for spare wiring on special vehicles	649
25. Coupling point for spare wiring on special vehicles, Coupling point 3 for spare wiring on special vehicles	650
26. Coupling point 2 for two-way radio in special vehicle, Coupling point in luggage compartment, centre, 12 V socket for special vehicles, 12 V socket 2 for special vehicles, 12 V socket 3 for special vehicles	651
27. 12 V socket 5 for special vehicles	652
082 - Data bus network for gearbox CAN bus	653-654
1. Data bus network for gearbox CAN bus	653
2. Selector mechanism, Automatic gearbox control unit, Mechatronic unit for dual clutch gearbox, Auxiliary hydraulic pump 1 for gearbox oil, Parking lock actuator	654
083 - Data bus network for hybrid CAN bus	655-657
1. Data bus network for hybrid CAN bus	655
2. Battery, 48 V, Voltage converter (48 V/12 V), Starter-alternator, Data bus diagnostic interface	656
3. Starter-alternator, Engine/motor control unit	657
084 - Bonnet contact switch	658-659
1. Bonnet contact switch	658
2. Bonnet contact switch, Bonnet contact switch 2, Onboard supply control unit	659
085 - Seat ventilation , (4D3)	660-665
1. Seat ventilation , (4D3)	660
2. Onboard supply control unit, Fuse carrier 1	661
3. Fuse carrier 2	662
4. Driver seat backrest fan, Driver seat cushion fan	663
5. Front passenger seat backrest fan	664
6. Front passenger seat cushion fan	665
086 - Engine sound generator , DNFG,DTRD,DTSB	666-667
1. Engine sound generator , DNFG,DTRD,DTSB	666
2. Engine/motor control unit, Control unit for structure-borne sound, Actuator for structure-borne sound, Fuse holder C	667
087 - 8-speed automatic gearbox 09S , (0IH)	668-674
1. 8-speed automatic gearbox 09S , (0IH)	668
2. Automatic gearbox control unit, Gearbox, Fuse holder B, Fuse holder C	669
3. Automatic gearbox control unit, Gearbox	670
4. Automatic gearbox control unit. Gearbox	671



5. Automatic gearbox control unit, Engine/motor control unit, Gearbox	672
6. Automatic gearbox control unit, Data bus diagnostic interface, Parking lock actuator	673
7. Selector mechanism, Onboard supply control unit, Interface for entry and start system, Selector lever position display	674
088 - Preparation for driving aids for disabled persons , (F6M)	675-680
1. Preparation for driving aids for disabled persons , (F6M)	675
2. Fuse holder C, Relay and fuse carrier C for special vehicles, Relay and fuse carrier E for special vehicles, Coupling point for wheelchair lift	676
3. Onboard supply control unit, Data bus diagnostic interface, Special vehicle control unit	677
4. Button for driving aids for disabled persons, Special vehicle control unit, Coupling point for operating unit for driving aids for disabled persons	678
5. Special vehicle control unit, Coupling point for operating unit for driving aids for disabled persons, Diagnostic connection 2	679
6. Special vehicle control unit, Control unit for operating unit for driving aids for disabled persons	680
089 - 2.0l petrol engine , DNFG	681-705
1. 2.0l petrol engine , DNFG	681
2. Fuse holder B	682
3. Fuse holder B	683
4. Fuse holder B, Fuse holder C	684
5. Engine/motor control unit	685
6. Dual exhaust gas temperature sensor 1, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	686
7. Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Radiator fan	687
8. Accelerator pedal module, Engine/motor control unit, Brake servo	688
9. Lambda probe 1 after catalytic converter, Data bus diagnostic interface, Engine/motor control unit	689
10. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Control unit for structure-borne sound	690
11. Charge pressure sender, Fuel pump control unit, Engine/motor control unit	691
12. Engine/motor control unit	692
13. Oil pressure switch, Cam adjustment actuator 1, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Hall sender 3, Engine/motor control unit	693
14. Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit	694
15. Engine speed sender, Knock sensor 1, Coolant temperature sender, Pressure differential sender for particulate filter, Engine/motor control unit	695
16. Throttle valve module, Sender 1 for turbocharger speed, Engine/motor control unit	696
17. Lambda probe 1 before catalytic converter, Charge pressure control module, Engine/motor control unit	697
18. Intake manifold sender, Engine/motor control unit, Actuator for engine temperature regulation	698
19. Oil level and oil temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve	699
20. Engine/motor control unit, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1	700
21. Hall sender, Fuel pressure sender, Engine/motor control unit, Valve for oil pressure control, Piston cooling jet control valve	701
22. Intake manifold flap potentiometer, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	702
23. Engine/motor control unit, Injector, cylinder 4, Coolant valve for gearbox, Coolant circulation pump	703
24. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	704
25. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug 4	705
090 - Fuel system , DNFG	706-709
1. Fuel system , DNFG	706
2. Fuel pump control unit, Engine/motor control unit, Fuse holder B	707
3. Fuel delivery unit, Fuel pump control unit	708
4. Tank flap release, Fuel delivery unit, Onboard supply control unit, Dash panel insert	709
091 - Front differential lock , (1Y2)	710-712
1. Front differential lock , (1Y2)	710
2. Axle differential lock control unit, Fuse holder B	711
3. Onboard supply control unit, Data bus diagnostic interface	712
092 - USB charaina sockets . (U9E).(U9G)	713-716

1. USB charging sockets , (U9E),(U9G)	713
2. Onboard supply control unit, Control unit 1 for information electronics, Fuse holder C, USB charging socket 1	714
3. Control unit 1 for information electronics, USB connection 1	715
4.	716
093 - Heated rear window	717-719
1. Heated rear window	717
2. Onboard supply control unit, Fuse holder C	718
3. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	719
801 - - Fitting locations: Earth points - 3	720-736
1. Earth points	720-736
1.1 Earth points in front part of vehicle	722-728
1.1.1 Front from left	722
1.1.2 Front from right	723
1.1.3 1.0l petrol engine, DLAA, DLAB	724
1.1.4 1.4l petrol engine, DJKA	725
1.1.5 1.5l petrol engine, DFYA, DHFA, DPBA, DPCA	726
1.1.6 2.0l petrol engine, DNNA	727
1.1.7 2.0l petrol engine, DNFG	728
1.2 Earth points in middle part of vehicle	729-732
1.2.1 Front left of interior	730
1.2.2 Front right of interior	730
1.2.3 Front middle of interior	731
1.2.4 Steering wheel	732
1.3 Earth points in rear part of vehicle	733-736
1.3.1 Left luggage compartment	734
1.3.2 On right in luggage compartment, rear lid	734
1.3.3 Rear side, view from right	735-736
802 - -Fitting locations: Fuses - 3	737-803
1. Fuses	737-803
1.1 Fuse holder A -SA-, from July 2020	738-739
1.1.1 Fitting location of fuse holder A -SA-, from July 2020	738-739
1.1.2 Fuse assignment for fuse holder A -SA-, from July 2020	740
1.2 Fuse holder B -SB-, from July 2020	740-744
1.2.1 Fitting location of fuse holder B -SB-, from July 2020	740-741
1.2.2 Fuse assignment for fuse holder B -SB-, from July 2020	742-744
1.3 Fuse holder B -SB- , from November 2020	745-749
1.3.1 Fitting location of fuse holder B -SB-, from November 2020	745-746
1.3.2 Fuse assignment for fuse holder B -SB-, from November 2020	747-749
1.4 Fuse holder B -SB-, from July 2021	750-755
1.4.1 Fitting location of fuse holder B -SB-, from July 2021	750-751
1.4.2 Fuse assignment for fuse holder B -SB-, from July 2021	752-755
1.5 Fuse holder C -SC-, from July 2020	756-763
1.5.1 Fitting location of fuse holder C -SC- left-hand drive models, from July 2020	756-757
1.5.2 Fitting location of fuse holder C -SC- right-hand drive models, from July 2020	758-759
1.5.3 Fuse assignment for fuse holder C -SC-, from July 2020	760-763
1.6 Fuse holder C -SC-, from November 2020	764-771
1.6.1 Fitting location of fuse holder C -SC-, left-hand drive models, from November 2020	765
1.6.2 Fitting location of fuse holder C -SC-, right-hand drive models, from November 2020	766-767
1.6.3 Fuse assignment for fuse holder C -SC-, from November 2020	768-771
1.7 Fuse holder C -SC-, from July 2021	772-779
1.7.1 Fitting location of fuse holder C -SC- left-hand drive models, from July 2021	773
1.7.2 Fitting location of fuse holder C -SC- right-hand drive models, from July 2021	774-775
1.7.3 Fuse assignment for fuse holder C -SC-, from July 2021	776-779
1.8 Relay and fuse carrier 1 -SR1-, from July 2020	780-781
1.8.1 Fitting location of relay and fuse carrier 1 -SR1-, from July 2020	781
1.8.2 Fuse assignment for relay and fuse carrier 1 -SR1-, from July 2020	782
1.9 Single fuses, from July 2020	782-785
1.9.1 Fitting location of individual fuses, left-hand drive models, from July 2020	782-783
1.9.2 Fitting location of individual fuses, right-hand drive models, from July 2020	784
1.9.3 Fuse assignment for individual fuses, left-hand drive models, from July 2020	785
1.9.4 Fuse assignment for individual fuses, right-hand drive models, from July 2020	785
1.10 Single fuses, from February 2021	786-788
1.10.1 Fitting location of single fuses, left-hand drive models, from February 2021	786
1.10.2 Fuse assignment of single fuses. left-hand drive models. from Februarv 2021	787-788

1.11 Single fuses, from July 2021	789-791
1.11.1 Fitting location of individual fuses, left-hand drive models, from July 2021	789
1.11.2 Fuse assignment for individual fuses, left-hand drive models, from July 2021	790-791
1.12 Fuse carrier 4 -ST4-, from July 2020	792-795
1.12.1 Fitting location of fuse carrier 4 -ST4-, for models with no 48 V hybrid system, from July 2020	792-793
1.12.2 Fitting location of fuse carrier 4 -ST4-, for models with 48 V hybrid system, from July 2020	794
1.12.3 Fuse assignment for fuse carrier 4 -ST4-, for models with no 48 V hybrid system, from July 2020	795
1.12.4 Fuse assignment for fuse carrier 4 -ST4-, for models with 48 V hybrid system, from July 2020	796
1.13 Fuse for voltage converter -S412-, from July 2020, for models with 48 V hybrid system	796-797
1.13.1 Fitting location of fuse for voltage converter -S412-, for models with 48 V hybrid system, from July 2020	796
1.13.2 Fuse assignment for fuse for voltage converter -S412-, for models with 48 V hybrid system, from July 2020	797
1.14 Relay and fuse carrier H for special vehicles -SRSH-, from February 2021	798-800
1.14.1 Fitting location, relay and fuse carrier H for special vehicles -SRSH-, from February 2021	798-799
1.14.2 Fuse assignment, relay and fuse carrier H for special vehicles -SRSH-, from February 2021	800
1.15 Relay and fuse carrier N for special vehicles -SRSN-, from February 2021	801-803
1.15.1 Fitting location, relay and fuse carrier N for special vehicles -SRSN-, from February 2021	802
1.15.2 Fuse assignment, relay and fuse carrier N for special vehicles -SRSN-, from February 2021	803
803 - - Fitting locations: Relays - 3	804-817
1. Relays	804-817
1.1 Relays on fuse holder B -SB-, from July 2020	805
1.1.1 Relays on fuse holder B -SB-, from July 2020	805
1.2 Relays on fuse holder B -SB-, from November 2020	806
1.2.1 Relays on fuse holder B -SB-, from November 2020	806
1.3 Relays on fuse holder C -SC-, from July 2020	807-809
1.3.1 Relays on fuse holder C -SC-, left-hand drive models, from July 2020	808
1.3.2 Relays on fuse holder C -SC-, right-hand drive models, from July 2020	809
1.4 Relays on relay and fuse carrier 1 -SR1-, from July 2020	810
1.4.1 Relays on relay and fuse carrier 1 -SR1-, from July 2020	810
1.5 Relays on relay and fuse carrier 2 -SR2-, from July 2020	811-813
1.5.1 Relays on relay and fuse carrier 2 -SR2-, left-hand drive models, from July 2020	811-812
1.5.2 Relays on relay and fuse carrier 2 -SR2-, right-hand drive models, from July 2020	813
1.6 Relays on relay and fuse carrier J for special vehicles -SRSJ-, from February 2021	814
1.6.1 Relays on relay and fuse carrier J for special vehicles -SRSJ-, from February 2021	814
1.7 Relays on relay and fuse carrier K for special vehicles -SRSK-, from February 2021	815-817
1.7.1 Relays on relay and fuse carrier K for special vehicles -SRSK-, from February 2021	816-817
804 - - Fitting locations: front part of vehicle - 3	818-869
1. Fitting location: front part of vehicle	818-869
1.1 Front, view from front	832
1.2 Front, view from left	833-835
1.3 Front, view from right	836-837
1.4 1.0l petrol engine, DLAA, DLAB	838-840
1.4.1 1.0l petrol engine, DLAA, DLAB, from front	838
1.4.2 1.0l petrol engine, DLAA, DLAB, from above	839
1.4.3 1.0l petrol engine, DLAA, DLAB, from rear	840
1.5 1.4l petrol engine, DJKA	841-843
1.5.1 1.4l petrol engine, DJKA, from front	842
1.5.2 1.4l petrol engine, DJKA, from above	842
1.5.3 1.4l petrol engine, DJKA, from rear	843
1.6 1.5l petrol engine, DFYA, DHFA, DPBA, DPCA	844-850
1.6.1 1.5l petrol engine, DFYA, DPBA, DPCA, from front	845
1.6.2 1.5l petrol engine, DHFA, from front	846
1.6.3 1.5l petrol engine, DFYA, DPBA, DPCA, from above	847
1.6.4 1.5l petrol engine, DHFA, from above	848
1.6.5 1.5l petrol engine, DFYA, DHFA, DPBA, DPCA, from right	849
1.6.6 1.5l petrol engine, DFYA, DHFA, DPBA, DPCA, from rear	849-850
1.7 2.0l petrol engine, DNNA	851-855
1.7.1 2.0l petrol engine, DNNA, from front	851
1.7.2 2.0l petrol engine, DNNA, from above	852
1.7.3 2.0l petrol engine, DNNA, from right	853
1.7.4 2.0l petrol engine, DNNA, from rear	854-855
1.8 2.0l petrol engine, DNFG	856-861
1.8.1 2.0l petrol engine. DNFG. from front	856-857

1.8.2 2.0l petrol engine, DNFG, from above	858
1.8.3 2.0l petrol engine, DNFG, from left	859
1.8.4 2.0l petrol engine, DNFG, from right	860
1.8.5 2.0l petrol engine, DNFG, from rear	861
1.9 2.0l diesel engine, DSRB, DTRB, DTRD, DTSA, DTSB, DTUA, DTTC	862-864
1.9.1 2.0l diesel engine, DSRB, DTRB, DTRD, DTSA, DTSB, DTUA, DTTC, from front	862
1.9.2 2.0l diesel engine, DSRB, DTRB, DTRD, DTSA, DTSB, DTUA, DTTC, from above	863
1.9.3 2.0l diesel engine, DSRB, DTRB, DTRD, DTSA, DTSB, DTUA, DTTC, from rear	864
1.10 Manual gearbox	865
1.10.1 Manual gearbox, 0AH, 0AJ, 0C9	865
1.11 Dual clutch gearbox	866-867
1.11.1 Dual clutch gearbox, 0CW	867
1.11.2 Dual clutch gearbox, 0GC	867
1.12 Automatic gearbox	868-869
1.12.1 Automatic gearbox, 09S	868-869
805 - - Fitting locations: middle part of vehicle - 3	870-926
1. Fitting locations: middle part of vehicle	870-926
1.1 At front of interior	886-905
1.1.1 Front left of interior, LHD models	887
1.1.2 Front left of interior, RHD models	888-889
1.1.3 Left footwell, LHD models	890
1.1.4 Right footwell, RHD models	891
1.1.5 Front right of interior, LHD models	892-893
1.1.6 Front right of interior, RHD models	894
1.1.7 Dash panel, LHD models	895
1.1.8 Dash panel, RHD models	896
1.1.9 Steering wheel	897
1.1.10 Steering column	897-898
1.1.11 Centre console, LHD models	899-900
1.1.12 Centre console, RHD models	901
1.1.13 Driver seat, left-hand drive models	902
1.1.14 Driver seat, RHD models	903
1.1.15 Front passenger seat, left-hand drive models	904
1.1.16 Front passenger seat, right-hand drive models	905
1.2 Rear interior	906-910
1.2.1 Rear interior, view from left	907
1.2.2 Rear interior, view from left, for models with natural gas drive system	908
1.2.3 Rear interior, view from right	909-910
1.3 Roof	911-914
1.3.1 Roof, part 1	911-912
1.3.2 Roof, part 2, without sliding/tilting sunroof	913
1.3.3 Roof, part 2, with sliding/tilting sunroof	914
1.4 Doors	915-920
1.4.1 Driver door, left-hand drive models	915-916
1.4.2 Driver door, right-hand drive models	917
1.4.3 Front passenger door, left-hand drive models	918
1.4.4 Front passenger door, right-hand drive models	919
1.4.5 Rear left door	920
1.4.6 Rear right door	920
1.5 Heater and air conditioning unit	921-923
1.5.1 Climatronic, KC0, KH7, part 1	922
1.5.2 Climatronic, KC0, KH7, part 2	923
1.6 Connector assignments	924-926
1.6.1 Onboard supply control unit -J519-	924
1.6.2 Data bus diagnostic interface -J533-	925-926
806 - - Fitting locations: rear part of vehicle - 3	927-933
1. Fitting locations: rear part of vehicle	927-933
1.1 Rear lid	929-930
1.2 Rear bumper	931
1.3 Rear side, view from left	931
1.4 Rear side, view from right	932-933
807 - -Fitting locations: vehicle underbody - 3	934-938
1. Fitting locations: vehicle underbody	934-938
1.1 Underbody	935
1.2 Underbody, for models with diesel engine	936
1.3 Underbody, for models with natural gas drive	937

1.4 Underbody, for models with petrol engine	938
808 - -Fitting locations: special vehicles - 2	939-951
1. Fitting locations: special vehicles	939-951
1.1 Special equipment for driving aids for disabled persons	941-943
1.1.1 Front left of interior	941
1.1.2 Rear side, view from right	942-943
1.2 Special equipment for fire service, police, criminal investigation department, 2-way radio, special signal system, accident data memory	944-951
1.2.1 Front, view from left	944
1.2.2 Front left of interior	945
1.2.3 Front right of interior	946
1.2.4 Centre console	947
1.2.5 Rear side, view from left	948
1.2.6 Rear side, view from right	949
1.2.7 Front of roof	950-951
830 - -Connector views: parts with prefix A to D - 3	952-961
1. -Connector views: parts with prefix A to D	952-961
1.1 Battery, 48 V -A6-	952-954
1.1.1 1-pin connector -T1yc-	952
1.1.2 1-pin connector -T1wy-	953
1.1.3 1-pin connector -T1vh-	953
1.1.4 8-pin connector -T8au-	954
1.2 Voltage converter (48 V/12V) -A7-	955-956
1.2.1 1-pin connector -T1yv-	955
1.2.2 3-pin connector -T3dh-	956
1.2.3 10-pin connector -T10bk-	956
1.3 Starter -B-	957
1.3.1 1-pin connector -T1vp-	957
1.4 Starter-alternator -C29-	958
1.4.1 6-pin connector -T6af-	958
1.5 Alternator with voltage regulator -CX1-	959-961
1.5.1 1-pin connector -T1xe-	959
1.5.2 2-pin connector -T2ax-	960-961
831 - -Connector views: parts with prefix E - 3	962-1011
1. -Connector views: parts with prefix E	962-1011
1.1 Driver side belt switch -E24-	963
1.1.1 2-pin connector -T2az-	963
1.2 Front passenger side belt switch -E25-	964
1.2.1 2-pin connector -T2bb-	964
1.3 Glove compartment light switch -E26-	965
1.3.1 3-pin connector -T3ag-	965
1.4 Two-way radio button -E76-	966
1.4.1 6-pin connector -T6dy-	966
1.5 Driver seat lumbar support adjustment switch -E176-	967-968
1.5.1 6-pin connector -T6an-	967
1.5.2 6-pin connector -T6ao-	968
1.6 Key operated switch to deactivate airbag on front passenger side -E224-	969
1.6.1 6-pin connector -T6ag-	969
1.7 Rear lid remote release button -E233-	969
1.7.1 4-pin connector -T4an-	969
1.8 Switch to trip alarm -E247-	970
1.8.1 2-pin connector -T2ug-	970
1.9 Rear belt switch, driver side -E258-	971
1.9.1 2-pin connector -T2bc-	971
1.10 Rear belt switch, passenger side -E259-	972
1.10.1 2-pin connector -T2bd-	972
1.11 Operating and display unit for rear air conditioning system -E265-	973-974
1.11.1 4-pin connector -T4dv-	973
1.11.2 6-pin connector -T6ah-	974
1.12 Starter button -E378-	975
1.12.1 6-pin connector -T6ai-	975
1.13 Interior lighting central switch button -E390-	975
1.13.1 6-pin connector -T6du-	975
1.14 Multifunction buttons on right in steering wheel -E441-	976
1.14.1 6-pin connector -T6co-	976
1.15 Driver operating unit for memory settings -E464-	977-978

1.15.1 6-pin connector -T6au-	977
1.15.2 6-pin connector -T6av-	978
1.16 Electric hinged tow coupling attachment button -E474-	979
1.16.1 4-pin connector -T4ar-	979
1.17 Hands-free system button -E487-	979
1.17.1 6-pin connector -T6dv-	979
1.18 Ignition bypass button -E489-	980
1.18.1 6-pin connector -T6dw-	980
1.19 1-way radio loudspeaker volume control 2 -E502-	981
1.19.1 4-pin connector -T4ka-	981
1.20 2-way radio loudspeaker volume control 2 -E503-	982
1.20.1 4-pin connector -T4kb-	982
1.21 Rear lid closure button -E574-	983
1.21.1 4-pin connector -T4aw-	983
1.22 Central locking button -E600-	984
1.22.1 4-pin connector -T4ax-	984
1.23 Button for tonal sequence standby -E644-	985
1.23.1 2-pin connector -T2tx-	985
1.24 Button for daytime running light switch-off -E652-	986
1.24.1 6-pin connector -T6dx-	986
1.25 Rear driver side window regulator button -E711-	987
1.25.1 4-pin connector -T4au-	987
1.26 Rear passenger side window regulator button -E713-	988
1.26.1 4-pin connector -T4av-	988
1.27 Front passenger side window regulator button -E716-	989
1.27.1 4-pin connector -T4en-	989
1.28 Button for driving aids for disabled persons -E767-	990
1.28.1 6-pin connector -T6do-	990
1.29 Main switch for 2-way radio -E793-	991
1.29.1 6-pin connector -T6dz-	991
1.30 Selector mechanism -EX2-	992
1.30.1 10-pin connector -T10bn-	992
1.31 Driver exterior door handle -EX6-	993-994
1.31.1 8-pin connector -T8p-	993
1.31.2 8-pin connector -T8q-	994
1.31.3 8-pin connector -T8r-	995
1.32 Front passenger exterior door handle -EX7-	995-997
1.32.1 8-pin connector -T8ba-	996
1.32.2 8-pin connector -T8bb-	996
1.32.3 8-pin connector -T8az-	997
1.32.4 8-pin connector -T8s-	998
1.33 Rear left exterior door handle -EX8-	998
1.33.1 8-pin connector -T8o-	998
1.34 Rear right exterior door handle -EX9-	999
1.34.1 8-pin connector -T8be-	999
1.35 Exterior mirror adjuster -EX11-	1000
1.35.1 6-pin connector -T6aw-	1000
1.36 Parking brake button -EX12-	1001
1.36.1 12-pin connector -T12d-	1001
1.37 Tank flap release -EX13-	1002
1.37.1 2-pin connector -T2bf-	1002
1.38 Centre switch module in dash panel -EX22-	1003-1004
1.38.1 4-pin connector -T4az-	1003-1004
1.39 Operating unit for front left seat adjustment -EX33-	1005
1.39.1 12-pin connector -T12e-	1005
1.40 Operating unit for front right seat adjustment -EX34-	1006
1.40.1 12-pin connector -T12f-	1006
1.41 Operating unit for window regulator in driver door -EX36-	1006
1.41.1 10-pin connector -T10bm-	1006
1.42 Rear lid handle -EX37-	1007-1008
1.42.1 2-pin connector -T2ay-	1007
1.42.2 8-pin connector -T8al-	1008
1.43 Operating unit for lighting -EX59-	1009-1011
1.43.1 4-pin connector -T4bb-	1009-1011
832 - -Connector views: parts with prefix F - 3	1012-1032
1. Connector views: parts with prefix F	1012-1032

1.1 Oil pressure switch -F1-	1012
1.1.1 Connector -T1vq-	1012
1.2 Reversing light switch -F4-	1013
1.2.1 Connector -T2bl-	1013
1.3 Oil pressure switch -F22-	1014
1.3.1 Connector -T1bcb-	1014
1.4 Driver vanity mirror contact switch -F147-	1015
1.4.1 Connector -T2bg-	1015
1.5 Front passenger vanity mirror contact switch -F148-	1016
1.5.1 Connector -T2bh-	1016
1.6 Bonnet contact switch -F266-	1017
1.6.1 Connector -T2bi-	1017
1.7 Bonnet contact switch 2 -F329-	1018
1.7.1 Connector -T2bk-	1018
1.8 Actuator 1 for camshaft adjustment -F366-	1019
1.8.1 Connector -T2sv-	1019
1.9 Actuator 2 for camshaft adjustment -F367-	1020
1.9.1 Connector -T2sw-	1020
1.10 Actuator 3 for camshaft adjustment -F368-	1021
1.10.1 Connector -T2sx-	1021
1.11 Actuator 4 for camshaft adjustment -F369-	1022
1.11.1 Connector -T2sy-	1022
1.12 Actuator 5 for camshaft adjustment -F370-	1023-1024
1.12.1 Connector -T2sz-	1023
1.12.2 Connector -T2sz-	1024
1.13 Actuator 6 for camshaft adjustment -F371-	1025
1.13.1 Connector -T2ta-	1025
1.14 Actuator 7 for camshaft adjustment -F372-	1025
1.14.1 Connector -T2tb-	1026
1.15 Actuator 8 for camshaft adjustment -F373-	1026
1.15.1 Connector -T2tc-	1026
1.16 Oil pressure switch for reduced oil pressure -F378-	1027-1028
1.16.1 Connector -T1vr-	1027
1.16.2 Connector -T1bch-	1028
1.17 Stage 2 oil pressure switch -F446-	1029
1.17.1 Connector -T2te-	1029
1.17.2 Connector -T2ul-	1029
1.18 Twin belt buckle -FX4-	1030-1032
1.18.1 Connector -T4ao-	1030
1.18.2 Connector -T4ap-	1031-1032
833 - -Connector views: parts with prefix G - 3	1033-1162
1. -Connector views: parts with prefix G	1033-1162
1.1 Oil pressure sender -G10-	1037
1.1.1 3-pin connector -T3ah-	1037
1.2 Ambient temperature sensor -G17-	1037
1.2.1 2-pin connector -T2bq-	1037
1.3 Engine speed sender -G28-	1038-1039
1.3.1 3-pin connector -T3ed-	1038
1.3.2 3-pin connector -T3be-	1039
1.4 Charge pressure sender -G31-	1040
1.4.1 3-pin connector -T3ea-	1040
1.5 Coolant shortage indicator sender -G32-	1040
1.5.1 2-pin connector -T2cf-	1040
1.6 Windscreen washer fluid level sender -G33-	1041
1.6.1 2-pin connector -T2cg-	1041
1.7 Front right brake pad wear sender -G35-	1042
1.7.1 2-pin connector -T2ck-	1042
1.8 Hall sender -G40-	1043-1044
1.8.1 3-pin connector -T3ei-	1043
1.8.2 3-pin connector -T3ev-	1044
1.8.3 3-pin connector -T3bh-	1045
1.9 Rear right speed sensor -G44-	1045
1.9.1 2-pin connector -T2co-	1045
1.10 Front right speed sensor -G45-	1046
1.10.1 2-pin connector -T2cq-	1046
1.11 Rear left speed sensor -G46-	1047

1.11.1 2-pin connector -T2cs-	1047
1.12 Front left speed sensor -G47-	1048
1.12.1 2-pin connector -T2ct-	1048
1.13 Knock sensor 1 -G61-	1049-1050
1.13.1 2-pin connector -T2td-	1049
1.13.2 2-pin connector -T2db-	1050
1.14 Coolant temperature sender -G62-	1051-1053
1.14.1 2-pin connector -T2su-	1051
1.14.2 2-pin connector -T2cc-	1052
1.14.3 2-pin connector -T2dd-	1052
1.14.4 2-pin connector -T2dc-	1053
1.15 Water separator sender -G63-	1054
1.15.1 3-pin connector -T3bp-	1054
1.16 Rear left vehicle level sender -G76-	1054
1.16.1 3-pin connector -T3ao-	1054
1.17 Front left vehicle level sender -G78-	1055
1.17.1 3-pin connector -T3au-	1055
1.18 Engine outlet coolant temperature sender -G82-	1056-1057
1.18.1 2-pin connector -T2df-	1056
1.18.2 2-pin connector -T2dl-	1057
1.19 Radiator outlet coolant temperature sender -G83-	1058
1.19.1 2-pin connector -T2dm-	1058
1.19.2 2-pin connector -T2dn-	1058
1.20 Sunlight penetration photosensor -G107-	1059
1.20.1 6-pin connector -T6ax-	1059
1.21 Seat occupied sensor on front passenger side -G128-	1060
1.21.1 2-pin connector -T2bp-	1060
1.22 Left vent temperature sender -G150-	1061
1.22.1 2-pin connector -T2cl-	1061
1.23 Right vent temperature sender -G151-	1062
1.23.1 2-pin connector -T2cm-	1062
1.24 Fuel gauge sender 2 -G169-	1063
1.24.1 3-pin connector -T3bf-	1063
1.25 Rear vent temperature sender -G174-	1064
1.25.1 2-pin connector -T2br-	1064
1.26 Rear seat occupied sensor on driver side -G177-	1065
1.26.1 2-pin connector -T2bs-	1065
1.27 Rear seat occupied sensor on passenger side -G178-	1066
1.27.1 2-pin connector -T2bt-	1066
1.28 Side airbag crash sensor on driver side -G179-	1067
1.28.1 2-pin connector -T2bu-	1067
1.29 Side airbag crash sensor on front passenger side -G180-	1068
1.29.1 2-pin connector -T2bw-	1068
1.30 Crash sensor for front airbag -G190-	1069
1.30.1 2-pin connector -T2dp-	1069
1.31 Footwell vent temperature sender -G192-	1070
1.31.1 2-pin connector -T2by-	1070
1.32 Rear left parking aid sender -G203-	1071
1.32.1 3-pin connector -T3aq-	1071
1.33 Rear centre left parking aid sender -G204-	1072
1.33.1 3-pin connector -T3ar-	1072
1.34 Rear centre right parking aid sender -G205-	1073
1.34.1 3-pin connector -T3as-	1073
1.35 Rear right parking aid sender -G206-	1074
1.35.1 3-pin connector -T3at-	1074
1.36 Exhaust gas temperature sender 1 -G235-	1075-1076
1.36.1 2-pin connector -T2bz-	1075
1.36.2 3-pin connector -T3av-	1076
1.37 Air quality sensor -G238-	1077
1.37.1 3-pin connector -T3aw-	1077
1.38 Fuel pressure sender -G247-	1077-1078
1.38.1 3-pin connector -T3eg-	1078
1.38.2 3-pin connector -T3ax-	1078
1.39 Front right parking aid sender -G252-	1079
1.39.1 3-pin connector -T3ay-	1079
1.40 Front centre right parking aid sender -G253-	1080



1.40.1 3-pin connector -T3az-	1080
1.41 Front centre left parking aid sender -G254-	1081
1.41.1 3-pin connector -T3ba-	1081
1.42 Front left parking aid sender -G255-	1082
1.42.1 3-pin connector -T3bb-	1082
1.43 Rear side airbag crash sensor on driver side -G256-	1083
1.43.1 2-pin connector -T2ca-	1083
1.44 Rear side airbag crash sensor on passenger side -G257-	1084
1.44.1 2-pin connector -T2cb-	1084
1.45 Oil level and oil temperature sender -G266-	1085-1086
1.45.1 3-pin connector -T3bc-	1085
1.45.2 3-pin connector -T3bd-	1086
1.45.3 3-pin connector -T3eb-	1087
1.46 Front right vehicle level sender -G289-	1087
1.46.1 3-pin connector -T3an-	1087
1.47 Hall sender 3 -G300-	1088-1089
1.47.1 3-pin connector -T3ef-	1088
1.47.2 3-pin connector -T3es-	1089
1.47.3 3-pin connector -T3ap-	1090
1.48 Evaporator temperature sensor -G308-	1090
1.48.1 2-pin connector -T2ce-	1090
1.49 Intake manifold flap potentiometer -G336-	1091
1.49.1 3-pin connector -T3eh-	1091
1.50 Front left body acceleration sender -G341-	1092
1.50.1 2-pin connector -T2ch-	1092
1.51 Front right body acceleration sender -G342-	1093
1.51.1 2-pin connector -T2ci-	1093
1.52 Rear body acceleration sender -G343-	1094
1.52.1 2-pin connector -T2cj-	1094
1.53 Rain and light sensor -G397-	1095
1.53.1 3-pin connector -T3bx-	1095
1.54 Tank pressure sensor -G400-	1096
1.54.1 3-pin connector -T3am-	1096
1.55 Exhaust gas temperature sender 2 -G448-	1097
1.55.1 2-pin connector -T2cp-	1097
1.56 Exhaust gas pressure sensor 1 -G450-	1098
1.56.1 3-pin connector -T3bk-	1098
1.57 Toll collection sender -G459-	1099
1.57.1 2-pin connector -T2cr-	1099
1.58 Clutch position sender -G476-	1100
1.58.1 5-pin connector -T5h-	1100
1.59 Exhaust gas temperature sender 3 -G495-	1101
1.59.1 2-pin connector -T2cu-	1101
1.60 Pressure differential sender -G505-	1102
1.60.1 3-pin connector -T3bj-	1102
1.61 Front left sender for park assist steering on left side of vehicle -G568-	1103
1.61.1 3-pin connector -T3bl-	1103
1.62 Front right sender for park assist steering on right side of vehicle -G569-	1104
1.62.1 3-pin connector -T3bm-	1104
1.63 Driver side crash sensor for pedestrian protection -G570-	1105
1.63.1 2-pin connector -T2cy-	1105
1.64 Front passenger side crash sensor for pedestrian protection -G571-	1106
1.64.1 2-pin connector -T2cz-	1106
1.65 Anti-theft alarm sensor -G578-	1107
1.65.1 4-pin connector -T4bg-	1107
1.66 Front pressure hose sensor for pedestrian protection -G579-	1108-1109
1.66.1 2-pin connector -T2ii-	1108
1.66.2 2-pin connector -T2da-	1109
1.67 Trigger 1 for pedestrian protection -G598-	1110
1.67.1 3-pin connector -T3bn-	1110
1.68 Trigger 2 for pedestrian protection -G599-	1110
1.68.1 3-pin connector -T3bo-	1110
1.69 Exhaust gas temperature sender 4 -G648-	1111
1.69.1 2-pin connector -T2de-	1111
1.70 Sender 1 for turbocharger speed -G688-	1112
1.70.1 3-pin connector -T3eu-	1112

1.71 Temperature sensor 2 for exhaust recirculation -G690-	1113
1.71.1 2-pin connector -T2dh-	1113
1.72 Centre crash sensor for pedestrian protection -G693-	1114
1.72.1 2-pin connector -T2dj-	1114
1.73 Gearbox neutral position sender -G701-	1115
1.73.1 3-pin connector -T3bs-	1115
1.74 Rear left park assist steering sender -G716-	1116
1.74.1 3-pin connector -T3bu-	1116
1.75 Rear right park assist steering sender -G717-	1117
1.75.1 3-pin connector -T3bv-	1117
1.76 Particulate sensor -G784-	1118
1.76.1 4-pin connector -T4bh-	1118
1.77 Pressure sender for refrigerant circuit -G805-	1119
1.77.1 3-pin connector -T3bw-	1119
1.78 Charge air temperature sender before charge air cooler -G810-	1120
1.78.1 2-pin connector -T2cn-	1120
1.79 Charge air temperature sender after charge air cooler -G811-	1121
1.79.1 2-pin connector -T2dk-	1121
1.80 Front stop command light -G954-	1122
1.80.1 4-pin connector -T4jz-	1122
1.81 Rear stop command light -G955-	1123
1.81.1 4-pin connector -T4jt-	1123
1.82 Inlet camshaft position sender -G1002-	1124-1125
1.82.1 3-pin connector -T3ai-	1124
1.82.2 3-pin connector -T3aj-	1125
1.83 Exhaust camshaft position sender -G1003-	1126
1.83.1 3-pin connector -T3ak-	1126
1.84 Rear seat occupied sensor, centre -G1010-	1126
1.84.1 2-pin connector -T2bn-	1126
1.85 Pressure differential sender for particulate filter -G1037-	1127-1128
1.85.1 3-pin connector -T3ee-	1127
1.85.2 3-pin connector -T3et-	1128
1.86 Vehicle interior temperature sensor -G1090-	1129
1.86.1 4-pin connector -T4bd-	1129
1.87 Coolant temperature sender for charge air cooler -G1130-	1129
1.87.1 2-pin connector -T2bv-	1129
1.88 Fuel delivery unit -GX1-	1130-1133
1.88.1 2-pin connector -T2dq-	1130
1.88.2 3-pin connector -T3dd-	1131
1.88.3 4-pin connector -T4bl-	1132
1.88.4 4-pin connector -T4bm-	1132
1.88.5 5-pin connector -T5j-	1133
1.88.6 6-pin connector -T6ci-	1134
1.89 Accelerator pedal module -GX2-	1134
1.89.1 6-pin connector -T6az-	1134
1.90 Throttle valve module -GX3-	1135-1137
1.90.1 5-pin connector -T5m-	1135
1.90.2 6-pin connector -T6dk-	1136
1.90.3 6-pin connector -T6bb-	1137
1.90.4 6-pin connector -T6ba-	1137
1.91 Exhaust gas recirculation valve 1 -GX5-	1138
1.91.1 6-pin connector -T6bd-	1138
1.92 Exhaust gas recirculation valve 2 -GX6-	1139
1.92.1 5-pin connector -T5o-	1139
1.93 Lambda probe 1 after catalytic converter -GX7-	1140
1.93.1 4-pin connector -T4bq-	1140
1.94 Intake manifold sender -GX9-	1141-1142
1.94.1 3-pin connector -T3bt-	1141
1.94.2 4-pin connector -T4jo-	1142
1.94.3 4-pin connector -T4b-	1143
1.95 Lambda probe 1 before catalytic converter -GX10-	1143-1145
1.95.1 4-pin connector -T4bn-	1144
1.95.2 5-pin connector -T5k-	1144
1.95.3 6-pin connector -T6ay-	1145
1.96 Delivery unit for reducing agent metering system -GX19-	1146
1.96.1 4-pin connector -T4dw-	1146

1.96.2 5-pin connector -T5l-	1146
1.97 Temperature and pressure sender for low-pressure fuel system -GX20-	1147
1.97.1 4-pin connector -T4bf-	1147
1.98 Gas rail temperature and pressure sensor -GX21-	1148
1.98.1 4-pin connector -T4bo-	1148
1.99 Charge pressure sender -GX26-	1149-1150
1.99.1 3-pin connector -T3bg-	1149
1.99.2 4-pin connector -T4be-	1150
1.100 Control unit for NOx sender -GX30-	1151
1.100.1 5-pin connector -T5q-	1151
1.101 Engine temperature regulation module -GX33-	1151-1153
1.101.1 5-pin connector -T5bk-	1152
1.101.2 5-pin connector -T5t-	1152
1.101.3 5-pin connector -T5n-	1153
1.102 Charge pressure control module -GX34-	1154-1155
1.102.1 6-pin connector -T6dj-	1154
1.102.2 6-pin connector -T6bc-	1155
1.102.3 6-pin connector -T6ce-	1155
1.103 Air mass measurement module -GX35-	1156
1.103.1 3-pin connector -T3br-	1156
1.104 Dual exhaust gas temperature sensor 1 -GX41-	1157-1158
1.104.1 3-pin connector -T3bq-	1157
1.104.2 3-pin connector -T3bz-	1158
1.105 Pressure sensor for activated charcoal filter air flushing -GX44-	1159
1.105.1 4-pin connector -T4bi-	1159
1.105.2 4-pin connector -T4bp-	1159
1.106 Control unit 2 for NOx sender -GX46-	1160
1.106.1 5-pin connector -T5r-	1160
1.107 Control unit 3 for NOx sender -GX50-	1161-1162
1.107.1 5-pin connector -T5i-	1161-1162
834 - -Connector views: parts with prefix H to I - 3	1163-1167
1. Connector views: parts with prefix H to I	1163-1167
1.1 Anti-theft alarm system horn -H8-	1163
1.1.1 Connector -T2dv-	1163
1.2 Alarm horn -H12-	1164
1.2.1 Connector -T3ca-	1164
1.3 Rear lid warning buzzer -H32-	1164
1.3.1 Connector -T2ds-	1164
1.4 Left horn -H33-	1165
1.4.1 Connector -T2dt-	1165
1.5 Right horn -H34-	1166-1167
1.5.1 Connector -T2du-	1166-1167
835 - -Connector views: parts with prefix J - 3	1168-1267
1. Connector views: parts with prefix J	1168-1267
1.1 Rotating light and siren system control unit -J23-	1170
1.1.1 Connector -T12t-	1170
1.1.2 Connector -T32m-	1170
1.2 ABS control unit -J104-	1171
1.2.1 Connector -T46a-	1171
1.3 Fresh air blower control unit -J126-	1172
1.3.1 Connector -T4br-	1172
1.4 Automatic gearbox control unit -J217-	1173
1.4.1 Connector -T81a-	1173
1.5 Airbag control unit -J234-	1174
1.5.1 Connector -T140b-	1174
1.6 Sliding sunroof adjustment control unit -J245-	1175-1176
1.6.1 Connector -T16p-	1175
1.6.2 Connector -T4eo-	1176
1.6.3 Connector -T5an-	1177
1.7 Electronically controlled damping control unit -J250-	1177
1.7.1 Connector -T32c-	1177
1.8 Trailer detector control unit -J345-	1178-1180
1.8.1 Connector -T24a-	1178
1.8.2 Connector -T6cj-	1179
1.8.3 Connector -T10bx-	1180
1.8.4 Connector -T10bv-	1180

1.9 Auxiliary heater control unit -J364-	1181-1183
1.9.1 Connector -T2ij-	1181
1.9.2 Connector -T6bi-	1182
1.9.3 Connector -T2jz-	1183
1.9.4 Connector -T4em-	1183
1.10 Battery monitor control unit -J367-	1184
1.10.1 Connector -T2jg-	1184
1.11 Driver door control unit -J386-	1185-1187
1.11.1 Connector -T32k-	1185
1.11.2 Connector -T20i-	1186
1.11.3 Connector -T6bj-	1187
1.11.4 Connector -T16n-	1187
1.12 Front passenger door control unit -J387-	1188-1190
1.12.1 Connector -T6bk-	1188
1.12.2 Connector -T20n-	1189
1.12.3 Connector -T32l-	1190
1.12.4 Connector -T16o-	1190
1.13 Wiper motor control unit -J400-	1191
1.13.1 Connector -T4dj-	1191
1.14 Adaptive cruise control unit -J428-	1192
1.14.1 Connector -T8w-	1192
1.15 Parking aid control unit -J446-	1193-1194
1.15.1 Connector -T18b-	1193
1.15.2 Connector -T26g-	1194
1.16 Multifunction steering wheel control unit -J453-	1195
1.16.1 Connector -T6cn-	1195
1.16.2 Connector -T6cp-	1195
1.17 All-wheel drive control unit -J492-	1196
1.17.1 Connector -T6dl-	1196
1.18 Power steering control unit -J500-	1197-1198
1.18.1 Connector -T2dw-	1197
1.18.2 Connector -T3de-	1198
1.19 Onboard supply control unit -J519-	1199-1200
1.19.1 Connector -T73b-	1199
1.19.2 Connector -T73a-	1200
1.19.3 Connector -T46b-	1200
1.20 Digital sound package control unit -J525-	1201
1.20.1 Connector -T38a-	1201
1.21 Steering column electronics control unit -J527-	1202-1203
1.21.1 Connector -T16i-	1202
1.21.2 Connector -T14p-	1203
1.21.3 Connector -T12p-	1204
1.22 Data bus diagnostic interface -J533-	1204-1208
1.22.1 Connector -T32d-	1205
1.22.2 Connector -T2jo-	1205
1.22.3 Connector -T2jd-	1206
1.22.4 Connector -T2js-	1207
1.22.5 Connector -T2jp-	1207
1.22.6 Connector -T2jq-	1208
1.23 Fuel pump control unit -J538-	1209-1210
1.23.1 Connector -T5p-	1209
1.23.2 Connector -T6bl-	1210
1.23.3 Connector -T6bm-	1210
1.24 Rear lid control unit -J605-	1211-1212
1.24.1 Connector -T10br-	1211
1.24.2 Connector -T32j-	1212
1.25 Special vehicle control unit -J608-	1213-1215
1.25.1 Connector -T12q-	1213
1.25.2 Connector -T40b-	1214
1.25.3 Connector -T20o-	1214
1.25.4 Connector -T6dn-	1215
1.26 Engine/motor control unit -J623-	1216-1219
1.26.1 Connector -T60f-	1216
1.26.2 Connector -T94a-	1217
1.26.3 Connector -T60a-	1217
1.26.4 Connector -T105a-	1218

1.26.5 Connector -T91a-	1219
1.26.6 Connector -T105b-	1219
1.27 Axle differential lock control unit -J647-	1220
1.27.1 Connector -T6bo-	1220
1.28 Internet access control unit -J666-	1221-1222
1.28.1 Connector -T2je-	1221
1.28.2 Connector -T11a-	1222
1.29 Chip card reader control unit -J676-	1223-1224
1.29.1 Connector -T10bl-	1223
1.29.2 Connector -T5ad-	1224
1.29.3 Connector -T2jc-	1224
1.30 Display unit for front information display and operating unit control unit -J685-	1225-1226
1.30.1 Connector -T8x-	1225
1.30.2 Connector -T5ae-	1226
1.31 Mechatronic unit for dual clutch gearbox -J743-	1227
1.31.1 Connector -T25a-	1227
1.31.2 Connector -T16j-	1227
1.32 Control unit for cornering light and headlight range control -J745-	1228
1.32.1 Connector -T32e-	1228
1.33 Control unit for electronic steering column lock -J764-	1229
1.33.1 Connector -T4cn-	1229
1.34 Lane change assist control unit -J769-	1230
1.34.1 Connector -T8u-	1230
1.35 Lane change assist control unit 2 -J770-	1231
1.35.1 Connector -T8v-	1231
1.36 Control unit 1 for information electronics -J794-	1232-1240
1.36.1 Connector -T12l-	1233
1.36.2 Connector -T12n-	1233
1.36.3 Connector -T12m-	1234
1.36.4 Connector -T2ju-	1235
1.36.5 Connector -T5aj-	1235
1.36.6 Connector -T5ak-	1236
1.36.7 Connector -T2jt-	1237
1.36.8 Connector -T4ei-	1237
1.36.9 Connector -T2jv-	1238
1.36.10 Connector -T8av-	1239
1.36.11 Connector -T5al-	1239
1.36.12 Connector -T8y-	1240
1.37 Driver seat adjustment control unit -J810-	1241-1245
1.37.1 Connector -T4ee-	1241
1.37.2 Connector -T26b-	1242
1.37.3 Connector -T20l-	1242
1.37.4 Connector -T26f-	1243
1.37.5 Connector -T26e-	1244
1.37.6 Connector -T20k-	1244
1.37.7 Connector -T26a-	1245
1.37.8 Connector -T4ed-	1246
1.38 Control unit for structure-borne sound -J869-	1246
1.38.1 Connector -T6bq-	1246
1.39 Exhaust flap control unit -J883-	1247-1248
1.39.1 Connector -T5s-	1247
1.39.2 Connector -T5e-	1248
1.40 Control unit for reducing agent heater -J891-	1249
1.40.1 Connector -T4bs-	1249
1.40.2 Connector -T5af-	1249
1.41 Control unit for Head-up Display -J898-	1250
1.41.1 Connector -T10bs-	1250
1.42 Battery monitor control unit 2 -J934-	1251
1.42.1 Connector -T2tw-	1251
1.43 Rear lid power opening control unit -J938-	1252-1253
1.43.1 Connector -T4t-	1252
1.43.2 Connector -T4ej-	1253
1.44 Emergency call module control unit and communication unit -J949-	1254-1255
1.44.1 Connector -T36a-	1254
1.44.2 Connector -T2ix-	1255
1.44.3 Connector -T4ea-	1255

1.45 Interface for entry and start system -J965-	1256
1.45.1 Connector -T32f-	1256
1.46 Heater and air conditioning system control unit -J979-	1257-1259
1.46.1 Connector -T22a-	1257
1.46.2 Connector -T20h-	1258
1.46.3 Connector -T16k-	1259
1.46.4 Connector -T16l-	1259
1.47 Control unit for operating unit for driving aids for disabled persons -J1185-	1260
1.47.1 Connector -T18e-	1260
1.48 Control unit 2 for break-in protection -J1192-	1261
1.48.1 Connector -T6be-	1261
1.49 Control unit 3 for break-in protection -J1193-	1262
1.49.1 Connector -T6bf-	1262
1.50 Control unit 4 for break-in protection -J1194-	1263
1.50.1 Connector -T6bg-	1263
1.51 Control unit 5 for break-in protection -J1195-	1264
1.51.1 Connector -T6bh-	1264
1.52 Torque vectoring control unit 1 -J1257-	1265
1.52.1 Connector -T11b-	1265
1.53 Torque vectoring control unit 2 -J1258-	1266-1267
1.53.1 Connector -T11c-	1266-1267
836 - -Connector views: parts with prefix K to M - 3	1268-1300
1. Connector views: parts with prefix K to M	1268-1300
1.1 Central locking SAFELOCK function warning lamp -K133-	1269
1.1.1 Connector -T2dy-	1269
1.2 Dash panel insert -KX2-	1269
1.2.1 Connector -T18c-	1269
1.3 Left fog light bulb -L22-	1270
1.3.1 Connector -T2dz-	1270
1.4 Right fog light bulb -L23-	1271
1.4.1 Connector -T2ea-	1271
1.5 Rear left door storage compartment illumination bulb -L170-	1272
1.5.1 Connector -T4bz-	1272
1.6 Rear right door storage compartment illumination bulb -L171-	1273
1.6.1 Connector -T4ca-	1273
1.7 Light 1 for front centre console background lighting -L193-	1274
1.7.1 Connector -T4al-	1274
1.8 Light for cup holder background lighting -L232-	1275
1.8.1 Connector -T2eb-	1275
1.9 Light 1 for dash panel contour lighting -L243-	1276
1.9.1 Connector -T4cf-	1276
1.10 Light 2 for dash panel contour lighting -L244-	1277
1.10.1 Connector -T4cc-	1277
1.11 Light 3 for dash panel contour lighting -L245-	1278
1.11.1 Connector -T4ch-	1278
1.12 Light for front left door contour lighting -L251-	1279
1.12.1 Connector -T4bw-	1279
1.13 Light for front right door contour lighting -L252-	1280
1.13.1 Connector -T4cb-	1280
1.14 Light for rear left door contour lighting -L253-	1281
1.14.1 Connector -T4bx-	1281
1.15 Light for rear right door contour lighting -L254-	1282
1.15.1 Connector -T4by-	1282
1.16 Light for left door storage compartment illumination -L255-	1283
1.16.1 Connector -T4cd-	1283
1.17 Light for right door storage compartment illumination -L256-	1284
1.17.1 Connector -T4ce-	1284
1.18 Light conductor for contour lighting in radiator grille, front right -L362-	1285
1.18.1 Connector -T2ec-	1285
1.19 Light conductor for contour lighting in radiator grille, front left -L363-	1286
1.19.1 Connector -T2ed-	1286
1.20 High-level brake light bulb -M25-	1287
1.20.1 Connector -T2kn-	1287
1.21 Flashing light in windscreen for blue flashing light -M138-	1288
1.21.1 Connector -T2tu-	1288
1.22 Front left headlight -MX1-	1289

1.22.1 Connector -T14q-	1289
1.23 Front right headlight -MX2-	1290
1.23.1 Connector -T14r-	1290
1.24 Left tail light cluster -MX3-	1291-1292
1.24.1 Connector -T4ci-	1291
1.24.2 Connector -T8z-	1292
1.25 Right tail light cluster -MX4-	1293
1.25.1 Connector -T4cj-	1293
1.25.2 Connector -T8aa-	1293
1.26 Left tail light cluster 2 -MX5-	1294-1296
1.26.1 Connector -T8ab-	1294
1.26.2 Connector -T8ae-	1295
1.26.3 Connector -T8ac-	1296
1.26.4 Connector -T8ad-	1296
1.27 Right tail light cluster 2 -MX6-	1297-1300
1.27.1 Connector -T8af-	1297
1.27.2 Connector -T8ai-	1298
1.27.3 Connector -T8ag-	1299
1.27.4 Connector -T8ah-	1299-1300
837 - -Connector views: parts with prefix N - 3	1301-1375
1. Connector views: parts with prefix N	1301-1375
1.1 Injector, cylinder 1 -N30-	1303-1304
1.1.1 Connector -T2et-	1303
1.1.2 Connector -T2eu-	1303
1.1.3 Connector -T3ci-	1304
1.1.4 Connector -T2to-	1305
1.2 Injector, cylinder 2 -N31-	1305-1307
1.2.1 Connector -T2ev-	1306
1.2.2 Connector -T2ew-	1306
1.2.3 Connector -T3cj-	1307
1.2.4 Connector -T2tp-	1308
1.3 Injector, cylinder 3 -N32-	1308-1310
1.3.1 Connector -T2ez-	1309
1.3.2 Connector -T2fa-	1309
1.3.3 Connector -T3ck-	1310
1.3.4 Connector -T2tq-	1311
1.4 Injector, cylinder 4 -N33-	1311-1313
1.4.1 Connector -T2fc-	1312
1.4.2 Connector -T2fb-	1312
1.4.3 Connector -T3cl-	1313
1.4.4 Connector -T2tr-	1314
1.5 Ignition coil 1 with output stage -N70-	1314
1.5.1 Connector -T4co-	1314
1.6 Heater element for crankcase breather -N79-	1315
1.6.1 Connector -T2gc-	1315
1.7 Activated charcoal filter solenoid valve 1 -N80-	1316-1317
1.7.1 Connector -T2gd-	1316
1.7.2 Connector -T2ge-	1317
1.7.3 Connector -T2tk-	1318
1.8 Airbag igniter on driver side -N95-	1318
1.8.1 Connector -T2ka-	1318
1.9 Ignition coil 2 with output stage -N127-	1319
1.9.1 Connector -T4ck-	1319
1.10 Airbag igniter 1 on front passenger side -N131-	1320
1.10.1 Connector -T3cd-	1320
1.11 Rear belt tensioner igniter on driver side -N196-	1321
1.11.1 Connector -T2eh-	1321
1.12 Rear belt tensioner igniter on passenger side -N197-	1322
1.12.1 Connector -T2ei-	1322
1.13 Side airbag igniter on driver side -N199-	1323
1.13.1 Connector -T3cf-	1323
1.14 Side airbag igniter on front passenger side -N200-	1324
1.14.1 Connector -T3dn-	1324
1.15 Rear side airbag igniter on driver side -N201-	1325
1.15.1 Connector -T3cg-	1325
1.16 Rear side airbaa igniter on passenaer side -N202-	1326-1327

1.16.1 Connector -T3ch-	1326
1.16.2 Connector -T3r-	1327
1.17 Camshaft control valve 1 -N205-	1328
1.17.1 Connector -T2ej-	1328
1.17.2 Connector -T2th-	1328
1.18 Turbocharger air recirculation valve -N249-	1329
1.18.1 Connector -T2tg-	1329
1.19 Driver side curtain airbag igniter -N251-	1330
1.19.1 Connector -T2ek-	1330
1.20 Front passenger side curtain airbag igniter -N252-	1331
1.20.1 Connector -T2em-	1331
1.21 Fuel pressure regulating valve -N276-	1332-1333
1.21.1 Connector -T2f-	1332
1.21.2 Connector -T2eo-	1333
1.22 Fuel metering valve -N290-	1334-1335
1.22.1 Connector -T2es-	1334
1.22.2 Connector -T2er-	1335
1.22.3 Connector -T2tf-	1335
1.23 Ignition coil 3 with output stage -N291-	1336
1.23.1 Connector -T4cl-	1336
1.24 Ignition coil 4 with output stage -N292-	1337
1.24.1 Connector -T4cm-	1337
1.25 Intake manifold flap valve -N316-	1338
1.25.1 Connector -T2tl-	1338
1.26 Exhaust camshaft control valve 1 -N318-	1339-1340
1.26.1 Connector -T2ey-	1339
1.26.2 Connector -T2ex-	1340
1.26.3 Connector -T2ti-	1341
1.27 Front left shock absorber damping adjustment valve -N336-	1341
1.27.1 Connector -T2fd-	1341
1.28 Front right shock absorber damping adjustment valve -N337-	1342
1.28.1 Connector -T2fe-	1342
1.29 Rear left shock absorber damping adjustment valve -N338-	1343
1.29.1 Connector -T2ff-	1343
1.30 Rear right shock absorber damping adjustment valve -N339-	1344
1.30.1 Connector -T2fg-	1344
1.31 Fuel tank shut-off valve 1 -N361-	1345
1.31.1 Connector -T2fh-	1345
1.32 Fuel tank shut-off valve 2 -N362-	1346
1.32.1 Connector -T2fi-	1346
1.33 Fuel tank shut-off valve 3 -N363-	1347
1.33.1 Connector -T2jw-	1347
1.34 Gas injection valve 1 -N366-	1348
1.34.1 Connector -T2fj-	1348
1.35 Gas injection valve 2 -N367-	1349
1.35.1 Connector -T2fk-	1349
1.36 Gas injection valve 3 -N368-	1350
1.36.1 Connector -T2fl-	1350
1.37 Gas injection valve 4 -N369-	1351
1.37.1 Connector -T2fm-	1351
1.38 Valve for oil pressure control -N428-	1352-1354
1.38.1 Connector -T2fo-	1352
1.38.2 Connector -T2fp-	1353
1.38.3 Connector -T2ac-	1354
1.38.4 Connector -T2tm-	1354
1.39 Injector for reducing agent -N474-	1355
1.39.1 Connector -T2fq-	1355
1.40 Coolant valve for gearbox -N488-	1356
1.40.1 Connector -T2tj-	1356
1.41 Actuator for engine temperature regulation -N493-	1357-1358
1.41.1 Connector -T2fs-	1357
1.41.2 Connector -T5bm-	1358
1.42 Gas tank valve -N495-	1359
1.42.1 Connector -T2ft-	1359
1.43 Coolant regulating valve -N515-	1359
1.43.1 Connector -T2fr-	1360



1.44 Piston cooling jet control valve -N522-	1360-1361
1.44.1 Connector -T2fw-	1360
1.44.2 Connector -T2fv-	1361
1.44.3 Connector -T2tn-	1362
1.45 Inlet cam actuator for cylinder 2 -N583-	1362
1.45.1 Connector -T3cm-	1362
1.46 Exhaust cam actuator for cylinder 2 -N587-	1363
1.46.1 Connector -T3cn-	1363
1.47 Inlet cam actuator for cylinder 3 -N591-	1364
1.47.1 Connector -T3co-	1364
1.48 Exhaust cam actuator for cylinder 3 -N595-	1365
1.48.1 Connector -T3cp-	1365
1.49 Inlet camshaft control valve 1 -N727-	1366-1367
1.49.1 Connector -T2fy-	1366
1.49.2 Connector -T2fz-	1367
1.50 Injector 2 for reducing agent -N758-	1368
1.50.1 Connector -T2gb-	1368
1.51 Gearbox -NX1-	1368-1369
1.51.1 Connector -T28b-	1369
1.51.2 Connector -T8as-	1369
1.52 Brake servo -NX6-	1370-1371
1.52.1 Connector -T26c-	1370
1.52.2 Connector -T2jl-	1371
1.52.3 Connector -T4dx-	1372
1.53 Front left seat belt -NX10-	1372-1373
1.53.1 Connector -T5ag-	1372
1.53.2 Connector -T2ef-	1373
1.54 Front right seat belt -NX11-	1374-1375
1.54.1 Connector -T2eg-	1374
1.54.2 Connector -T5ah-	1375
838 - -Connector views: parts with prefix O to Q - 3	1376-1379
1. Connector views: parts with prefix O to Q	1376-1379
1.1 Glow plug 1 -Q10-	1376
1.1.1 Connector -T1vv-	1376
1.2 Glow plug 2 -Q11-	1376
1.2.1 Connector -T1vw-	1377
1.3 Glow plug 4 -Q13-	1377
1.3.1 Connector -T1vx-	1377
1.4 Glow plug 3 -QX3-	1378-1379
1.4.1 Connector -T4cp-	1378-1379
839 - -Connector views: parts with prefix R - 3	1380-1434
1. Connector views: parts with prefix R	1380-1434
1.1 Aerial -R11-	1381-1382
1.1.1 Connector -T2iu-	1381
1.1.2 Connector -T2iq-	1382
1.1.3 Connector -T2ir-	1383
1.2 Rear left treble loudspeaker -R14-	1383
1.2.1 Connector -T2gk-	1383
1.3 Rear left bass loudspeaker -R15-	1384
1.3.1 Connector -T4cx-	1384
1.4 Rear right treble loudspeaker -R16-	1385
1.4.1 Connector -T2gl-	1385
1.5 Rear right bass loudspeaker -R17-	1386
1.5.1 Connector -T4cq-	1386
1.6 Front left treble loudspeaker -R20-	1387-1388
1.6.1 Connector -T2gp-	1387
1.6.2 Connector -T2go-	1388
1.7 Front left bass loudspeaker -R21-	1389
1.7.1 Connector -T4cr-	1389
1.7.2 Connector -T4cs-	1389
1.8 Front right treble loudspeaker -R22-	1390-1391
1.8.1 Connector -T2gv-	1390
1.8.2 Connector -T2gu-	1391
1.9 Front right bass loudspeaker -R23-	1392
1.9.1 Connector -T4cu-	1392
1.9.2 Connector -T4cv-	1392

1.10 Two-way radio loudspeaker -R25-	1393
1.10.1 Connector -T2ue-	1393
1.11 TV aerial 1 -R55-	1394
1.11.1 Connector -T4dy-	1394
1.12 TV aerial 2 -R56-	1395
1.12.1 Connector -T4dz-	1395
1.13 TV aerial 3 -R57-	1396
1.13.1 Connector -T2iw-	1396
1.14 Remote control receiver for auxiliary heater -R64-	1397-1398
1.14.1 Connector -T6bt-	1397
1.14.2 Connector -T2ip-	1398
1.15 TV tuner -R78-	1399-1400
1.15.1 Connector -T12j-	1399
1.15.2 Connector -T2iy-	1400
1.15.3 Connector -T4eh-	1400
1.16 Radio aerial 2 -R93-	1401-1402
1.16.1 Connector -T2it-	1401
1.16.2 Connector -T2is-	1402
1.17 Left aerial module -R108-	1403
1.17.1 Connector -T2gf-	1403
1.18 2-way radio unit microphone -R122-	1403
1.18.1 Connector -T2ud-	1404
1.19 Telephone bracket -R126-	1404-1406
1.19.1 Connector -T6k-	1404
1.19.2 Connector -T4v-	1405
1.19.3 Connector -T2aa-	1406
1.19.4 Connector -T6l-	1406
1.20 Luggage compartment aerial for entry and start system -R137-	1407
1.20.1 Connector -T2gi-	1407
1.21 Interior aerial 1 for entry and start system -R138-	1408
1.21.1 Connector -T2gj-	1408
1.22 Traffic data aerial -R173-	1409
1.22.1 Connector -T8aj-	1409
1.23 Amplitude modulation (AM) frequency filter -R177-	1410-1411
1.23.1 Connector -T2gm-	1410
1.23.2 Connector -T1yg-	1411
1.23.3 Connector -T1xg-	1412
1.24 Frequency modulation (FM) frequency filter in negative wire -R178-	1412
1.24.1 Connector -T1xh-	1412
1.25 Frequency modulation (FM) frequency filter in positive wire -R179-	1413
1.25.1 Connector -T1xi-	1413
1.26 Data transmission aerial -R180-	1414
1.26.1 Connector -T2gn-	1414
1.27 Digital radio aerial -R183-	1415
1.27.1 Connector -T4ea-	1415
1.28 Left aerial for entry and start authorisation -R200-	1416
1.28.1 Connector -T2gq-	1416
1.29 Right aerial for entry and start authorisation -R201-	1417
1.29.1 Connector -T2gr-	1417
1.30 Centre loudspeaker -R208-	1418
1.30.1 Connector -T2gs-	1418
1.31 Subwoofer -R211-	1419
1.31.1 Connector -T4ct-	1419
1.32 Actuator for structure-borne sound -R214-	1420
1.32.1 Connector -T2gt-	1420
1.33 Front camera for driver assist systems -R242-	1421
1.33.1 Connector -T12i-	1421
1.34 Two-way radio loudspeaker 2 -R261-	1422
1.34.1 Connector -T2uh-	1422
1.35 Two-way radio loudspeaker 3 -R262-	1423
1.35.1 Connector -T2uf-	1423
1.36 LTE aerial 2 -R306-	1424
1.36.1 Connector -T2hb-	1424
1.37 Transmission and reception stabilisation control unit -R308-	1425-1426
1.37.1 Connector -T2hc-	1425
1.37.2 Connector -T2iv-	1426

1.37.3 Connector -T4ef-	1427
1.38 Loudspeaker for emergency call module -R335-	1427
1.38.1 Connector -T2he-	1427
1.39 Two-way radio loudspeaker 4 -R369-	1428
1.39.1 Connector -T2ui-	1428
1.40 Rear left wide band loudspeaker -R385-	1429
1.40.1 Connector -T4jm-	1429
1.41 Rear right wide band loudspeaker -R386-	1430
1.41.1 Connector -T4jn-	1430
1.42 Roof aerial -RX5-	1431-1434
1.42.1 Connector -T2io-	1431
1.42.2 Connector -T2jm-	1432
1.42.3 Connector -T2gg-	1433
1.42.4 Connector -T2jn-	1433-1434
840 - -Connector views: parts with prefix S to U - 3	1435-1579
1. Connector views: parts with prefix S to U	1435-1579
1.1 Coupling point on left A-pillar for special vehicles -TASLSF-	1437-1438
1.1.1 Connector -T8bm-	1438
1.1.2 Connector -T8bn-	1438
1.2 Coupling point for operating unit for driving aids for disabled persons -TBEF-	1439
1.2.1 Connector -T12r-	1439
1.3 Coupling point for operating unit for special signals -TBESF-	1440
1.3.1 Connector -T8bk-	1440
1.4 Coupling point 2 for operating unit for special signals -TBESF2-	1441
1.4.1 Connector -T6ea-	1441
1.5 Coupling point for front flashing lights in special vehicle -TBLSFV-	1442
1.5.1 Connector -T2tv-	1442
1.6 Coupling point for two-way radio in special vehicle -TFGSF-	1443
1.6.1 Connector -T17ae-	1443
1.7 Coupling point 2 for two-way radio in special vehicle -TFGSF2-	1444
1.7.1 Connector -T2uj-	1444
1.8 Coupling point on rear left exterior door handle -TGHL-	1445-1446
1.8.1 Connector -T4ai-	1445
1.8.2 Connector -T4j-	1446
1.9 Coupling point on rear right exterior door handle -TGHR-	1447
1.9.1 Connector -T4aj-	1447
1.9.2 Connector -T4k-	1447
1.10 Coupling point on front left exterior door handle -TGVL-	1448-1449
1.10.1 Connector -T8a-	1448
1.10.2 Connector -T8e-	1449
1.11 Coupling point on front right exterior door handle -TGVR-	1450
1.11.1 Connector -T8f-	1450
1.11.2 Connector -T8g-	1450
1.12 Coupling point for roof -TH-	1451-1452
1.12.1 Connector -T16a-	1451
1.12.2 Connector -T16b-	1452
1.13 Coupling point for rear lid -THK-	1453-1456
1.13.1 Connector -T10an-	1453
1.13.2 Connector -T10al-	1454
1.13.3 Connector -T10ak-	1454
1.13.4 Connector -T10ao-	1455
1.13.5 Connector -T10am-	1456
1.13.6 Connector -T10ap-	1456
1.14 Coupling point on rear lid, centre -THKM-	1457-1458
1.14.1 Connector -T2u-	1457
1.14.2 Connector -T2km-	1458
1.15 Coupling point in luggage compartment, left -THRL-	1459-1465
1.15.1 Connector -T10at-	1459
1.15.2 Connector -T10aq-	1460
1.15.3 Connector -T6j-	1460
1.15.4 Connector -T6c-	1461
1.15.5 Connector -T2v-	1462
1.15.6 Connector -T2w-	1462
1.15.7 Connector -T4m-	1463
1.15.8 Connector -T4l-	1464
1.15.9 Connector -T6dm-	1464

1.15.10 Connector -T6f-	1465
1.16 Coupling point in luggage compartment, centre -THRM-	1466-1470
1.16.1 Connector -T3a-	1466
1.16.2 Connector -T3p-	1467
1.16.3 Connector -T4x-	1467
1.16.4 Connector -T4s-	1468
1.16.5 Connector -T4r-	1469
1.16.6 Connector -T4kc-	1469
1.16.7 Connector -T2uk-	1470
1.17 Coupling point in luggage compartment, right -THRR-	1471
1.17.1 Connector -T10ay-	1471
1.17.2 Connector -T10bf-	1471
1.18 Coupling point in rear left seat -TISHL-	1472-1473
1.18.1 Connector -T6o-	1472
1.18.2 Connector -T6ab-	1473
1.19 Coupling point in rear right seat -TISHR-	1474
1.19.1 Connector -T6w-	1474
1.19.2 Connector -T6n-	1474
1.20 Coupling point in front left seat -TISVL-	1475-1476
1.20.1 Connector -T10be-	1475
1.20.2 Connector -T10bd-	1476
1.21 Coupling point in front right seat -TISVR-	1477
1.21.1 Connector -T10ef-	1477
1.21.2 Connector -T10ee-	1477
1.22 Coupling point in interior, below left -TIUL-	1478-1490
1.22.1 Connector -T17d-	1479
1.22.2 Connector -T17k-	1479
1.22.3 Connector -T17b-	1480
1.22.4 Connector -T17g-	1481
1.22.5 Connector -T17j-	1481
1.22.6 Connector -T17r-	1482
1.22.7 Connector -T17h-	1483
1.22.8 Connector -T17q-	1483
1.22.9 Connector -T17c-	1484
1.22.10 Connector -T17i-	1485
1.22.11 Connector -T17n-	1485
1.22.12 Connector -T17f-	1486
1.22.13 Connector -T17m-	1487
1.22.14 Connector -T17e-	1487
1.22.15 Connector -T2ad-	1488
1.22.16 Connector -T2ae-	1489
1.22.17 Connector -T1bfs-	1489
1.22.18 Connector -T1bft-	1490
1.23 Coupling point in interior, below centre -TIUM-	1491-1493
1.23.1 Connector -T17v-	1491
1.23.2 Connector -T17y-	1492
1.23.3 Connector -T17u-	1492
1.23.4 Connector -T17x-	1493
1.24 Coupling point in interior, below right -TIUR-	1494-1496
1.24.1 Connector -T17s-	1494
1.24.2 Connector -T17l-	1495
1.24.3 Connector -T17w-	1495
1.24.4 Connector -T17t-	1496
1.24.5 Connector -T17p-	1497
1.25 Coupling point in engine compartment, left -TML-	1497-1512
1.25.1 Connector -T6r-	1498
1.25.2 Connector -T6s-	1499
1.25.3 Connector -T14j-	1500
1.25.4 Connector -T14l-	1500
1.25.5 Connector -T10az-	1501
1.25.6 Connector -T10ah-	1502
1.25.7 Connector -T14a-	1502
1.25.8 Connector -T14g-	1503
1.25.9 Connector -T4aa-	1504
1.25.10 Connector -T4ab-	1504
1.25.11 Connector -T8i-	1505

1.25.12 Connector -T8k-	1506
1.25.13 Connector -T8i-	1506
1.25.14 Connector -T8d-	1507
1.25.15 Connector -T14k-	1508
1.25.16 Connector -T5g-	1508
1.25.17 Connector -T5f-	1509
1.25.18 Connector -T4ac-	1510
1.25.19 Connector -T4z-	1510
1.25.20 Connector -T8bh-	1511
1.25.21 Connector -T14v-	1512
1.25.22 Connector -T14w-	1512
1.26 Coupling point 1 for engine prewiring harness, adapter wire -TMOAD1-	1513-1514
1.26.1 Connector -T8bo-	1513
1.26.2 Connector -T8bp-	1514
1.27 Coupling point 2 for engine prewiring harness, adapter wire -TMOAD2-	1515
1.27.1 Connector -T14x-	1515
1.27.2 Connector -T14y-	1515
1.28 Coupling point on engine, top left -TMOL-	1516-1517
1.28.1 Connector -T14t-	1516
1.28.2 Connector -T14u-	1517
1.29 Coupling point on engine, top centre -TMOM-	1518
1.29.1 Connector -T8bi-	1518
1.29.2 Connector -T8bj-	1518
1.30 Coupling point in engine compartment, right -TMR-	1519-1520
1.30.1 Connector -T4ak-	1519
1.30.2 Connector -T4ep-	1520
1.31 Coupling point for wheelchair lift -TRAZ-	1521
1.31.1 Connector -T3em-	1521
1.32 Coupling point for spare wiring on special vehicles -TRLSF-	1521
1.32.1 Connector -T12u-	1522
1.33 Coupling point 3 for spare wiring on special vehicles -TRLSF3-	1522
1.33.1 Connector -T12v-	1522
1.34 Coupling point for seat, driver side -TS18-	1523-1524
1.34.1 Connector -T6u-	1523
1.34.2 Connector -T6t-	1524
1.35 Coupling point for seat, passenger side -TS19-	1525
1.35.1 Connector -T6dg-	1525
1.35.2 Connector -T6df-	1525
1.36 Coupling point for sun visor in special vehicle -TS87-	1526
1.36.1 Connector -T2ty-	1526
1.37 Coupling point for all-wheel drive -TSAA-	1527-1529
1.37.1 Connector -T6eb-	1527
1.37.2 Connector -T6d-	1528
1.37.3 Connector -T3er-	1529
1.37.4 Connector -T3n-	1529
1.38 Coupling point for front passenger seat backrest -TSB-	1530-1531
1.38.1 Connector -T4af-	1530
1.38.2 Connector -T4fq-	1531
1.39 Coupling point for sliding sunroof -TSD-	1532
1.39.1 Connector -T6x-	1532
1.39.2 Connector -T6cr-	1532
1.40 Coupling point for driver seat backrest -TSF-	1533-1534
1.40.1 Connector -T4ag-	1533
1.40.2 Connector -T4ah-	1534
1.41 Coupling point for special vehicles -TSF1-	1535
1.41.1 Connector -T6dp-	1535
1.41.2 Connector -T6dq-	1535
1.42 Coupling point 1 for rear bumper -TSFH1-	1536-1537
1.42.1 Connector -T4ek-	1536
1.42.2 Connector -T4el-	1537
1.43 Coupling point on rear right bumper -TSFHR-	1538
1.43.1 Connector -T10av-	1538
1.43.2 Connector -T10bh-	1538
1.44 Coupling point on front left bumper -TSFVL-	1539-1540
1.44.1 Connector -T14n-	1539
1.44.2 Connector -T14h-	1540

1.45 Coupling point for interface control unit in special vehicle -TSSGSF-	1541
1.45.1 Connector -T2tt-	1541
1.46 Coupling point for special signals siren -TSSS-	1541
1.46.1 Connector -T4jy-	1542
1.47 Coupling point for front left seat -TSVL-	1542-1545
1.47.1 Connector -T3af-	1542
1.47.2 Connector -T3w-	1543
1.47.3 Connector -T17aa-	1544
1.47.4 Connector -T17ab-	1544
1.47.5 Connector -T3u-	1545
1.47.6 Connector -T3do-	1546
1.48 Coupling point for front right seat -TSVR-	1546-1550
1.48.1 Connector -T3s-	1547
1.48.2 Connector -T3ae-	1547
1.48.3 Connector -T17z-	1548
1.48.4 Connector -T17ac-	1549
1.48.5 Connector -T3ab-	1549
1.48.6 Connector -T3y-	1550
1.49 Coupling point for rear left door -TTHL-	1551
1.49.1 Connector -T19a-	1551
1.49.2 Connector -T19b-	1551
1.50 Coupling point for rear right door -TTHR-	1552-1553
1.50.1 Connector -T19c-	1552
1.50.2 Connector -T19d-	1553
1.51 Coupling point for front left door -TTVL-	1554
1.51.1 Connector -T27a-	1554
1.51.2 Connector -T27b-	1554
1.52 Coupling point for front right door -TTVR-	1555-1556
1.52.1 Connector -T27c-	1555
1.52.2 Connector -T27d-	1556
1.53 Coupling point for accident data recorder -TUDS-	1557
1.53.1 Connector -T8bl-	1557
1.54 12 V socket -U5-	1557
1.54.1 Connector -T3ct-	1558
1.55 Trailer socket -U10-	1558
1.55.1 Connector -T13a-	1558
1.56 DC/AC converter with socket, 12 V - 230 V -U13-	1559
1.56.1 Connector -T3cr-	1559
1.57 12 V socket 3 -U19-	1560
1.57.1 Connector -T3cs-	1560
1.58 Charging station for torch -U23-	1561
1.58.1 Connector -T4ju-	1561
1.59 Charging station for hand-held 2-way radio -U24-	1562
1.59.1 Connector -T4jy-	1562
1.60 Charging station 2 for hand-held 2-way radio -U28-	1563
1.60.1 Connector -T4jw-	1563
1.61 Diagnostic connection -U31-	1564
1.61.1 Connector -T16c-	1564
1.62 USB charging socket 1 -U37-	1565
1.62.1 Connector -T4dg-	1565
1.63 USB connection 1 -U41-	1566-1567
1.63.1 Connector -T4dh-	1566-1567
1.63.2 Connector -T5ai-	1568
1.64 Diagnostic connection 2 -U64-	1568
1.64.1 Connector -T18f-	1568
1.65 Charging station 3 -U74-	1569
1.65.1 Connector -T4jx-	1569
1.66 12 V socket for special vehicles -U83-	1570
1.66.1 Connector -T3eo-	1570
1.67 12 V socket 2 for special vehicles -U84-	1571
1.67.1 Connector -T3ep-	1571
1.68 12 V socket 3 for special vehicles -U85-	1572
1.68.1 Connector -T3en-	1572
1.69 12 V socket 4 for special vehicles -U86-	1573
1.69.1 Connector -T1bfd-	1573
1.70 Socket for blue flashing light -U87-	1574

1.70.1 Connector -T2ua-	1574
1.71 Socket 2 for blue flashing light -U88-	1575
1.71.1 Connector -T2ub-	1575
1.72 Socket 3 for blue flashing light -U89-	1576
1.72.1 Connector -T2tz-	1576
1.73 Socket 4 for blue flashing light -U90-	1577
1.73.1 Connector -T2uc-	1577
1.74 12 V socket 5 for special vehicles -U115-	1578-1579
1.74.1 Connector -T3eq-	1578-1579
841 - -Connector views: parts with prefix V - 3	1580-1632
1. Connector views: parts with prefix V	1580-1632
1.1 Sliding sunroof motor -V1-	1581
1.1.1 Connector -T8bf-	1581
1.2 Rear window wiper motor -V12-	1582
1.2.1 Connector -T4dk-	1582
1.3 Driver seat longitudinal adjustment motor -V28-	1583-1584
1.3.1 Connector -T5u-	1583
1.3.2 Connector -T5v-	1584
1.4 Driver seat backrest adjustment motor -V45-	1585
1.4.1 Connector -T5w-	1585
1.4.2 Connector -T5bi-	1585
1.5 Coolant circulation pump -V50-	1586
1.5.1 Connector -T3ec-	1586
1.6 Metering pump -V54-	1587-1588
1.6.1 Connector -T2ht-	1587
1.6.2 Connector -T2hu-	1588
1.7 Windscreen and rear window washer pump -V59-	1589
1.7.1 Connector -T2hs-	1589
1.8 Air recirculation flap control motor -V113-	1589
1.8.1 Connector -T6bw-	1590
1.9 Driver side window regulator motor -V147-	1590
1.9.1 Connector -T3cx-	1590
1.10 Front passenger side window regulator motor -V148-	1591
1.10.1 Connector -T3cy-	1591
1.11 Charge air cooling pump -V188-	1592-1593
1.11.1 Connector -T3da-	1592
1.11.2 Connector -T3cz-	1593
1.12 Driver seat rake adjustment motor -V243-	1594
1.12.1 Connector -T5x-	1594
1.12.2 Connector -T5y-	1594
1.13 Driver seat height adjustment motor -V245-	1595-1596
1.13.1 Connector -T5z-	1595
1.13.2 Connector -T5aa-	1596
1.14 Sunroof roller blind motor -V260-	1597
1.14.1 Connector -T8bg-	1597
1.15 Left parking brake motor -V282-	1597
1.15.1 Connector -T2hp-	1598
1.16 Right parking brake motor -V283-	1598
1.16.1 Connector -T2hq-	1598
1.17 Driver seat backrest fan -V388-	1599
1.17.1 Connector -T6cc-	1599
1.18 Front passenger seat backrest fan -V389-	1600
1.18.1 Connector -T6di-	1600
1.19 Driver seat cushion fan -V390-	1601
1.19.1 Connector -T6cb-	1601
1.20 Front passenger seat cushion fan -V391-	1602
1.20.1 Connector -T6cd-	1602
1.21 Motor 1 for rear lid -V444-	1603
1.21.1 Connector -T10bu-	1603
1.22 Charge pressure positioner -V465-	1604
1.22.1 Connector -T6bp-	1604
1.23 Rear driver side window regulator motor -V471-	1605
1.23.1 Connector -T7a-	1605
1.24 Rear passenger side window regulator motor -V472-	1606
1.24.1 Connector -T7b-	1606
1.25 Auxiliary hydraulic pump 1 for gearbox oil -V475-	1607

1.25.1 Connector -T4dl-	1607
1.26 Auxiliary pump for heating -V488-	1608
1.26.1 Connector -T3di-	1608
1.27 Parking lock actuator -V682-	1609
1.27.1 Connector -T8t-	1609
1.28 Lumbar support for driver seat -VX2-	1610-1612
1.28.1 Connector -T4dm-	1610
1.28.2 Connector -T4eb-	1611
1.28.3 Connector -T4jk-	1612
1.28.4 Connector -T4iv-	1612
1.29 Driver side exterior mirror -VX4-	1613-1614
1.29.1 Connector -T3dq-	1613
1.29.2 Connector -T3df-	1614
1.30 Passenger side exterior mirror -VX5-	1615
1.30.1 Connector -T3du-	1615
1.30.2 Connector -T3dg-	1615
1.31 Trailer towing coupling -VX15-	1616
1.31.1 Connector -T8an-	1616
1.32 Power latching for rear lid -VX16-	1617
1.32.1 Connector -T6cg-	1617
1.33 Driver door lock unit -VX21-	1618
1.33.1 Connector -T8ao-	1618
1.34 Front passenger door lock unit -VX22-	1619
1.34.1 Connector -T8bc-	1619
1.35 Rear lid lock unit -VX25-	1620
1.35.1 Connector -T4bc-	1620
1.36 Air distribution flap -VX33-	1621
1.36.1 Connector -T6bz-	1621
1.37 Front left temperature flap -VX34-	1622
1.37.1 Connector -T6bx-	1622
1.38 Front right temperature flap -VX35-	1623
1.38.1 Connector -T6by-	1623
1.39 Defroster flap -VX47-	1624
1.39.1 Connector -T6bu-	1624
1.40 Radiator fan -VX57-	1625
1.40.1 Connector -T4do-	1625
1.41 Air conditioner compressor -VX81-	1626-1627
1.41.1 Connector -T2ep-	1626
1.41.2 Connector -T2eq-	1627
1.41.3 Connector -T2in-	1628
1.42 Rear door lock unit, driver side -VX83-	1628
1.42.1 Connector -T8ap-	1628
1.43 Rear door lock unit, front passenger side -VX84-	1629
1.43.1 Connector -T8aq-	1629
1.44 Rear temperature flap -VX95-	1630
1.44.1 Connector -T6bv-	1630
1.45 Fresh air and air recirculation flap -VX96-	1631-1632
1.45.1 Connector -T6ca-	1631-1632
842 - -Connector views: parts with prefix W to Z - 3	1633-1662
1. Connector views: parts with prefix W to Z	1633-1662
1.1 Luggage compartment light -W3-	1634
1.1.1 Connector -T2hy-	1634
1.2 Glove compartment light -W6-	1634
1.2.1 Connector -T2hz-	1634
1.3 Left footwell light -W9-	1635
1.3.1 Connector -T4bu-	1635
1.4 Right footwell light -W10-	1636
1.4.1 Connector -T4bv-	1636
1.5 Front passenger side illuminated vanity mirror -W14-	1637
1.5.1 Connector -T2hw-	1637
1.6 Driver side illuminated vanity mirror -W20-	1638
1.6.1 Connector -T2hx-	1638
1.7 Rear left footwell light -W45-	1639
1.7.1 Connector -T4dp-	1639
1.8 Rear right footwell light -W46-	1640
1.8.1 Connector -T4da-	1640



1.9 Rear interior light -WX2-	1641
1.9.1 Connector -T7c-	1641
1.10 Front roof module -WX3-	1642-1643
1.10.1 Connector -T26d-	1642
1.10.2 Connector -T4jl-	1643
1.10.3 Connector -T5bj-	1644
1.11 Rear interior light 2 -WX4-	1644
1.11.1 Connector -T5ab-	1644
1.12 Rear interior light 4 -WX6-	1645
1.12.1 Connector -T5ac-	1645
1.13 Left number plate light -X4-	1646
1.13.1 Connector -T2ib-	1646
1.14 Right number plate light -X5-	1647
1.14.1 Connector -T2id-	1647
1.15 Selector lever position display -Y5-	1647
1.15.1 Connector -T10bv-	1647
1.16 Automatic anti-dazzle interior mirror -Y7-	1648
1.16.1 Connector -T8ar-	1648
1.17 Heated backrest for rear left seat -Z11-	1649
1.17.1 Connector -T2ak-	1649
1.18 Heated backrest for rear right seat -Z13-	1650
1.18.1 Connector -T2am-	1650
1.19 Left washer jet heater element -Z20-	1651
1.19.1 Connector -T2if-	1651
1.20 Right washer jet heater element -Z21-	1652
1.20.1 Connector -T2ig-	1652
1.21 Auxiliary air heater element -Z35-	1653
1.21.1 Connector -T3dc-	1653
1.22 Heater for reducing agent line (heater circuit 2) -Z104-	1654
1.22.1 Connector -T2ie-	1654
1.23 Windscreen heater for front sensors -Z113-	1655
1.23.1 Connector -T2ih-	1655
1.24 Heated backrest for front left seat -Z116-	1656
1.24.1 Connector -T2hv-	1656
1.25 Heated backrest for front right seat -Z117-	1657
1.25.1 Connector -T2st-	1657
1.26 Rear left seat heating -ZX10-	1658
1.26.1 Connector -T4dt-	1658
1.27 Front left seat heating -ZX11-	1659
1.27.1 Connector -T4dr-	1659
1.28 Rear right seat heating -ZX12-	1660
1.28.1 Connector -T4du-	1660
1.29 Front right seat heating -ZX13-	1661-1662
1.29.1 Connector -T4ds-	1661-1662