

Contents

00 - Technical data	1
1 Electrical components	1
1.1 Starting diagnosis	1
40 - Front suspension	3
1 Safety information and repair notes	3
1.1 Safety information	3
1.2 Repair notes	3
2 Front axle	4
2.1 Overview of fitting locations - front axle	4
3 Subframe	5
3.1 Assembly overview – subframe	5
3.2 Removing and installing subframe with steering rack	6
3.3 Repairing thread in longitudinal member	12
3.4 Fixing subframe in position	12
3.5 Taking up weight of subframe using scissor-type assembly platform	16
3.6 Preparing scissor-type assembly platform	17
3.7 Supporting components in vehicle front end	19
4 Suspension strut, upper suspension link	25
4.1 Exploded view - suspension strut	25
4.2 Removing and installing suspension strut	27
4.3 Removing and installing spring	33
5 Lower suspension link, swivel joint	38
5.1 Assembly overview – suspension link, swivel joint	38
5.2 Removing and installing suspension link	40
5.3 Removing and installing swivel joint	41
5.4 Removing and installing stone deflector for suspension link	43
5.5 Renewing suspension link mounting, rear	44
5.6 Renewing front suspension link mounting	47
6 Wheel bearing	50
6.1 Assembly overview ? wheel bearing assembly	50
6.2 Removing and installing wheel bearing housing	50
6.3 Removing and installing wheel bearing unit	55
6.4 Loosening and tightening threaded connections of wheel bearings	57
7 Anti-roll bar	60
7.1 Exploded view - anti-roll bar	60
7.2 Removing and installing anti-roll bar	60
7.3 Removing and installing coupling rod	62
42 - Rear suspension	64
1 Safety information and repair notes	64
1.1 Safety information	64
1.2 Repair notes	64
2 Rear axle	65
2.1 Overview of fitting locations – rear axle	65
2.2 Removing and installing rear axle	67
2.3 Lowering rear axle	72
2.4 Securing vehicle to support arms of lifting platform	76
3 Subframe	79
3.1 Fixing subframe in position	79
3.2 Assembly overview – subframe mountings	81
3.3 Assembly overview – subframe	82



3.4	Preparing scissor-type assembly platform	83
3.5	Taking up weight of subframe using scissor-type assembly platform	86
3.6	Renewing gearbox mounting	87
3.7	Renewing motor mountings	94
3.8	Renewing front subframe mountings	103
3.9	Renewing rear subframe mountings	110
4	Anti-roll bar	119
4.1	Assembly overview – anti-roll bar	119
4.2	Removing and installing anti-roll bar	121
4.3	Removing and installing coupling rod	122
5	Suspension link, track rod	125
5.1	Assembly overview ? suspension link	125
5.2	Removing and installing track rod	126
5.3	Exploded view - track rod	128
5.4	Removing and installing stone deflector for spring control arm	129
5.5	Exploded view - spring control arm	130
5.6	Removing and installing spring control arm	131
5.7	Removing and installing lower suspension link	134
5.8	Removing and installing upper rear suspension link	136
5.9	Removing and installing upper front suspension link	138
6	Suspension strut, shock absorber, spring	140
6.1	Removing and installing shock absorber	140
6.2	Renewing shock absorber	142
6.3	Assembly overview – spring	145
6.4	Exploded view - shock absorber	146
6.5	Removing and installing spring	147
7	Wheel bearing assembly, trailing arm	152
7.1	Assembly overview – wheel bearing assembly	152
7.2	Removing and installing wheel bearing housing	152
7.3	Removing and installing wheel bearing unit	155
7.4	Raising wheel bearing assembly to unladen position	157
8	Drive shaft	160
8.1	Assembly overview – drive shaft	160
8.2	Removing and installing drive shaft	161
8.3	Loosening and tightening threaded connections of drive shaft	168
8.4	Dismantling and assembling drive shaft	170
8.5	Tightening clamp for boot	176
43	Self-levelling suspension	178
1	Safety information and repair notes	178
1.1	Safety information	178
1.2	Repair notes	178
2	Electronically controlled damping	179
2.1	Overview of fitting locations - damping control	179
2.2	Assembly overview – electronically controlled damping control unit	181
2.3	Removing and installing electronically controlled damping control unit [J250]	181
2.4	Removing and installing front body acceleration senders G341/G342	182
2.5	Removing and installing rear body acceleration sender G343	183
2.6	Exploded view - damping control	184
3	Vehicle level sender	186
3.1	Exploded view - front vehicle level senders	186
3.2	Assembly overview – rear vehicle level senders	186
3.3	Removing and installing front vehicle level senders G78/G289	187
3.4	Removing and installing rear vehicle level senders G76/G77	189



44 - Wheels, tyres, vehicle geometry	191
1 Safety information and repair notes	191
1.1 Safety information	191
1.2 Repair notes	191
2 Wheel alignment	192
2.1 Notes on wheel alignment	192
2.2 Test requirements	192
2.3 Specifications for wheel alignment	192
2.4 Setting vehicle to initial position for wheel alignment	193
2.5 When does wheel alignment have to be checked?	194
2.6 Adjusting camber at front wheels	195
2.7 Adjusting camber at rear wheels	196
2.8 Adjusting toe setting at rear wheels	197
2.9 Adjusting toe setting at front wheels	198
2.10 Checking full steering lock	198
2.11 Preparations for measurement	199
3 Wheels, tyres	200
3.1 Removing wheel	200
3.2 Installing wheel	200
48 - Steering	202
1 Safety information and repair notes	202
1.1 Safety information	202
1.2 Repair notes	202
2 Steering wheel	203
2.1 Exploded view - steering wheel	203
2.2 Removing and installing steering wheel	203
3 Steering column	205
3.1 Removing and installing steering column	205
3.2 Removing and installing intermediate steering shaft	208
3.3 Removing and installing control unit for electronic steering column lock [J764]	210
3.4 Assembly overview – steering column	214
4 Steering rack	219
4.1 Assembly overview ? steering rack	219
4.2 Removing and installing boot	220
4.3 Removing and installing track rod	222
4.4 Removing and installing track rod ball joint	224
4.5 Exploded view - track rods	226
4.6 Servicing steering rack	227
4.7 Removing and installing steering rack	228